



PLAN

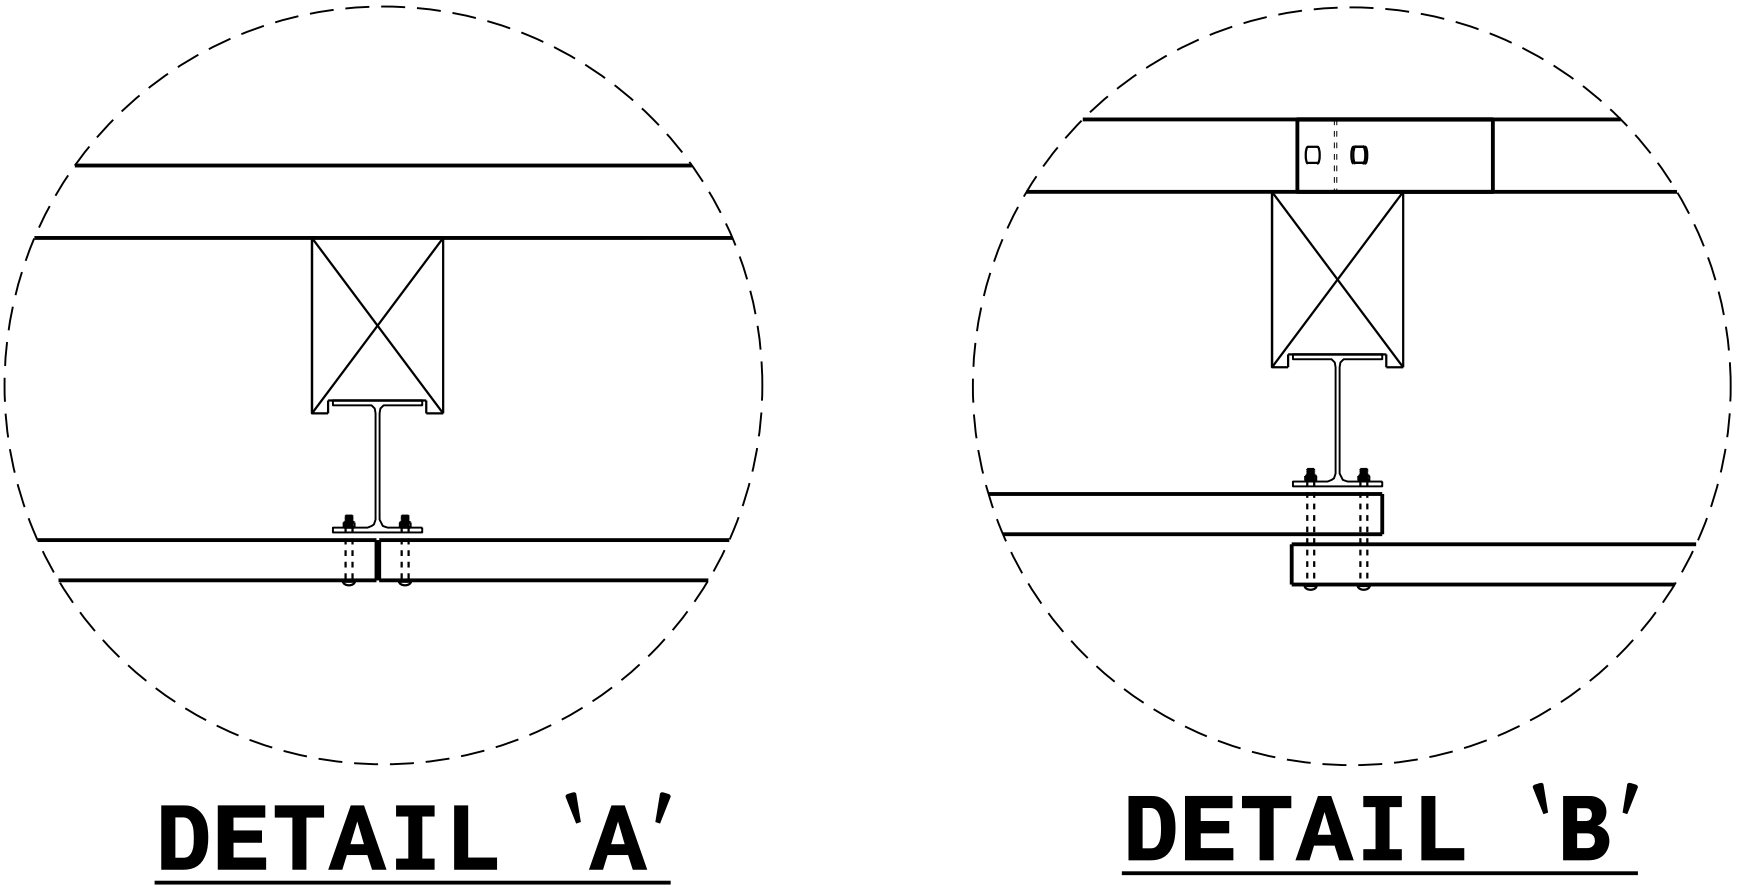

USE BOLTS AND NUTS FROM TYPE III ANCHOR UNIT TO FASTEN 2 X 6 WOOD RAILS TO THE WOOD POSTS - BOLTS MAY NEED TO BE LENGTHENED TO ACCOMMODATE FOR THE 2 X 6 WOOD RAILS.

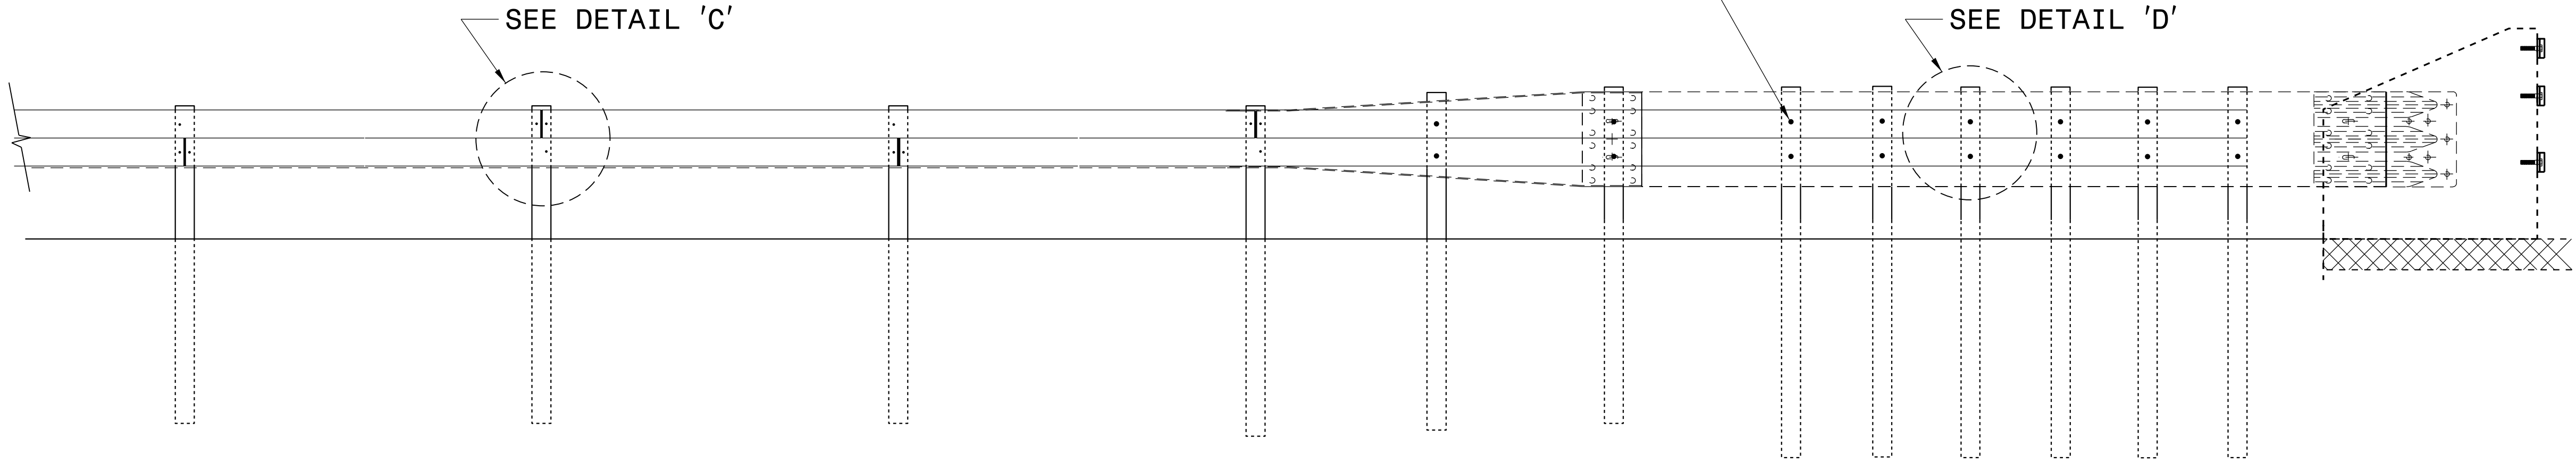

ELEVATION

NOTES:

1. USE #2 SYP TREATED 2 X 6 FOR WOOD RAIL.
2. USE GUARDRAIL BOLTS TO FASTEN WOOD RAIL TO GUARDRAIL POSTS. SEE ROADWAY STD.NO.862.02.
3. THE MOUNTING HEIGHT OF THE WOOD RAIL TO BE DETERMINED IN THE FIELD.
4. PLACE THE TREATED 2 X 6 WOOD RAIL AS DIRECTED BY THE ENGINEER.
5. DO NOT PLACE WOOD RAIL WITHIN THE PAY LIMITS OF THE GREU.



DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED	
CONTRACT STANDARDS AND DEVELOPMENT UNIT PLANS AND STANDARDS SECTION Office 919-707-6950 FAX 919-250-4119	
DETAIL OF WOOD RUB RAIL	
ORIGINAL BY: STD.862	DATE: 1-25-12
MODIFIED BY:	DATE:
CHECKED BY:	DATE:
FILE SPEC.: jhowerton/Wood Rail on Back of Guardrail	