
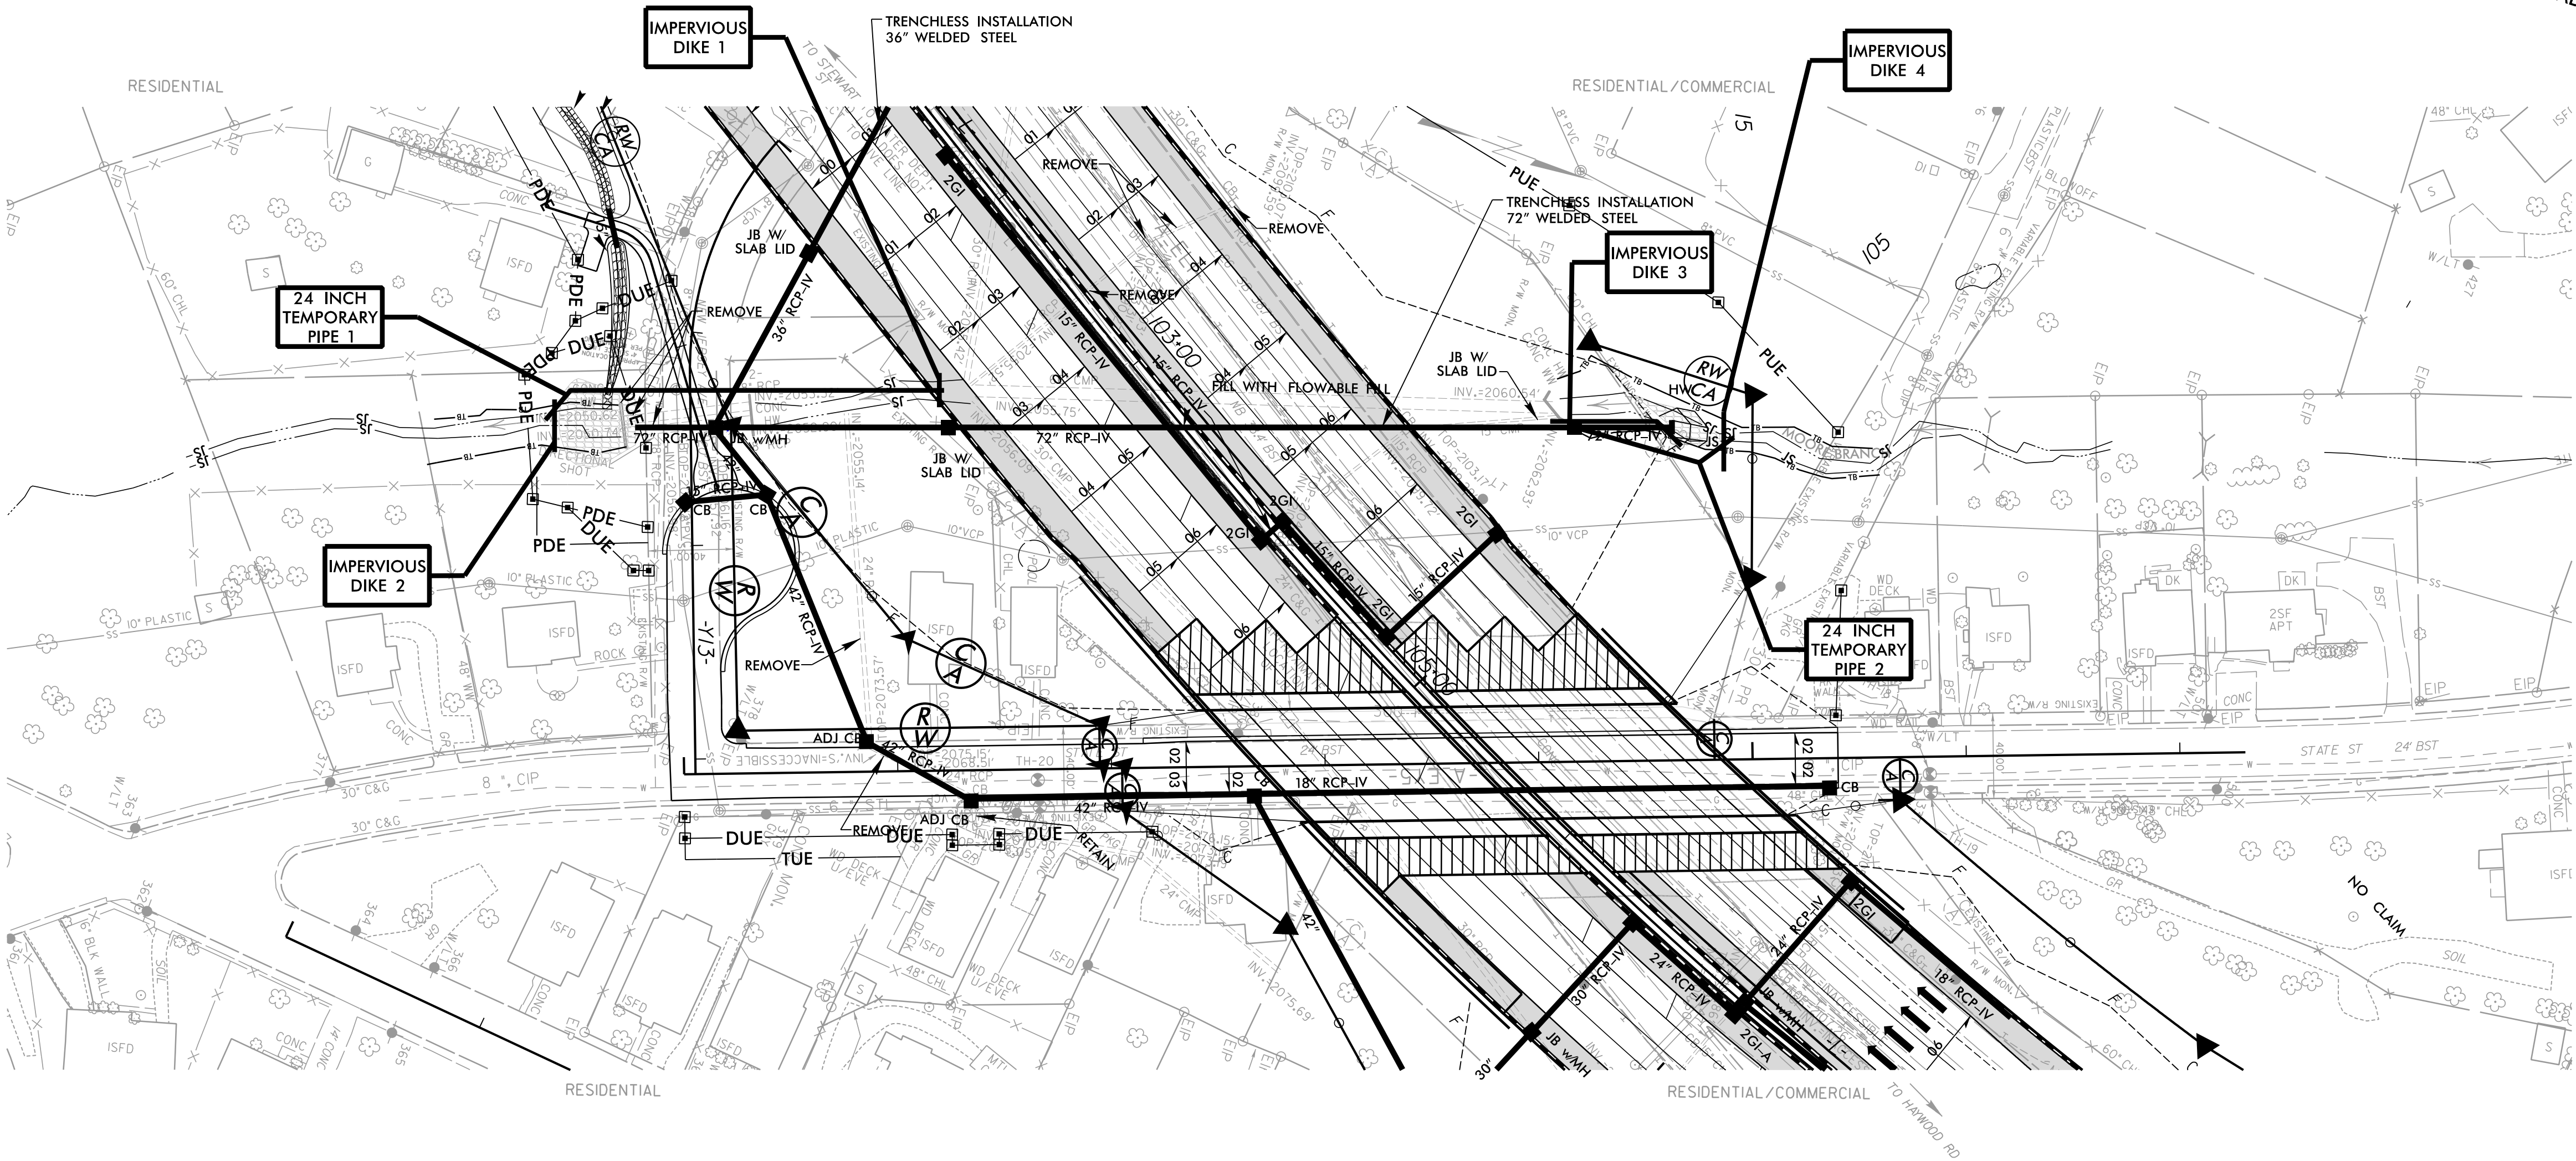


MOORE BRANCH
CULVERT CONSTRUCTION SEQUENCE
-L- STA 103+37.44

1. INSTALL SPECIAL STILLING BASIN(S) AS NEEDED THROUGHOUT CULVERT CONSTRUCTION.
2. INSTALL IMPERVIOUS DIKES 1 AND 2 AND 24" TEMPORARY PIPE 1 AT DOWNSTREAM END OF 72" RCP
3. INSTALL 72" WELDED STEEL PIPE AND 72" RCP WITH JB's.
4. FILL IN SCOUR HOLE WITH CLASS II RIP RAP ON DOWNSTREAM END OF 72" RCP.
5. INSTALL IMPERVIOUS DIKES 3 AND 4, AND 24" TEMPORARY PIPE 2.
6. CONSTRUCT PROPOSED CHANNEL WORK ON UPSTREAM END OF PROPOSED 72" RCP AND INSTALL PROPOSED RIP RAP.
7. REMOVE ALL IMPERVIOUS DIKES, TEMPORARY PIPE, AND SPECIAL STILLING BASINS.

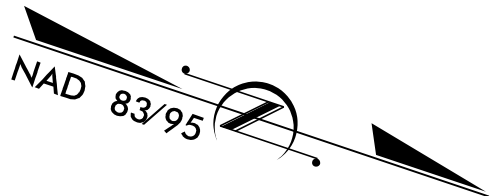

REVISIONS