


### EDI MODEL 2018EClip-NC CONFLICT MONITOR PROGRAMMING DETAIL


(remove jumpers and set switches as shown)

REMOVE DIODE JUMPERS: 1-5, 1-6, 1-9, 1-11, 1-15, 2-5, 2-6, 2-9, 2-11, 2-13, 2-15, 4-8, 4-14, 4-16, 5-9, 5-11, 5-13, 6-9, 6-11, 6-13, 6-15, 8-14, 8-16, 9-11, 9-13, 9-15, 11-13, 11-15, 13-15 and 14-16

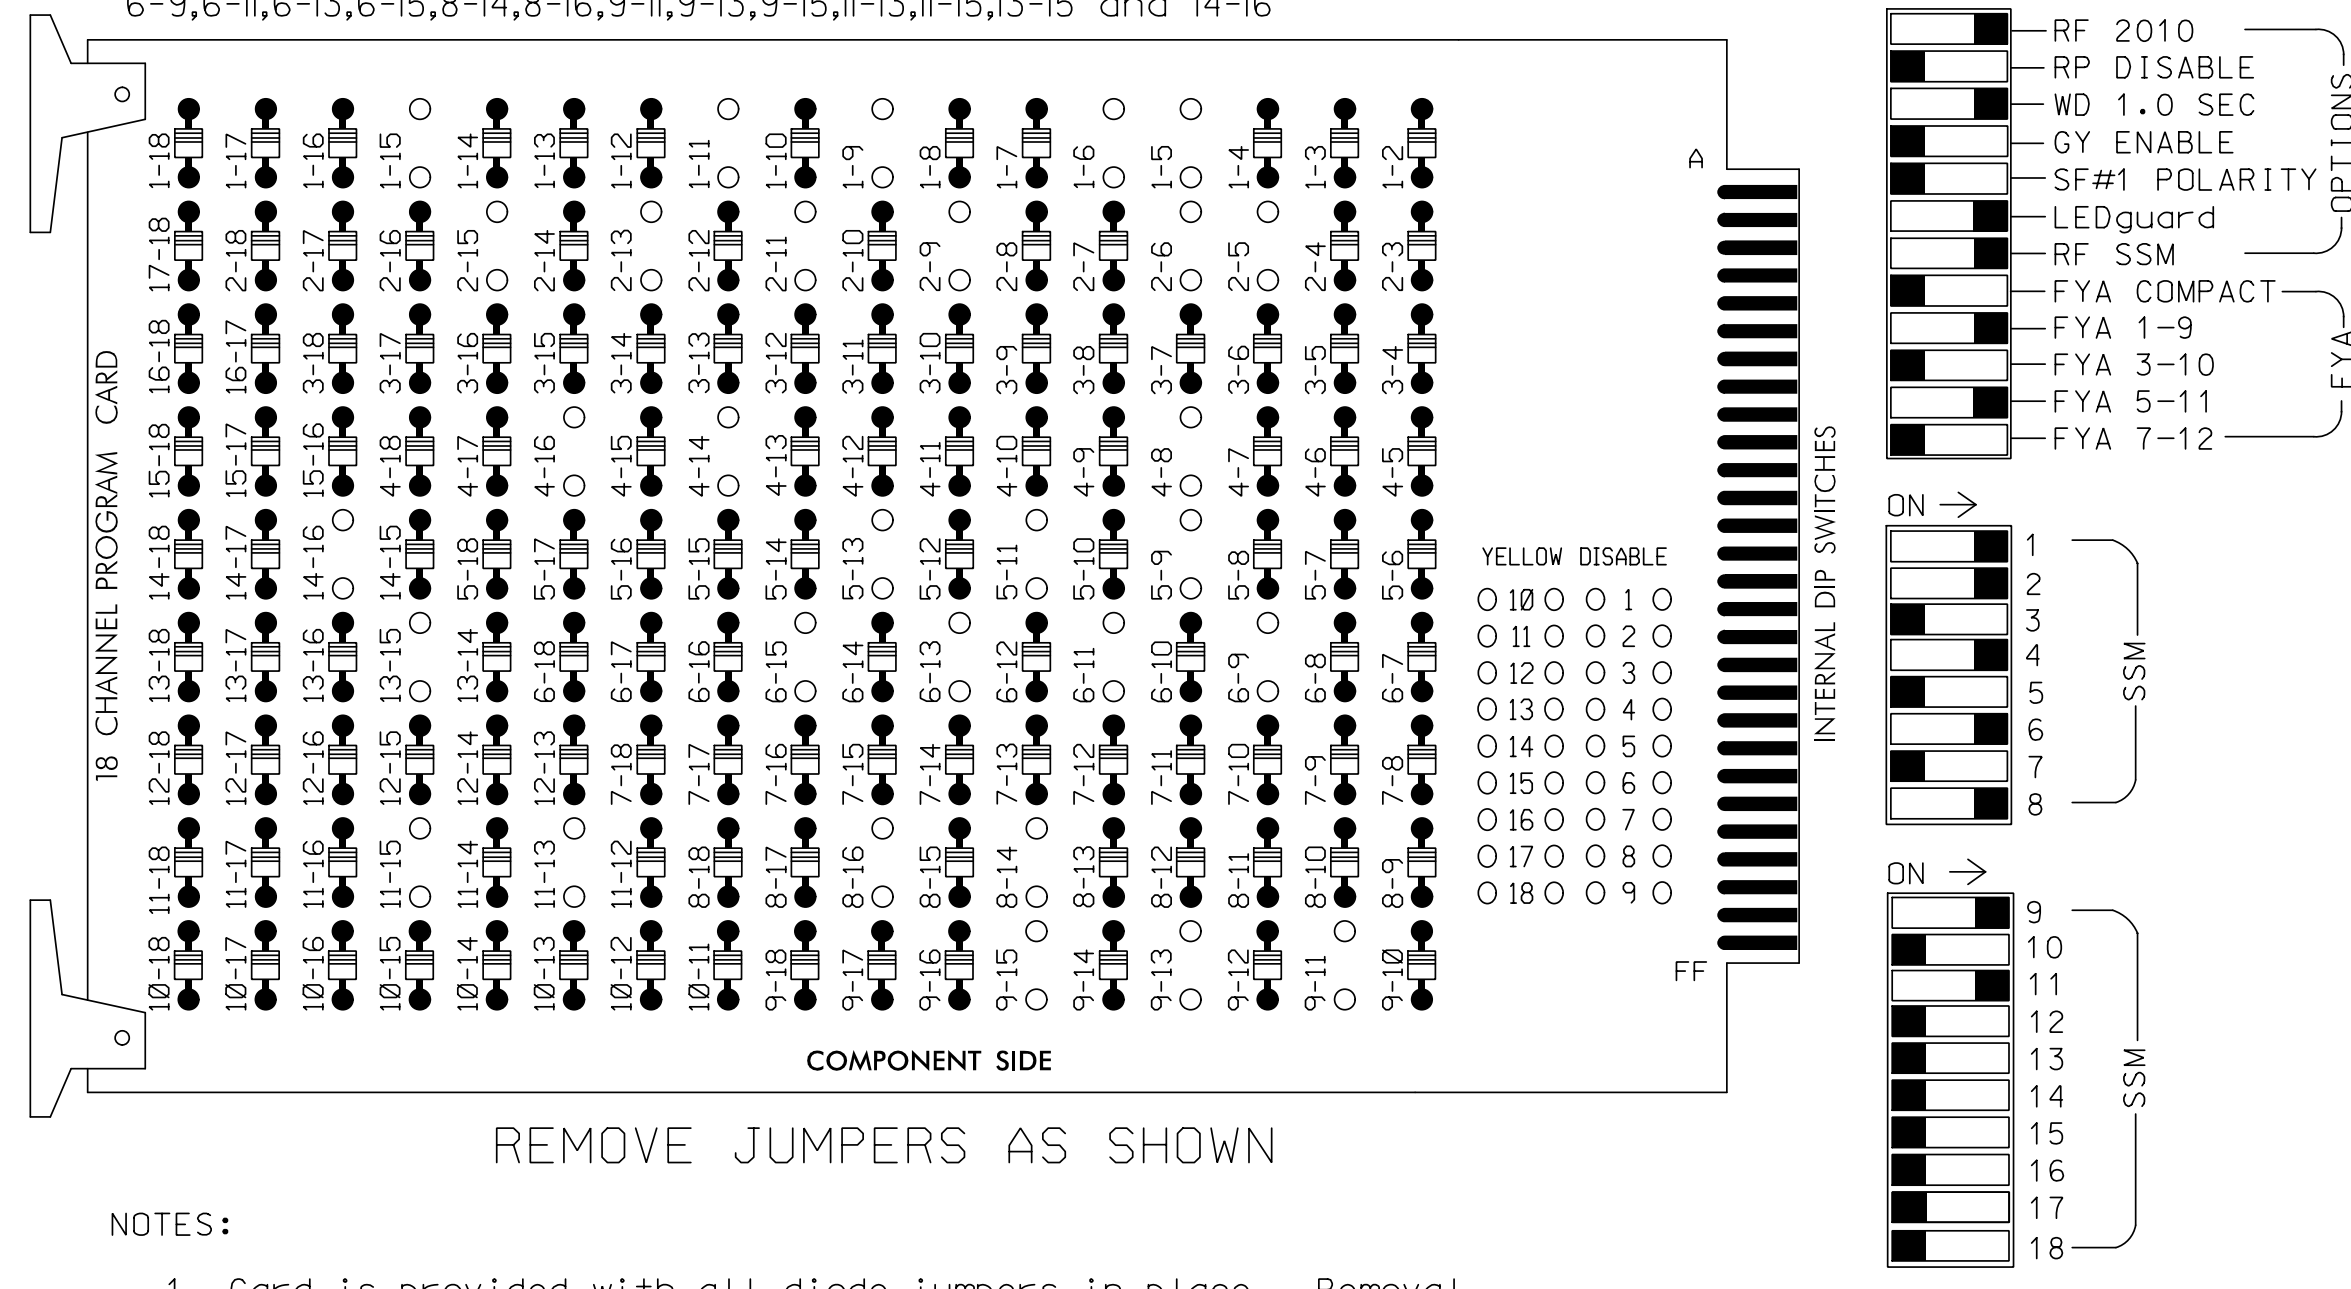

REMOVE JUMPERS AS SHOWN

- NOTES:
- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
  - Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
  - Ensure that Red Enable is active at all times during normal operation.
  - Integrate monitor with Ethernet network in cabinet.

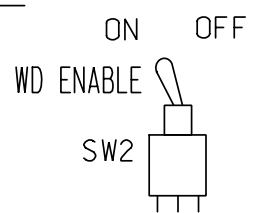

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for volume density operation.
- Program controller to start up in phase 2 Walk and 6 Walk.
- The cabinet and controller are part of the Fayetteville Signal System.

### EQUIPMENT INFORMATION


CONTROLLER.....2070E  
 CABINET.....332 W/AUX  
 SOFTWARE.....ECONOLITE ASC/3-2070  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S3,S5,S6,S7,S8,S9,S11,S12,  
 AUX S1,AUX S4  
 PHASES USED.....1,2,2PED,4,4PED,5,6,6PED,8,8PED  
 OVERLAP "A".....\*  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....\*  
 OVERLAP "D".....NOT USED  
 \* See overlap programming detail on sheet 2

### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	82	21,22	P21, P22	NU	41,42	P41, P42	51	61,62	P61, P62	NU	81,82	P81, P82	11	NU	51	NU	NU
RED	*	128			101				134			107						
YELLOW		129			102		*		135			108						
GREEN		130			103				136			109						
RED ARROW													A121				A114	
YELLOW ARROW		126											A122				A115	
FLASHING YELLOW ARROW													A123				A116	
GREEN ARROW	127	127							133									
Hand icon									113				119					110
Foot icon									115				121					112

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 \* See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

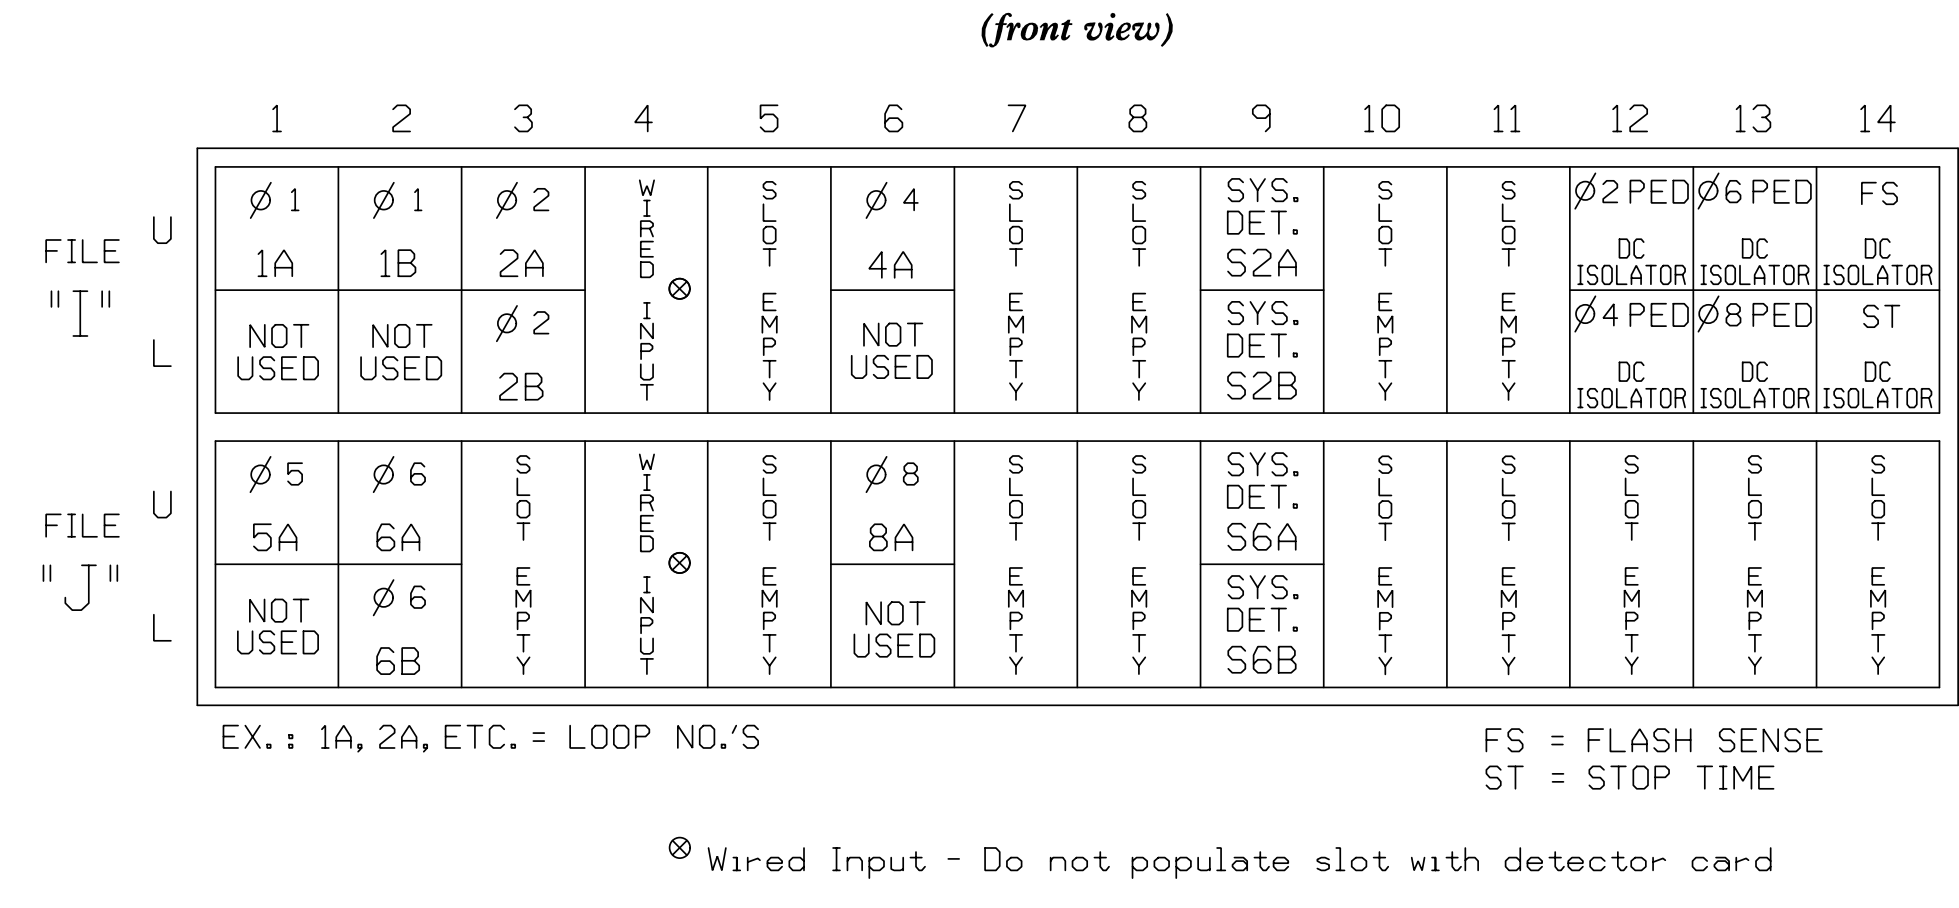


### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND TIME	DELAY TIME	DETECTOR TYPE
1A <sup>1</sup>	TB2-1,2	I1U	56	1	1	YES		15	S
		J4U	48	26	6	YES		3	G
1B	TB2-5,6	I2U	39	2	1	YES		25	S
2A	TB2-9,10	I3U	63	32	2	YES			N
2B	TB2-11,12	I3L	76	42	2	YES			N
4A	TB4-9,10	I6U	41	4	4	YES		15	S
5A <sup>2</sup>	TB3-1,2	J1U	55	5	5	YES		15	S
		I4U	47	22	2	YES		3	G
6A	TB3-5,6	J2U	40	6	6	YES			N
6B	TB3-7,8	J2L	44	16	6	YES			N
8A	TB5-9,10	J6U	42	8	8	YES		3	S
*S2A	TB6-9,10	I9U	60	11	SYS	NO			N
*S2B	TB6-11,12	I9L	62	13	SYS	NO			N
*S6A	TB7-9,10	J9U	59	15	SYS	NO			N
*S6B	TB7-11,12	J9L	61	17	SYS	NO			N
PED PUSH BUTTONS									
P21,P22	TB8-4,6	I12U	67	PED 2	2	PED			
P41,P42	TB8-5,6	I12L	69	PED 4	4	PED			
P61,P62	TB8-7,9	I13U	68	PED 6	6	PED			
P81,P82	TB8-8,9	I13L	70	PED 8	8	PED			

- <sup>1</sup>Add jumper from I1-W to J4-W, on rear of input file.  
<sup>2</sup>Add jumper from J1-W to I4-W, on rear of input file.

\* System detector only. Remove any assigned vehicle phase.


INPUT FILE POSITION LEGEND: J2L

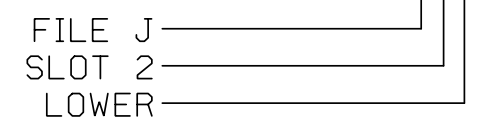

NOTE:  
 INSTALL DC ISOLATORS IN INPUT FILE SLOTS 112 AND 113.

### FYA SIGNAL WIRING DETAIL


(wire signal heads as shown)

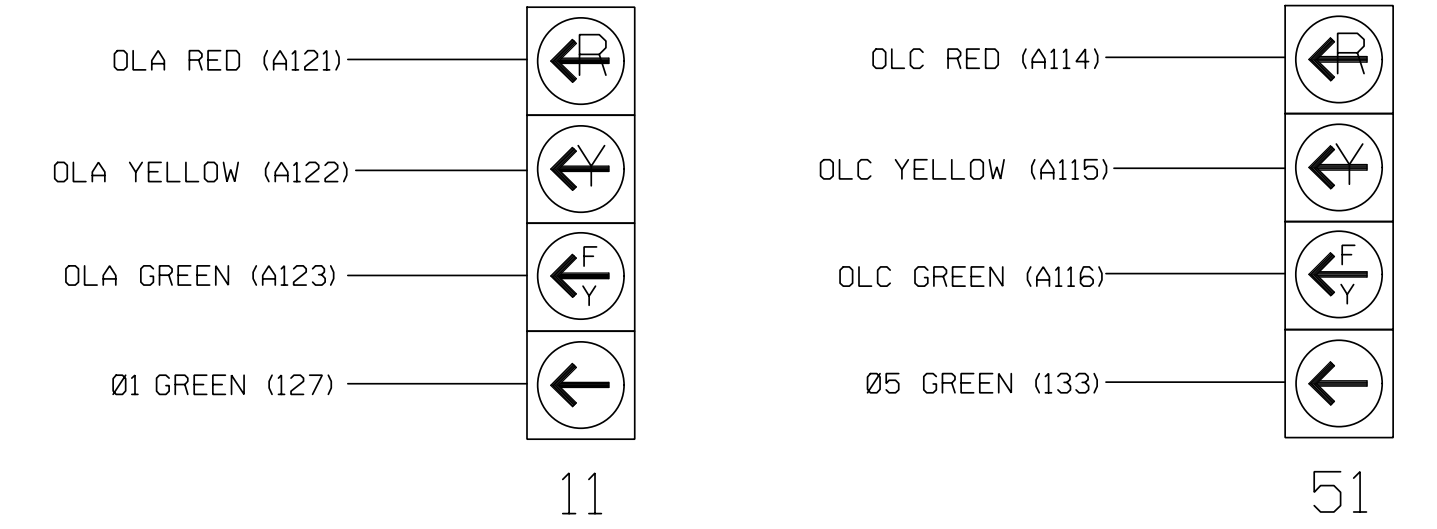

### LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

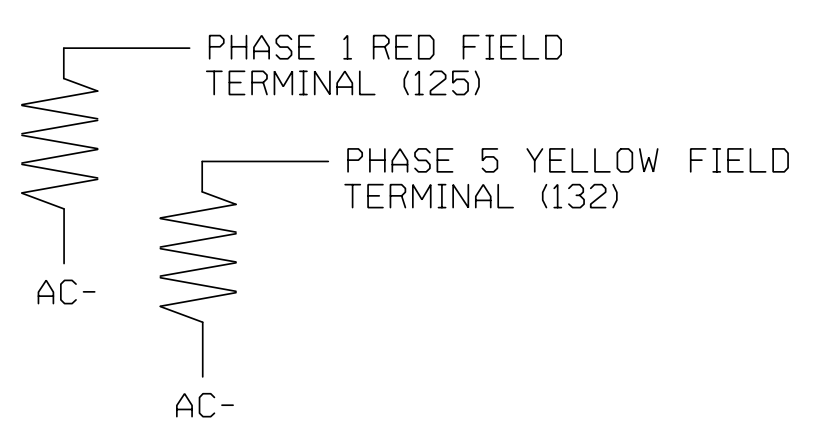

Electrical Detail Sheet 1 of 2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Prepared For:  

 750 N. Greenfield Pkwy, Garner, NC 27529

NC 59 (Hope Mills Rd)  
 at  
 SR 1136 (Wingate Road)/  
 SR 1300 (Butternut Drive)

Division 6 Cumberland County Fayetteville

PLAN DATE: July 2016 REVIEWED BY: SL Phillips

PREPARED BY: SP Pennington REVIEWED BY: KB Baumann

REVISIONS: INIT. DATE

SEAL  
  
 Stacie L. Phillips  
 9/16/2016  
 DATE  
 SIG. INVENTORY NO. 06-0458

PLANS PREPARED IN THE OFFICE OF:  
  
 NC License #F-0102  
 421 Fayetteville Street, Suite 600  
 Raleigh, NC 27601  
 (919) 677-2000

9/16/2016 K:\REAL\_TPOK\SIGNALS\4011036345\_Fayetteville\_Electr\Coils\654 - Signal\_Design\4th\_Submit\Final\Fig1291\_060458-2016el.dgn Susan\_Pennington