


**EDI MODEL 2018EClip-NC CONFLICT MONITOR**

**PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)

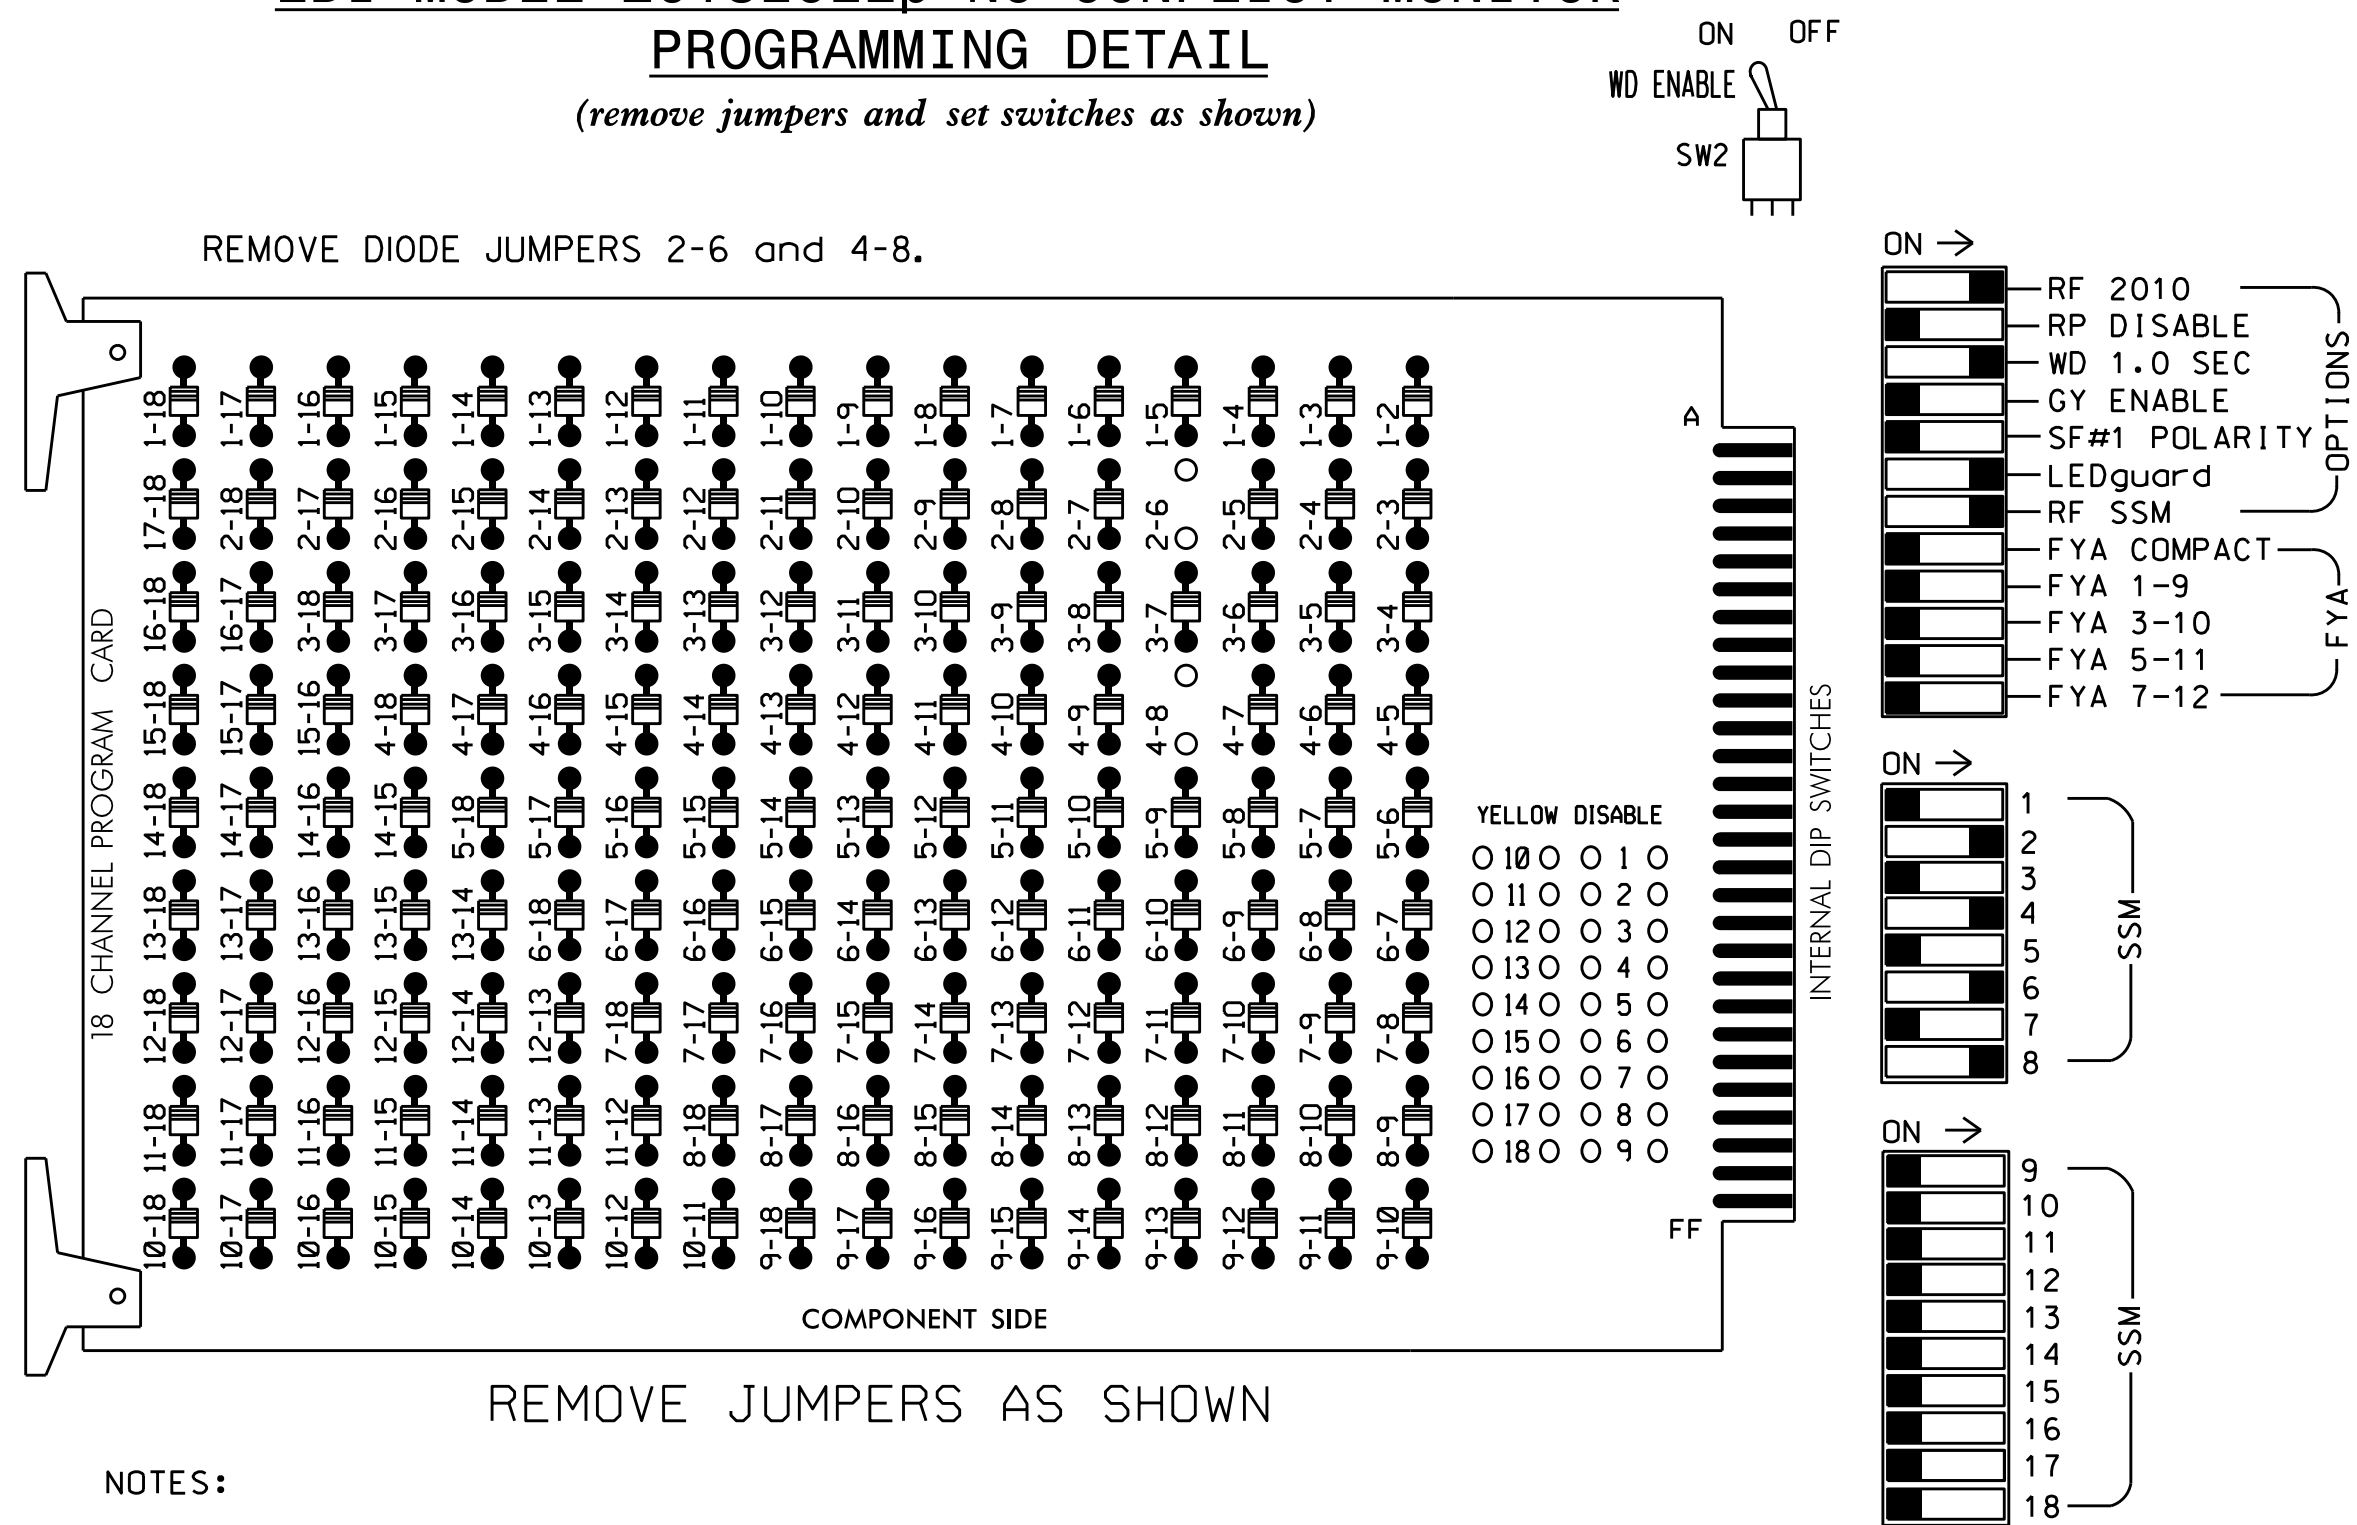

**NOTES:**

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

**NOTES**

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Program phases 4 and 8 for Dual Entry.
3. Enable Simultaneous Gap-Out for all phases.
4. Program controller to start up in phase 2 Green and 6 Green.
5. The cabinet and controller are part of the Fayetteville Signal System.

**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	NU	NU	61,62	NU	NU	81,82	NU
RED		128			101			134			107	
YELLOW		129			102			135			108	
GREEN		130			103			136			109	
RED ARROW												
YELLOW ARROW												
GREEN ARROW												


NU = Not Used

**EQUIPMENT INFORMATION**

CONTROLLER.....2070E  
 CABINET.....332  
 SOFTWARE.....ECONOLITE ASC/3-2070  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...12  
 LOAD SWITCHES USED.....S2,S5,S8,S11  
 PHASES USED.....2,4,6,8  
 OVERLAPS.....NONE

**INPUT FILE POSITION LAYOUT**

(front view)

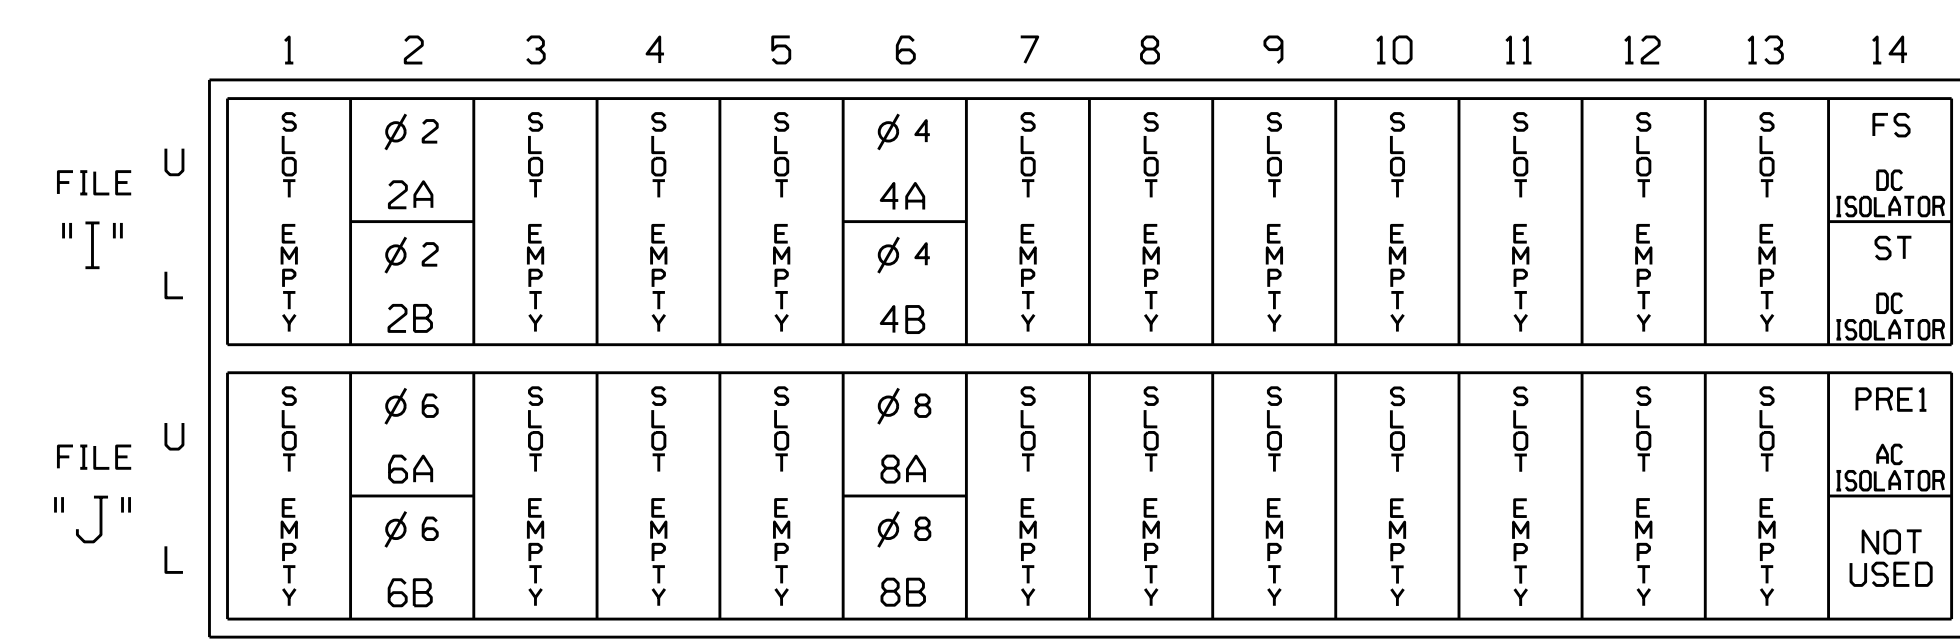


EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE  
 ST = STOP TIME  
 PRE1 = RR PREEMPT

**PREEMPT 1 AC ISOLATOR (MODEL 252)**

**OUTPUT PROGRAMMING DETAIL**

(set DIP switches as shown below)

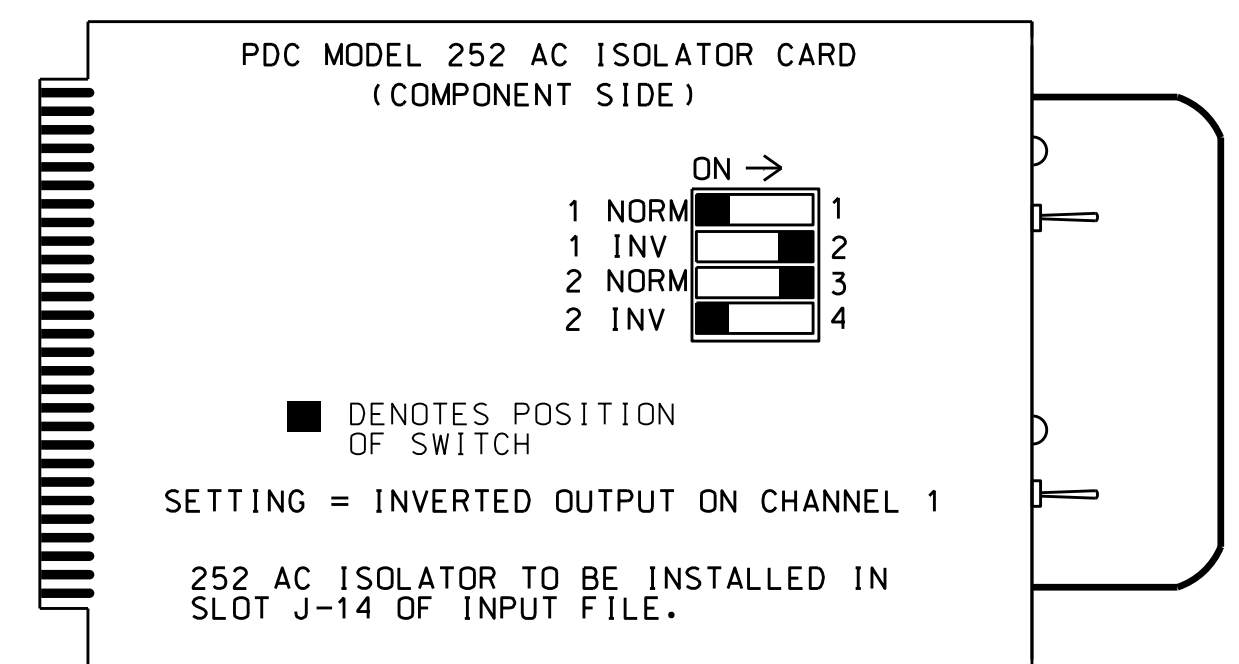


NOTE: IF ANOTHER MANUFACTURER TYPE OF AC ISOLATOR IS USED, OUTPUT PROGRAMMING IS LIKELY NOT TO EQUATE TO THAT SHOWN ABOVE.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 06-0443  
 DESIGNED: May 2016  
 SEALED: 9/22/2016  
 REVISED: N/A

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND TIME	DELAY TIME	DETECTOR TYPE
2A	TB2-5,6	I2U	39	2	2	YES			S
2B	TB2-7,8	I2L	43	12	2	YES			S
4A	TB4-9,10	I6U	41	4	4	YES		3	S
4B	TB4-11,12	I6L	45	14	4	YES		10	S
6A	TB3-5,6	J2U	40	6	6	YES			S
6B	TB3-7,8	J2L	44	16	6	YES			S
8A	TB5-9,10	J6U	42	8	8	YES		3	S
8B	TB5-11,12	J6L	46	18	8	YES		10	S

INPUT FILE POSITION LEGEND: J2L

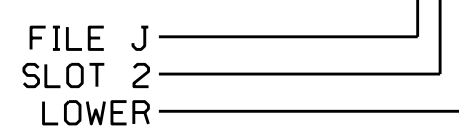

Electrical Detail - Sheet 1 of 2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Electrical and Programming Details for: SR 2299 (Russell Street) at Cool Spring Street

Division 6 Cumberland County Fayetteville

PLAN DATE: September 2016 REVIEWED BY: BAS

PREPARED BY: S. Armstrong REVIEWED BY:

REVISIONS INIT. DATE

750 N. Greenfield Pkwy, Garner, NC 27529

Seal: NORTH CAROLINA PROFESSIONAL ENGINEER KEITH M. MIMS SEAL 036880

Discussed by: Keith M. Mims 9/28/2016

SIG. INVENTORY NO. 06-0443

26-SEP-2016 09:17 S:\IT\SSM\15\_Signal\work\hous\sig\_Mon\armstrong\60443\_sml.elec.xxx.dgn sarmstrong