
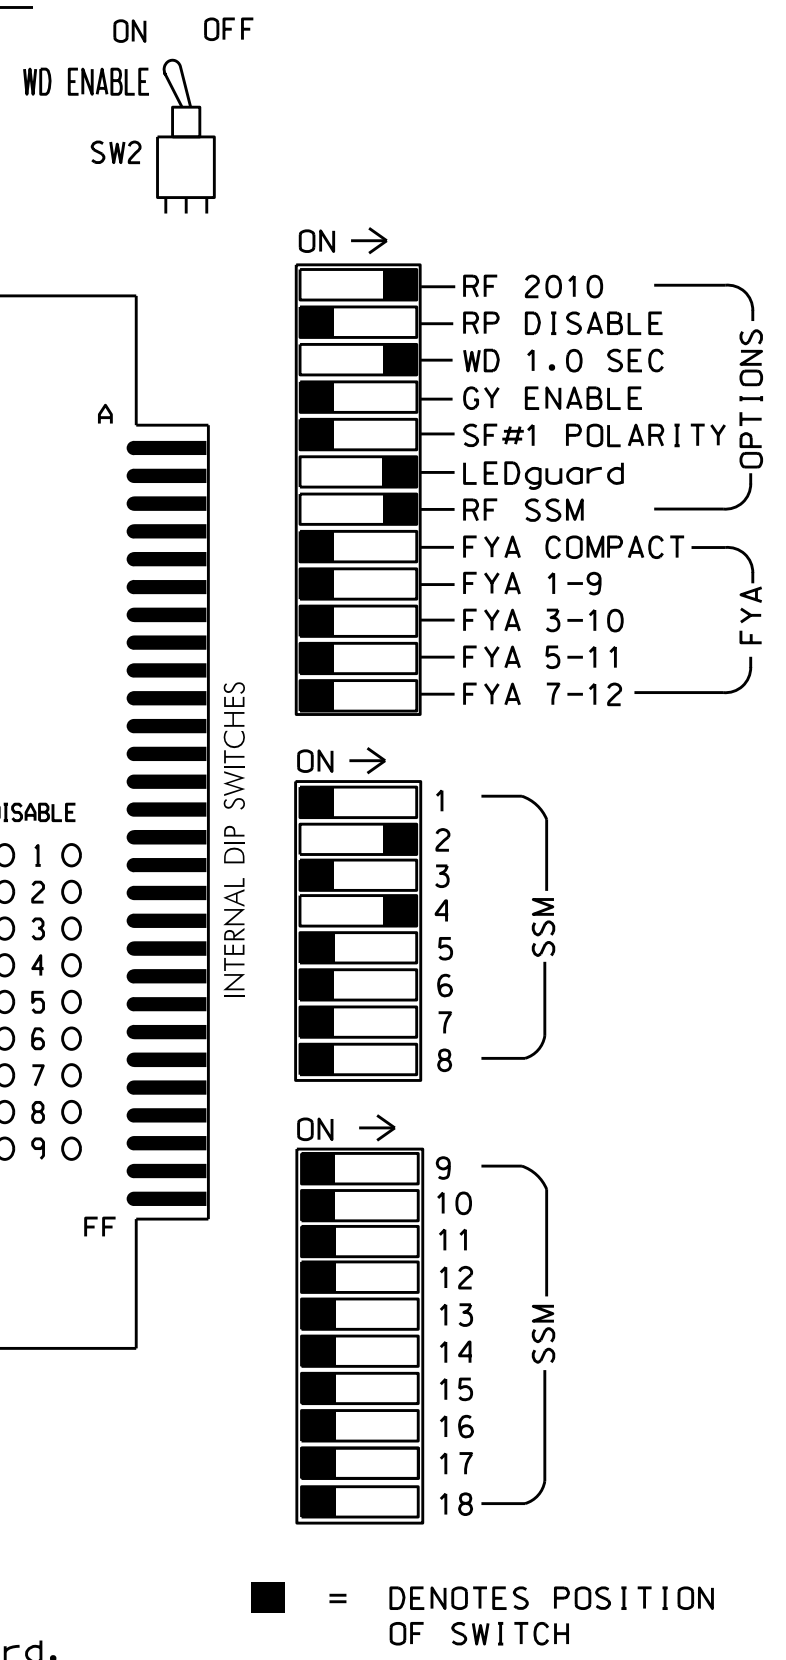


**EDI MODEL 2018ECLIP-NC CONFLICT MONITOR
PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)

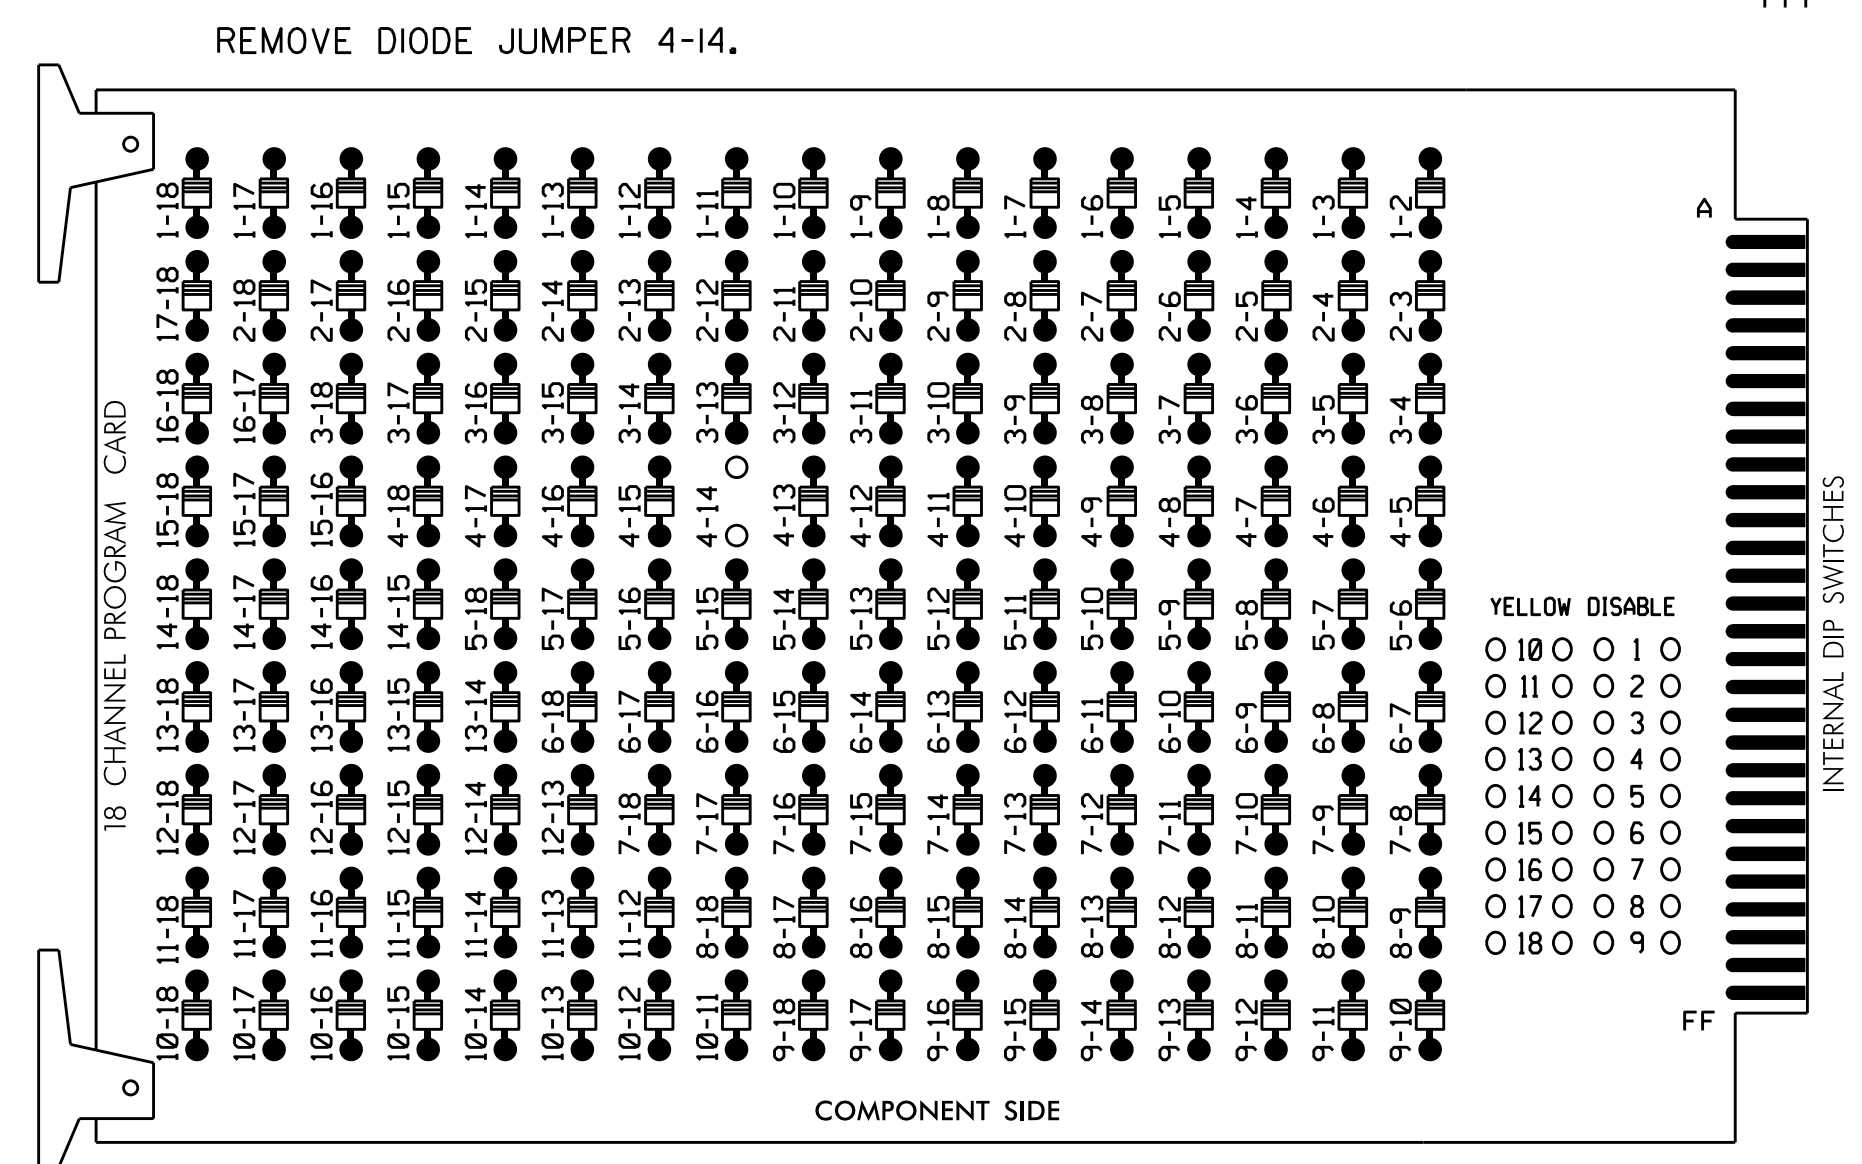

- NOTES:**
- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
 - Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
 - Ensure that Red Enable is active at all times during normal operation.
 - Integrate monitor with Ethernet network in cabinet.

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all phases.
- Program phase 2 for Start Up In Green.
- Program phase 4 for 'STARTUP PED CALL'.
- Program phase 2 for Yellow Flash.
- The cabinet and controller are part of the Asheville System.

EQUIPMENT INFORMATION

CONTROLLER.....2070E
 CABINET.....332 W/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S2,S5,S6
 PHASES USED.....2,4,4 PED
 OVERLAPS.....NONE

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	P41, P42	NU	NU	NU	NU	NU	NU	NU	NU	NU	NU	NU	NU
RED		128			101													
YELLOW		129			102													
GREEN		130			103													
RED ARROW																		
YELLOW ARROW																		
GREEN ARROW																		
Hand icon						104												
Walking person icon						106												

NU = Not Used

COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

INPUT FILE POSITION LAYOUT

(front view)

FILE	U	1	2	3	4	5	6	7	8	9	10	11	12	13	14
"I"	U	S	S	S	S	S	∅ 4	S	S	SYS. DET. S1	S	S	NOT USED	S	FS
		4A	4A	4A	4A	4A	4A	4A	4A	4A	4A	4A	4A	4A	4A
"J"	U	S	S	S	S	S	S	S	S	SYS. DET. S3	S	S	S	S	S
		NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED

EX.: 1A, 2A, ETC. = LOOP NO.'S
 FS = FLASH SENSE
 ST = STOP TIME


INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			
* S1	TB6-9,10	I9U	60	22	11	SYS					
* S2	TB6-11,12	I9L	62	24	13	SYS					
* S3	TB7-9,10	J9U	59	21	15	SYS					
PED PUSH BUTTONS											
P41,P42	TB8-5,6	I12L	69	31	PED 4	4 PED					

NOTE:
 INSTALL DC ISOLATOR IN INPUT FILE SLOT 112.

* System detector only. Remove the vehicle phase assigned to this detector in the default programming.

INPUT FILE POSITION LEGEND: J2L

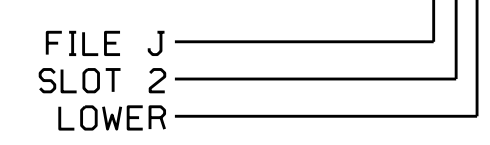

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 13-0032
 DESIGNED: November 2015
 SEALED: 8-08-16
 REVISED: N/A

Electrical Detail

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Prepared In the Offices of:

 750 N. Greenfield Pkwy, Garner, NC 27529

I-240 EB Ramp at US 70 (N. Tunnel Rd.) EB Ramp Tri-Level Interchange

Division 13 Buncombe County Asheville

PLAN DATE: April 2016 REVIEWED BY: BAS

PREPARED BY: James Peterson REVIEWED BY:

REVISIONS: _____ INIT. DATE

Sealed by: DATE: 10/13/2016

SIG. INVENTORY NO. 13-0032

13-0032-2016-08-10
 S:\IT\ASIS\13-0032\Sig\Work\hgr\edp\sig\Mon\Peter\son\130032_sm.e...xxx.dgn
 J Peterson