


**EDI MODEL 2018ECLIP-NC CONFLICT MONITOR  
PROGRAMMING DETAIL**

(remove jumper and set switches as shown)

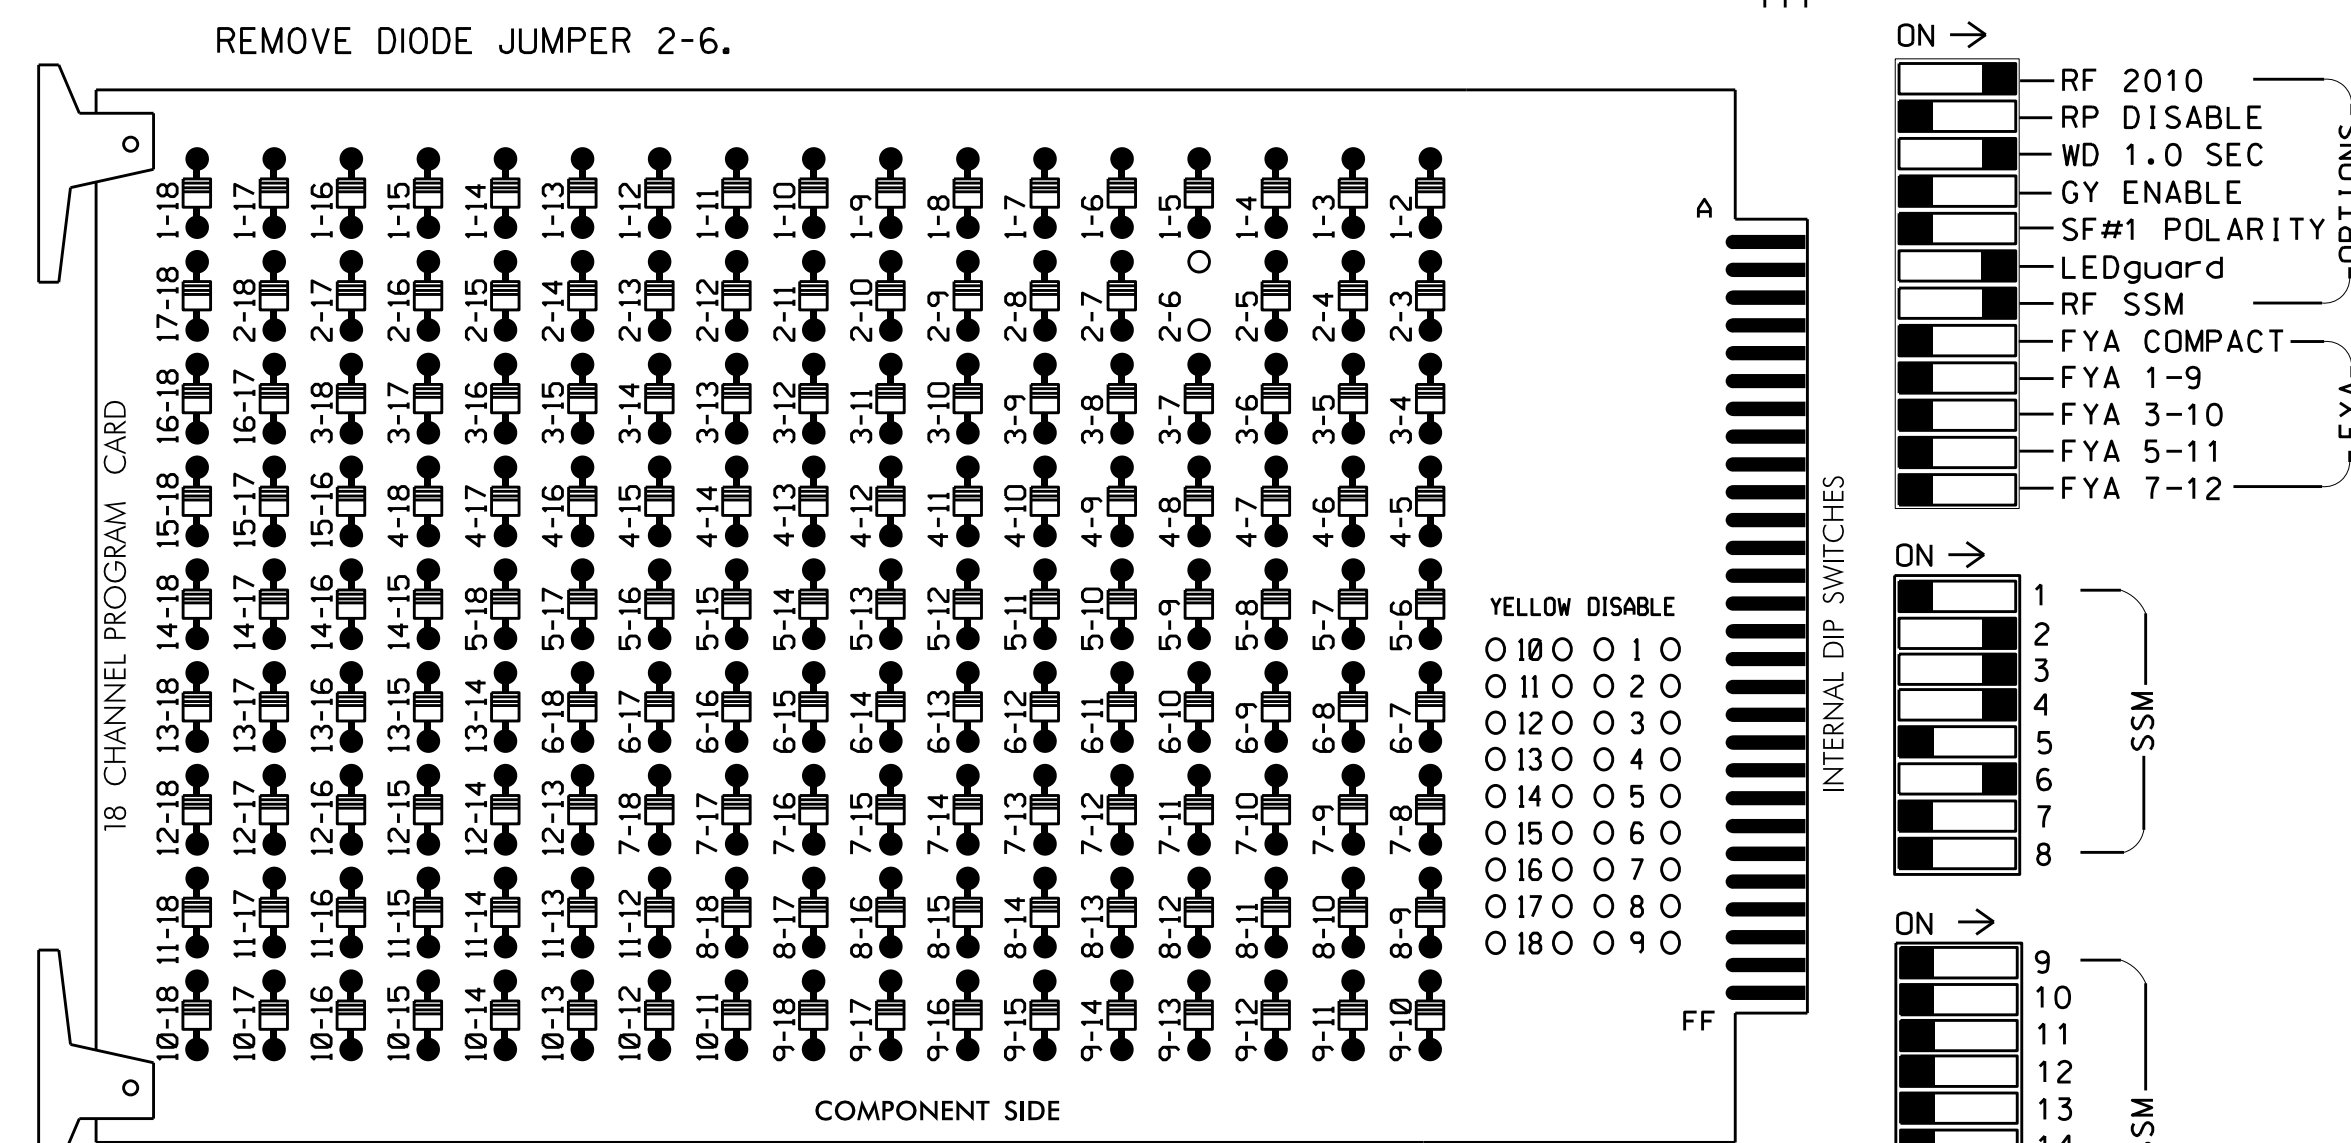

**NOTES:**

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

■ = DENOTES POSITION OF SWITCH

**NOTES**

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Enable Simultaneous Gap-Out for all phases.
3. Program phases 2 and 6 for Start Up In Green.
4. Program phases 2 and 6 for Yellow Flash.
5. The cabinet and controller are part of the Asheville Signal System.

**EQUIPMENT INFORMATION**

CONTROLLER.....2070E  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S4,S5,S8  
 PHASES USED.....2,3,4,6  
 OVERLAPS.....NONE


**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	31	32	41	42	NU	NU	61,62	NU	NU	NU	NU	NU	NU	NU	NU
RED		128		116	116	101	101			134								
YELLOW		129		117	117	102	102			135								
GREEN		130		118	118	103	103			136								
RED ARROW																		
YELLOW ARROW																		
FLASHING YELLOW ARROW																		
GREEN ARROW						118	103											

NU = Not Used

**INPUT FILE POSITION LAYOUT**

(front view)

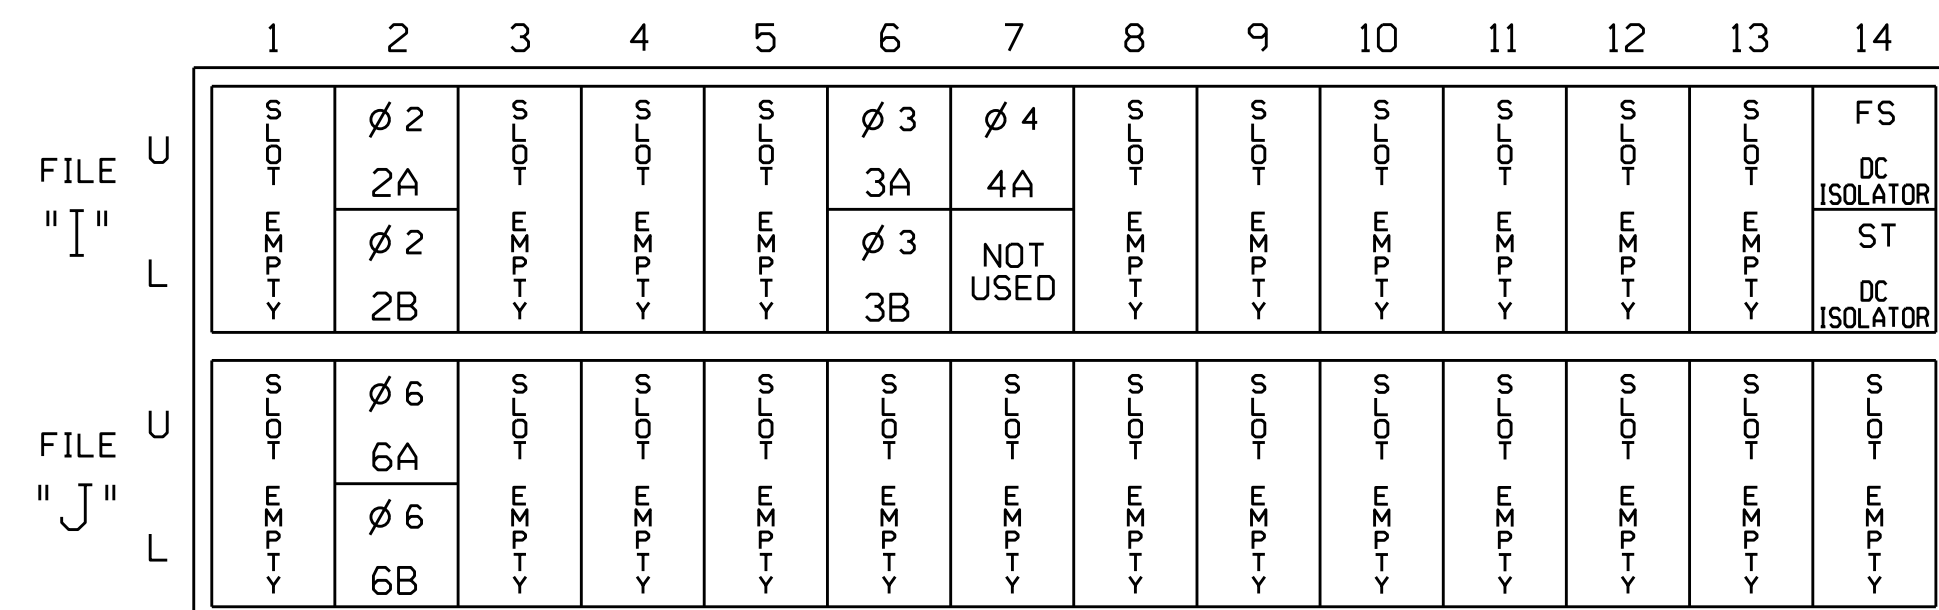


EX. : 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE  
 ST = STOP TIME

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A	TB2-5,6	I2U	39	1	2	2	Y	Y			
2B	TB2-7,8	I2L	43	5	12	2	Y	Y			
3A	TB4-9,10	I6U	41	3	4	3	Y	Y			
3B	TB4-11,12	I6L	45	7	14	3	Y	Y			15
4A	TB6-1,2	I7U	65	27	34	4	Y	Y			10
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			

INPUT FILE POSITION LEGEND: J2L

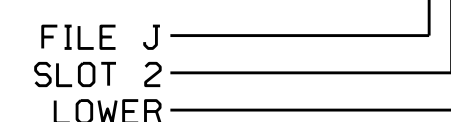

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 13-0461  
 DESIGNED: June 2016  
 SEALED: 8/15/2016  
 REVISED:

**Electrical Detail**

Electrical and Programming Details for: **US 25 (McDowell St.) at Anna Woodfin Drive/ Business Entrance**

Division 13 Buncombe County Asheville

PLAN DATE: August 2016 REVIEWED BY: K.M. Mims

PREPARED BY: Z.M. Little REVIEWED BY:

750 N. Greenfield Pkwy, Garner, NC 27529

Seal: KEITH M. MIMS, PROFESSIONAL ENGINEER, 036880

DocuSigned by: Keith M. Mims 8/16/2016

SIG. INVENTORY NO. 13-0461

16-AUG-2016 11:59  
 S:\TCS\ASU\TCS\Sig\edi\work\hgr\edp\sig\Map\111\13-0461\13-0461\_510\_sm\_2016mdd.dgn  
 zml\111