


**EDI MODEL 2018EClip-NC CONFLICT MONITOR**  
**PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)

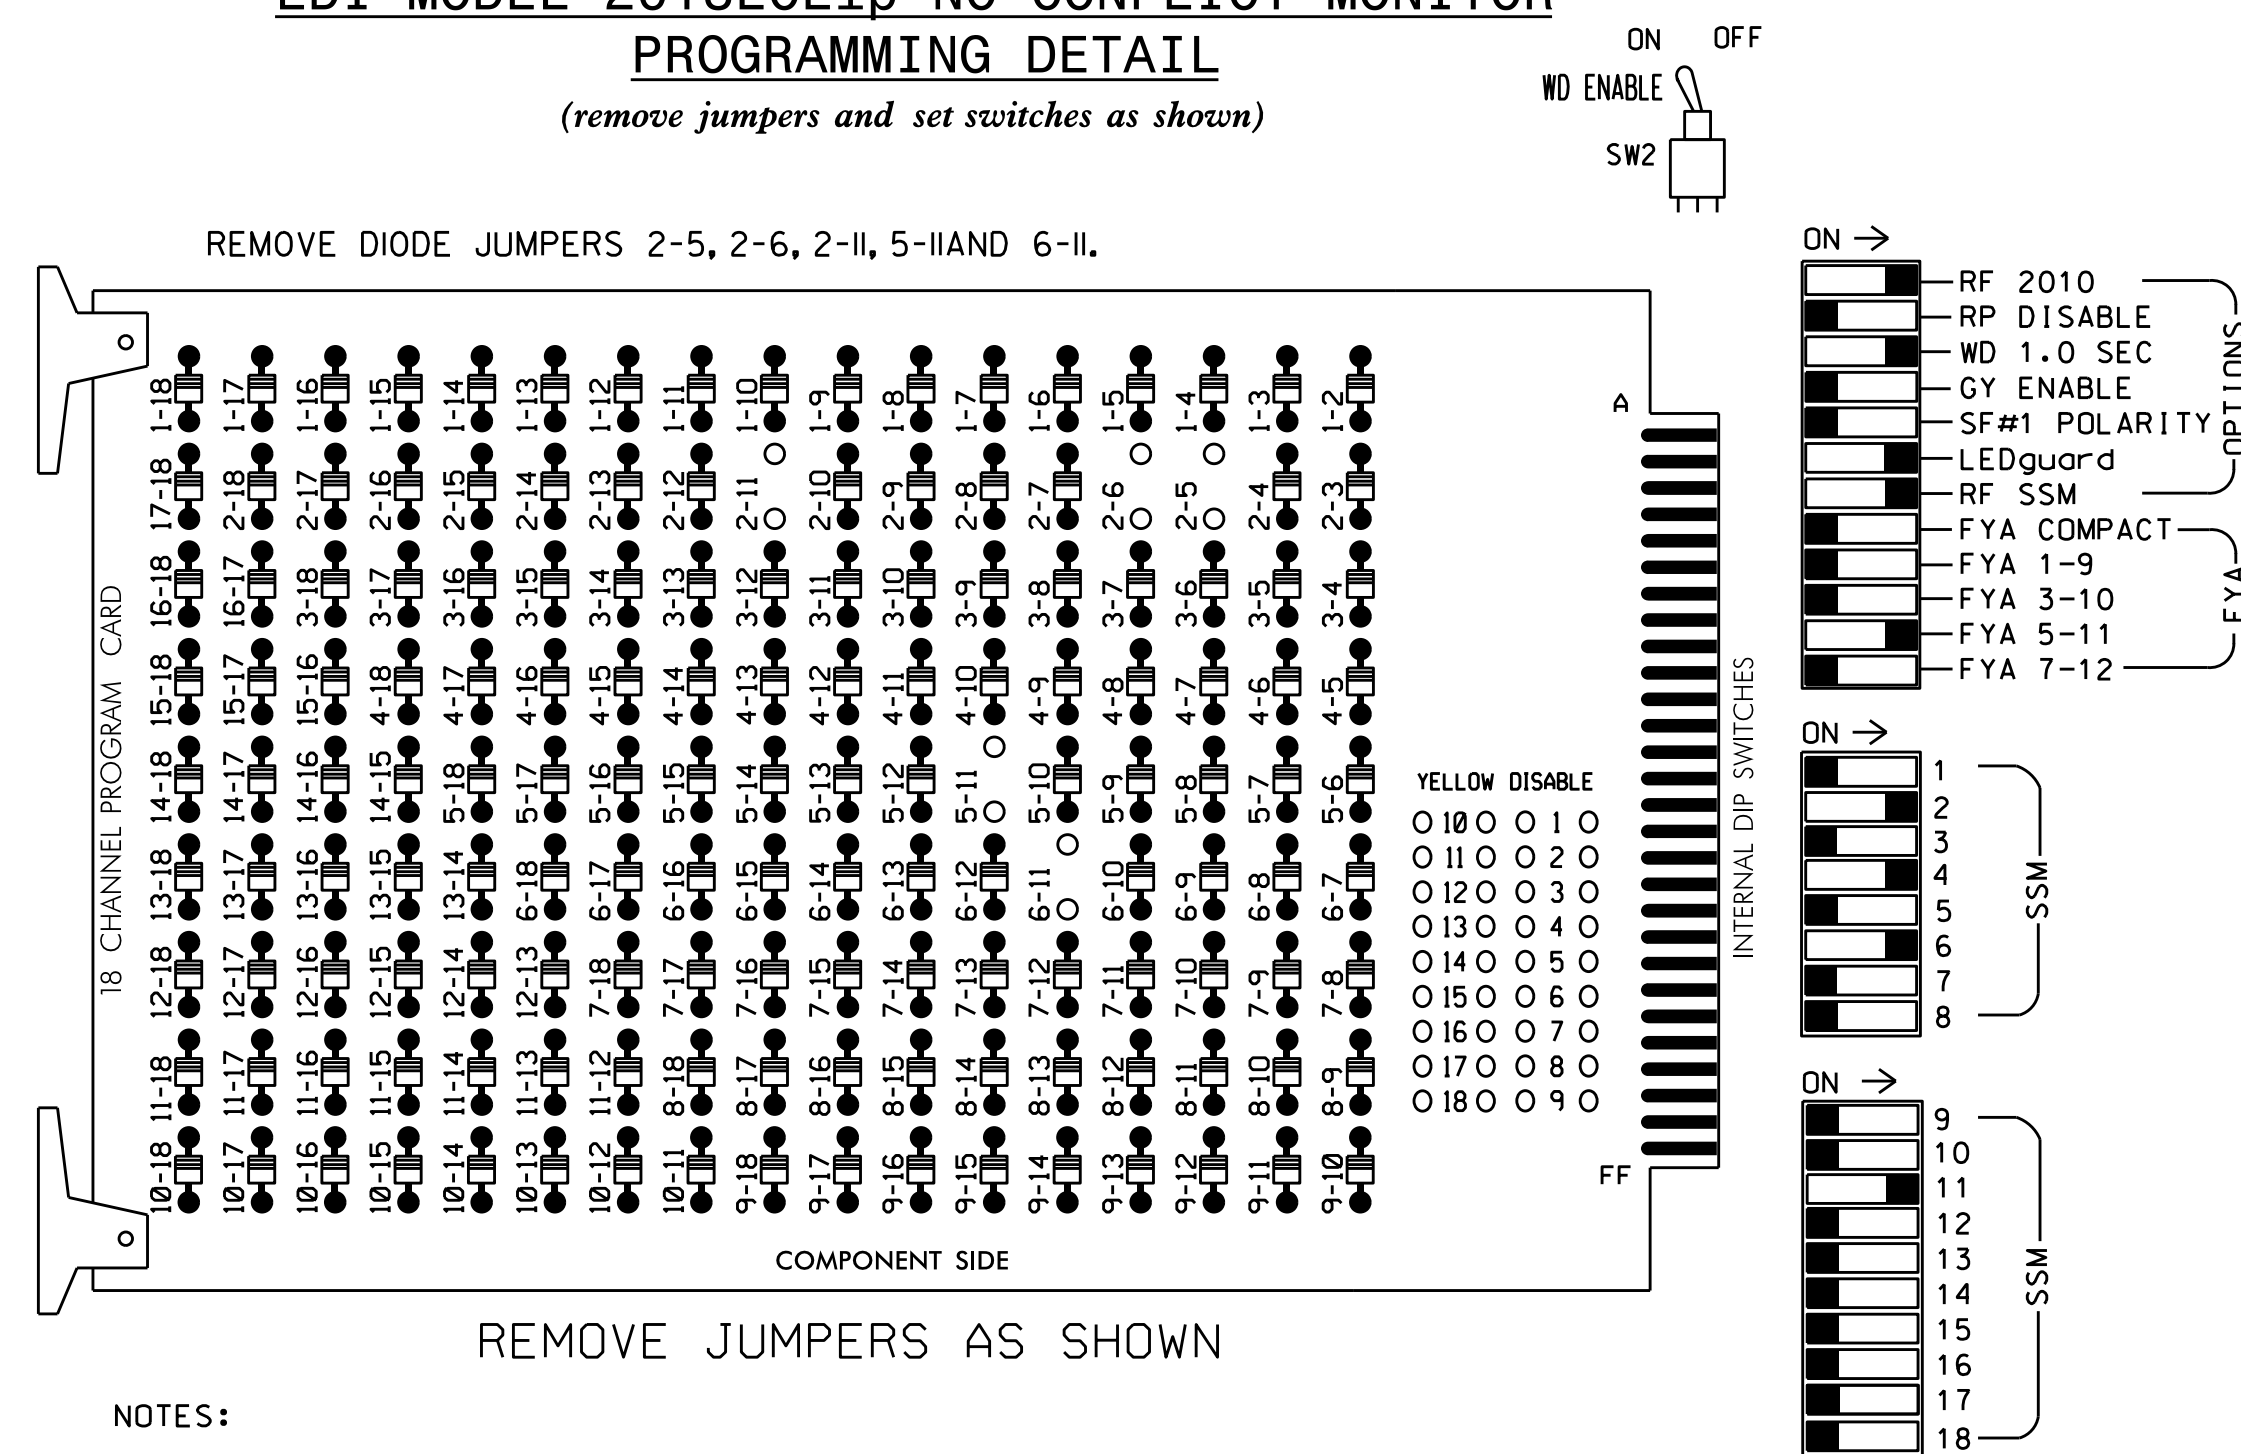

**NOTES:**

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Integrate monitor with Ethernet Network in cabinet.

**NOTES**

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for Variable Initial and Gap Reduction.
- Program phases 2 and 6 for Start Up In Green.
- Program phases 2 and 6 for Yellow Flash.
- The cabinet and controller are part of the Asheville Signal System.

**EQUIPMENT INFORMATION**

CONTROLLER.....2070E  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S5,S7,S8,AUX S4  
 PHASES USED.....2,4,5,6  
 OVERLAP "A".....NOT USED  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED

**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6	
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18	
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE	
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42,43	NU	51	61,62	NU	NU	NU	NU	NU	NU	NU	51	NU	NU	
RED		128			101			134											
YELLOW		129			102		*	135											
GREEN		130			103			136											
RED ARROW																		A114	
YELLOW ARROW																			A115
FLASHING YELLOW ARROW																			A116
GREEN ARROW								133											


NU = Not Used

\* Denotes install load resistor. See load resistor installation detail this sheet.

\* See pictorial of head wiring in detail below.

**FYA SIGNAL WIRING DETAIL**

(wire signal head as shown)

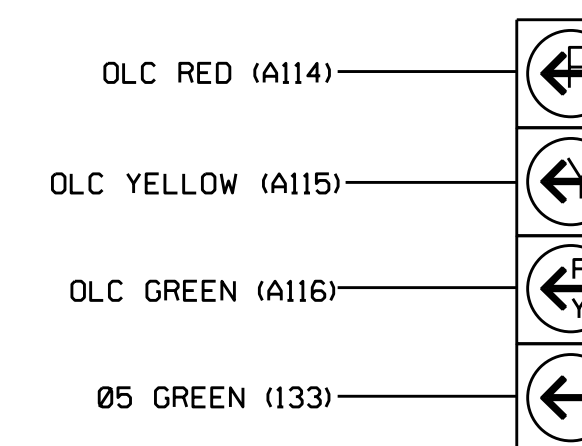

51

**NOTE**

- The sequence display for this signal requires special logic programming. See sheet 2 of 2 for programming instructions.

**INPUT FILE POSITION LAYOUT**

(front view)

FILE	U	1	2	3	4	5	6	7	8	9	10	11	12	13	14		
"I"	U	S	Ø 2/SYS	Ø 2/SYS	Ø 4	Ø 4	Ø 4	Ø 4	Ø 4	Ø 4	Ø 4	Ø 4	Ø 4	Ø 4	Ø 4	FS	
		2A/S1	2A/S1	2A/S1	4A	4A	4A	4A	4A	4A	4A	4A	4A	4A	4A	4A	DC ISOLATOR
"J"	U	S	Ø 5	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	Ø 6	FS
		5A	6A	6A	6B	6B	6B	6B	6B	6B	6B	6B	6B	6B	6B	6B	6B

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE  
 ST = STOP TIME


⊗ Wired Input - Do not populate slot with detector card

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A/S1	TB2-5,6	I2U	39	1	2	2/SYS	Y	Y			
2B/S2	TB2-7,8	I2L	43	5	12	2/SYS	Y	Y			
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			
5A <sup>1</sup>	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	I4U	47	9	22	2	Y	Y	Y		3
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			

<sup>1</sup>Add jumper from J1-W to I4-W, on rear of input file.


**INPUT FILE POSITION LEGEND: J2L**

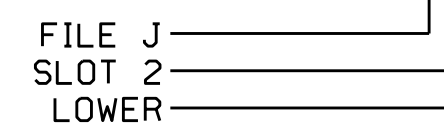

**LOAD RESISTOR INSTALLATION DETAIL**

(install resistor as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

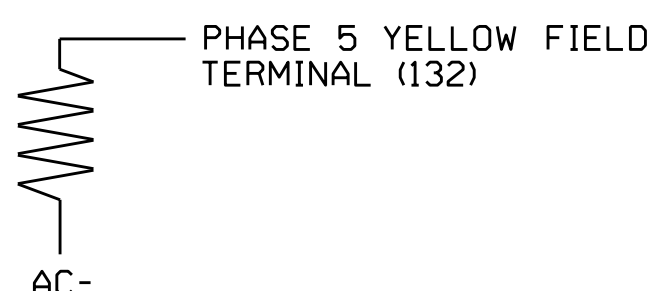

**ELECTRICAL DETAIL SHEET 1 OF 2**

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Electrical and Programming Details for: **US 19-23-74 (Smokey Park Highway) at Old Haywood Road**

Prepared in the Offices of: **Transporatio Mobility and Safety Solutions**

750 N. Greenfield Pkwy, Garner, NC 27529

Division 13 Buncombe County Asheville

PLAN DATE: September 2016 REVIEWED BY: BAS

PREPARED BY: A. F. Aslami REVIEWED BY:

REVISIONS: \_\_\_\_\_ INIT. DATE

Designed by: *Anthony M. Little* 10/14/2016

SIG. INVENTORY NO. 13-0868

14-007-2016-08-11 S:\112550\15\_Signal\work\groups\g\_MorphAs\ami\130868\_sml\el\_xxx.dgn