

OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps
Overlap Plan 1

Overlap	1	2	3	4
Type	Off	Off	FYA 4 - Section	Normal
Included Phases			6	4,5
Modifier Phases			5	
Modifier Overlaps	-	-	-	
Trail Green	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0

MAXTIME OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps

In the table view of the web interface, right click on "Overlap" in the top left corner of the table. Copy the entire contents of Overlap Plan 1. Paste Overlap Plan 1 into Overlap Plan 2. Modify Overlap Plan 2 as shown below and save changes.

Overlap Plan 2

Overlap	1	2	3	4
Type	Off	Off	FYA 4 - Section	Normal
Included Phases				4,5
Modifier Phases			5	
Modifier Overlaps	-	-	-	
Trail Green	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0

NOTICE
REMOVED
INCLUDED
PHASES

Note: If Loop 5A is detected using the Vehicle Detectors shown in the charts below, use the steps shown below. If different Vehicle Detectors are used, substitute the appropriate Vehicle Detector numbers for the ones shown below.

VEHICLE DETECTOR PROGRAMMING DETAIL FOR ALTERNATE PHASING LOOP 5A

Front Panel
Main Menu >Controller >Detector >Veh Det Plans

Web Interface
Home >Controller >Detector Configuration >Vehicle Detectors

In the table view of web interface right click on "Detector" in the top left corner of the table. Copy the entire contents of Detector Plan 1. Paste Detector Plan 1 into Detector Plan 2. Modify Detector Plan 2 as shown below and save changes.

Plan 2		
Detector	Call Phase	Delay
15	5	3.0
31	0	0.0

MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Overlap Plan 2 and Detector Plan 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

PHASING	OVERLAP PLAN	VEH DET PLAN
ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING	1	1
ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING	2	2

ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN OVERLAP PLAN 2 AND VEHICLE DETECTOR PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAP PLAN 2: Modifies overlap included phases for head 51 to run protected turns only.

VEH DET PLAN 2: Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 3.0 seconds.

MAXTIME ALTERNATE PHASING PATTERN PROGRAMMING DETAIL

Front Panel
Main Menu >Controller >Coordination >Patterns

Web Interface
Home >Controller >Coordination >Patterns

Pattern Parameters

Pattern	Veh Det Plan	Overlap Plan
*	2	2

* The Pattern number(s) are to be determined by the Division and/or City Traffic Engineer.


THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 09-0400T1
DESIGNED: May 2024
SEALED: 05-09-2024
REVISED: N/A

TRANSYSTEMS

1 Glenwood Avenue
Raleigh, NC 27603
Tel: 919.789.9977
Fax: 919.789.9591
License: F-0453

Electrical Detail - Sheet 2 of 2


Electrical and Programming
Details For:

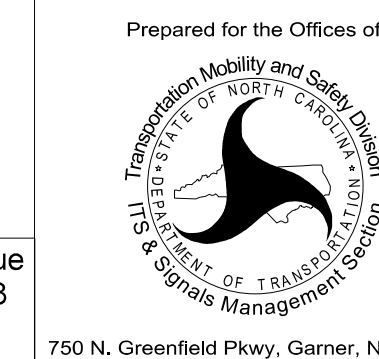

NC 8 (Winston Road)
at
SR 1406 (Biesecker Road)

Division 9	Davidson County	Lexington
PLAN DATE: May 2024	REVIEWED BY:	
PREPARED BY: J.T. Rowe	REVIEWED BY: G.G. Murr, Jr.	
REVISIONS	INIT.	DATE

DOCUMENT NOT CONSIDERED
FINAL UNLESS ALL
SIGNATURES COMPLETED

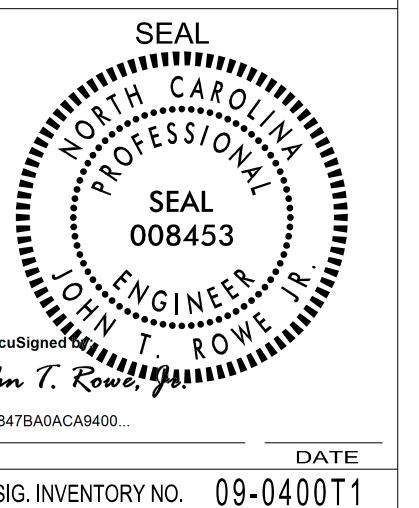

SIG. INVENTORY NO. 09-0400T1