
ECONOLITE ASC/3-2070 LOAD SWITCH ASSIGNMENT DETAIL

(program controller as shown)

To assign load switch S11 as OLE, program LD SWITCH 8 as OVLP '5' TYPE '0' as shown below.

- 1. From Main Menu select 1. CONFIGURATION
- 2. From CONFIGURATION Submenu select 3. LOAD SW ASSIGN

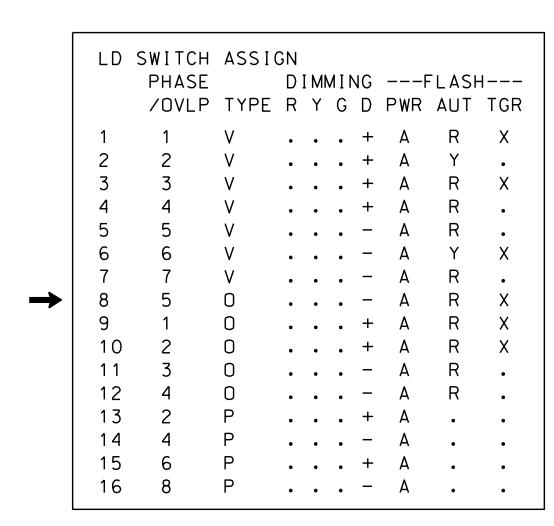

ECONOLITE ASC/3-2070 OVERLAP PROGRAMMING DETAIL

(program controller as shown)

1. From Main Menu select 2. CONTROLLER

2. From CONTROLLER Submenu select 2. VEHICLE OVERLAPS

Toggle Four Times

OVERLAP E

Select TMG VEH OVLP [E] and 'NORMAL'

END PROGRAMMING

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 10-1732T1
DESIGNED: July 2017
SEALED: 9/25/2017
REVISED: N/A

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared In the Offices of:

Concord Mills Entrance/
Shopping Center Entrance
Division 10 Cabarrus County Concord
PLAN DATE: September 2017 REVIEWED BY:

PREPARED BY: S. Armstrong REVIEWED BY:

INIT. DATE

REVISIONS

S:*ITS&SU*ITS Signals*Workgroups*Sig Man*Armstrong*101732_sm_ sarmstrong