

## OUTPUT CHANNEL CONFIGURATION

Front Panel  
Main Menu >Controller >More>Channels>Channels Config

Web Interface  
Home >Controller >Advanced IO>Channels>Channels Configuration

## Channel Configuration

Channel	Control Type	Control Source	Flash Yellow	Flash Red	Flash Alt	MMU Channel
1	Phase Vehicle	1		X	X	1
2	Phase Vehicle	2		X		2
3	Phase Vehicle	3		X	X	3
4	Phase Vehicle	4		X		4
5	Phase Vehicle	5		X		5
6	Phase Vehicle	6		X	X	6
7	Phase Vehicle	7		X		7
8	Phase Vehicle	8		X	X	8
9	Overlap	1		X	X	9
10	Overlap	2		X	X	10
11	Overlap	3		X		11
12	Overlap	4		X		12
13	Phase Ped	2				13
14	Phase Ped	4				14
15	Phase Ped	6				15
16	Phase Ped	8				16
17	Overlap	5		X	X	17
18	Overlap	6		X		18

↑                      ↑

NOTE: ALL RED FLASH

## MAXTIME OVERLAP PROGRAMMING DETAIL

Front Panel  
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface  
Home >Controller >Overlap Configuration >Overlaps

### Overlap Plan 1

Overlap	1	2	3
Type	FYA 4 - Section	FYA 4 - Section	FYA 4 - Section
Included Phases	3	6	3
Modifier Phases	-	3	-
Modifier Overlaps	-	-	-
Trail Green	0	0	0
Trail Yellow	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0

## MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Front Panel  
Main Menu >Controller >Unit

Web Interface  
Home >Controller >Unit

Modify parameters as shown below and save changes.


Start Up Parameters	Unit Flash Parameters
StartUp Clearance Hold	All Red Flash Exit Time
6	6

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 06-0537T3  
DESIGNED: Feb 2025  
SEALED: 3/19/2025  
REVISED:

Temporary Design 3 - TMP Phase III, Step 1  
Electrical Detail - Sheet 2 of 2

DOCUMENT NOT CONSIDERED  
FINAL UNLESS ALL  
SIGNATURES COMPLETED

**STV**  
STV Engineers, Inc.  
900 West Trade St., Suite 715  
Charlotte, NC 28202  
(704) 372-1885  
NC License Number F-0991

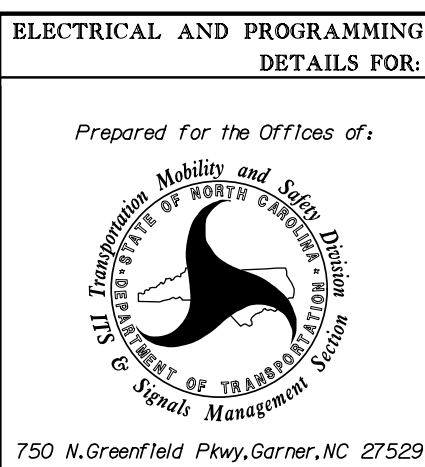

SR 1997 (Fayetteville Road)  
at  
SR 1984 (Linkhaw Road)

[illegible]