PROJ. REFERENCE NO.	SHEET NO.
B-4803	TMP-3

PHASING

PHASE I

STEP 1 - INSTALL WORK ZONE ADVANCE WARNING SIGNS, SEE RSD 1101.01.

STEP 2 - AWAY FROM TRAFFIC, BEGIN PROPOSED BRIDGE CONSTRUCTION AND APPROACHES FROM -L- STA 13+35+/- TO -L- STA 21+00+/- AND DRIVEWAYS AS SHOWN ON TMP-4.

- USING RSD 1101.02, SHEET 1 OF 15, BEGIN CONSTRUCTION OF THE FOLLOWING TO THE EDGE AND ELEVATION OF THE EXISTING PAVEMENT:

  -L- STA 10+25+/- TO -L- STA 13+35+/- (SEE TMP-4)
  -L- STA 21+00+/- TO -L- STA 26+25+/- (SEE TMP-4)

- USING RSD 1101.02, SHEET 1 OF 15, CONSTRUCT TEMPORARY PAVEMENT AND INSTALL ANCHORED PORTABLE CONCRETE BARRIER (PCB) AND CRASH CUSHIONS AS DETAILED ON SHEET 4.

STEP 3 - BEHIND ANCHORED PCB, INSTALL TEMPORARY SHORING IN THE FOLLOWING LOCATIONS:

  -L- STA. 14+84, 26′ RT TO -L- STA. 15+17, 26′ RT (SEE TMP-4)
  -L- STA. 16+87, 26′ RT TO -L- STA. 17+32, 26′ RT (SEE TMP-4)

PHASE II

STEP 1 - USING RSD 1101.02, SHEET 1 OF 15, PERFORM THE FOLLOWING IN A CONTINUOUS MANNER AS SHOWN ON SHEET 5:

- COMPLETE CONSTRUCTION OF THE PROPOSED ROADWAY UP TO, BUT NOT INCLUDING, THE FINAL LAYER OF SURFACE COURSE.

- PLACE TEMPORARY MARKINGS AND MARKERS IN THE FINAL PATTERN AND REMOVE ANY CONFLICTING MARKINGS

- PLACE TRAFFIC CONTROL DEVICES AS SHOWN ON TMP-5 AND SHIFT TRAFFIC TO THE FINAL PATTERN.

STEP 2 - USING RSD 1101.02, SHEET 1 OF 15, AS NEEDED, COMPLETE THE FOLLOWING:

- REMOVE EXISTING STRUCTURE.

- REMOVE EXISTING PAVEMENT AS SHOWN IN ROADWAY PLANS.

- COMPLETE ALL PROPOSED ROADWAY CONSTRUCTION UP TO, BUT NOT INCLUDING, THE FINAL LAYER OF SURFACE COURSE.

STEP 4 - USING RSD 1101.02, SHEET 1 OF 15, PLACE FINAL LAYER OF SURFACE COURSE.

STEP 5 - USING RSD 1101.02, SHEET 1 OF 15, PLACE FINAL MARKINGS AND MARKERS.

STEP 6 - REMOVE ALL TRAFFIC CONTROL DEVICES.

APPROVED DocuSigned by: David Bissette DATE: 9/30/2014

SEAL

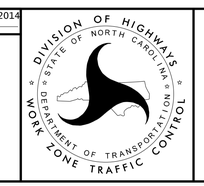

TEMPORARY
TRAFFIC CONTROL
PHASING

9/29/2014
R:\TIPProjects-B\B4803\Traffic\TrafficControl\TCP\B4803_TC_TMP03.dgn
User:derichardson