PROJ. REFERENCE NO.	SHEET NO.
W-5107	TMP-26

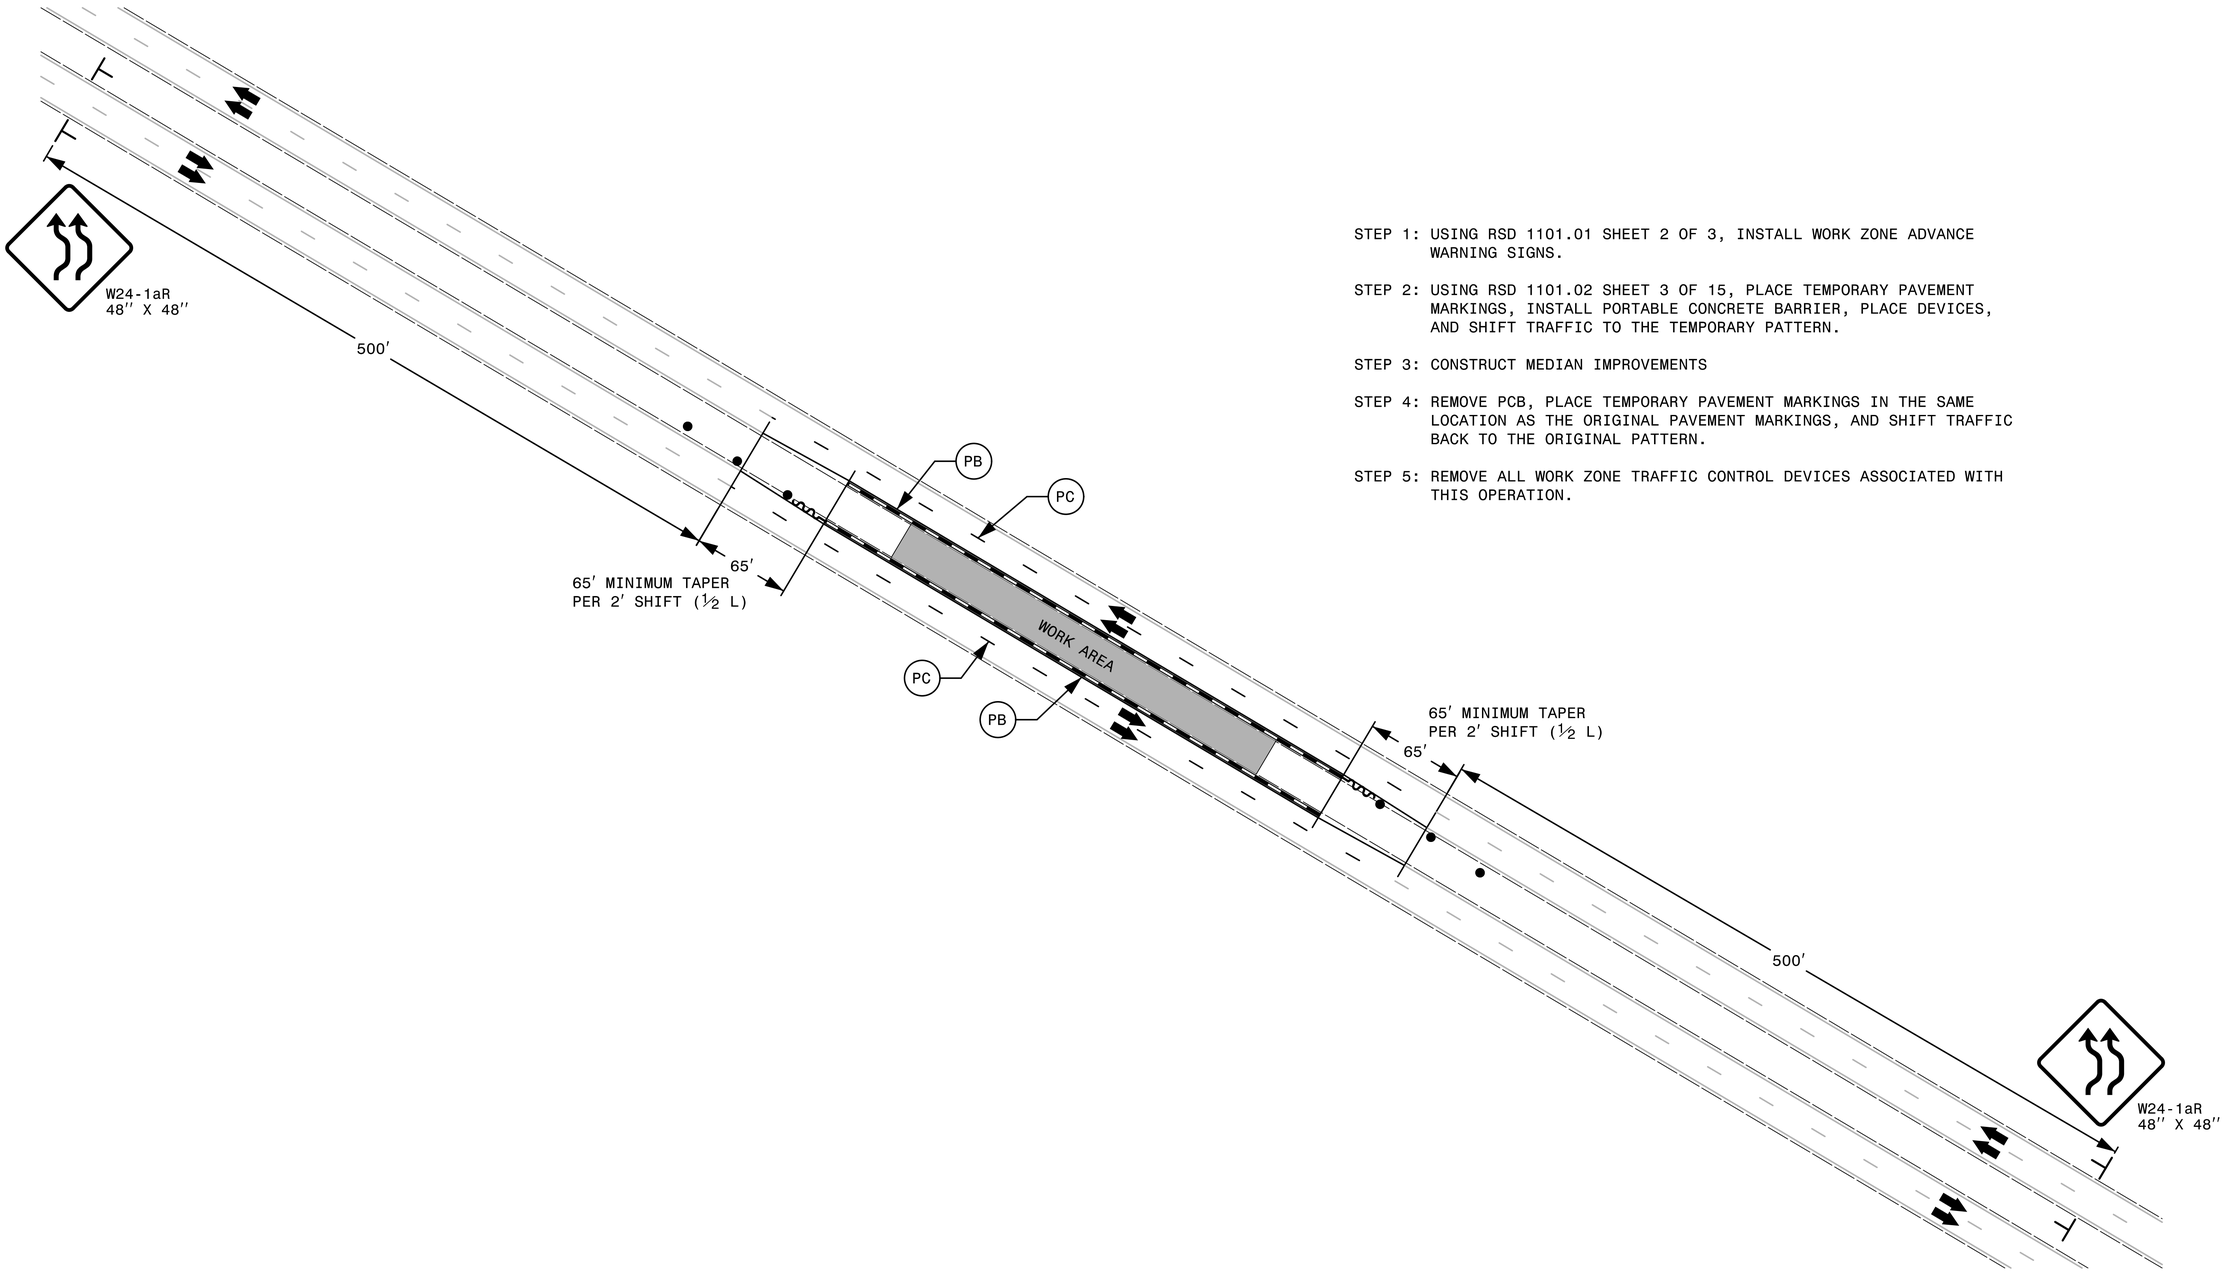

STEP 1: USING RSD 1101.01 SHEET 2 OF 3, INSTALL WORK ZONE ADVANCE WARNING SIGNS.

STEP 2: USING RSD 1101.02 SHEET 3 OF 15, PLACE TEMPORARY PAVEMENT MARKINGS, INSTALL PORTABLE CONCRETE BARRIER, PLACE DEVICES, AND SHIFT TRAFFIC TO THE TEMPORARY PATTERN.

STEP 3: CONSTRUCT MEDIAN IMPROVEMENTS

STEP 4: REMOVE PCB, PLACE TEMPORARY PAVEMENT MARKINGS IN THE SAME LOCATION AS THE ORIGINAL PAVEMENT MARKINGS, AND SHIFT TRAFFIC BACK TO THE ORIGINAL PATTERN.

STEP 5: REMOVE ALL WORK ZONE TRAFFIC CONTROL DEVICES ASSOCIATED WITH THIS OPERATION.

APPROVED: DocuSigned by: Steve Miller DATE: 11/19/2019

SEAL

NORTH CAROLINA PROFESSIONAL SEAL 037026 ENGINEER STEVEN D. MILLER

DIVISION OF HIGHWAYS
STATE OF NORTH CAROLINA
DEPARTMENT OF TRANSPORTATION
WORK ZONE TRAFFIC CONTROL

TRAFFIC SHIFT FOR MEDIAN CONSTRUCTION

$$$$$$SYSTIME$$$$$
$$$$$$$$$$$$$$$$DGN$$$$$$$$$$$$$$$$$$$$
$$$USERNAME$$$$