DocuSign Envelope ID: 1BAB081A-947F-4762-AB7F-42E6B06C363F

PROJECT REFERENCE NO.	SHEET NO.
C-5558	Sig. 220.1

EDI MODEL 2018ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

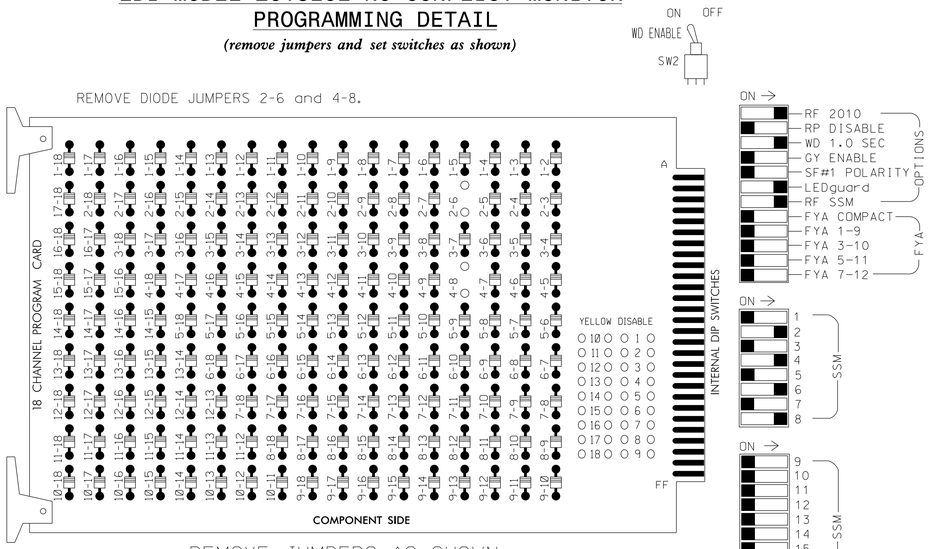

■ = DENOTES POSITION OF SWITCH

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Program phases 4 and 8 for Dual Entry.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Variable Initial and Gap Reduction.
5. Program phases 2 and 6 for Start Up In Green.
6. Program phases 2 and 6 for Yellow Flash.
7. The cabinet and controller are part of the High Point Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070E
CABINET.....332
SOFTWARE.....ECONOLITE OASIS
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...12
LOAD SWITCHES USED.....S2,S5,S8,S11
PHASES USED.....2,4,6,8
OVERLAPS.....NONE

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED
SIGNAL HEAD NO.	NU	21,22, 23,24	NU	NU	41,42	NU	NU	61,62, 63	NU	NU	81,82	NU
RED		128			101			134			107	
YELLOW		129			102			135			108	
GREEN		130			103			136			109	
RED ARROW												
YELLOW ARROW												
GREEN ARROW												
✋												
🚶												

NU = Not Used

INPUT FILE POSITION LAYOUT

(front view)

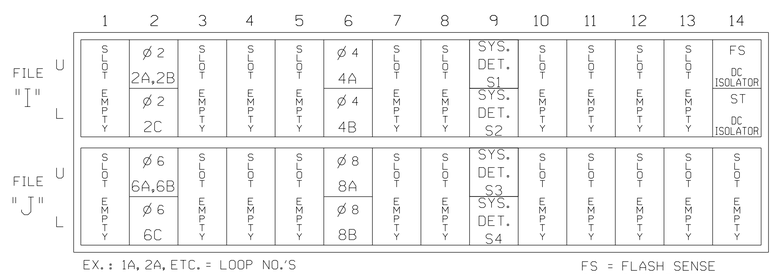

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME
PRE = PREEMPT

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A,2B	TB2-5,6	I2U	39	1	2	2	Y	Y			
2C	TB2-7,8	I2L	43	5	12	2	Y	Y			
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			
4B	TB4-11,12	I6L	45	7	14	4	Y	Y			
* S1	TB6-9,10	I9U	60	22	11	SYS	-	-			
* S2	TB6-11,12	I9L	62	24	13	SYS	-	-			
6A,6B	TB3-5,6	J2U	40	2	6	6	Y	Y			
6C	TB3-7,8	J2L	44	6	16	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			
8B	TB5-11,12	J6L	46	8	18	8	Y	Y			
* S3	TB7-9,10	J9U	59	21	15	SYS	-	-			
* S4	TB7-11,12	J9L	61	23	17	SYS	-	-			

* System detector only. Remove the vehicle phase assigned to this detector in the default programming.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: HP1024
DESIGNED: April 2014
SEALED: June 5, 2015
REVISED:

Signal Upgrade

ELECTRICAL AND PROGRAMMING DETAILS FOR:

HIGH POINT
NORTH CAROLINA'S 18TH INTERNATIONAL CITY

Department of Transportation
211 S. Hamilton Street
High Point, NC 27260

Johnson Street
at
Old Mill Road

Division 07 Guilford County High Point

PLAN DATE: April 2014	REVIEWED BY: LM Moon
PREPARED BY: AM Encarnacion	REVIEWED BY: MB Toth

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 025892 ENGINEER MELISSA B. TOTH

DocuSigned by:
Melissa B. Toth
SIGNATURE 6/5/2015 DATE

SIG. INVENTORY NO. HP1024

ATKINS 1616 EAST MILLBROOK ROAD, SUITE 310
RALEIGH, NORTH CAROLINA 27609
(919) 876-6888 NCBEES #F-0326

05-JUN-2015 15:55
G:\Transportation\Traffic\Curr\100037777 - High Point Sig Sys\Signals\Design\Package 1\Wiring\HP1024E.dgn
\\ILE2054 AT DUS2\0140