PROJECT REFERENCE NO.	SHEET NO.
B-4490	Sig. 4.1

EDI MODEL 2010ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

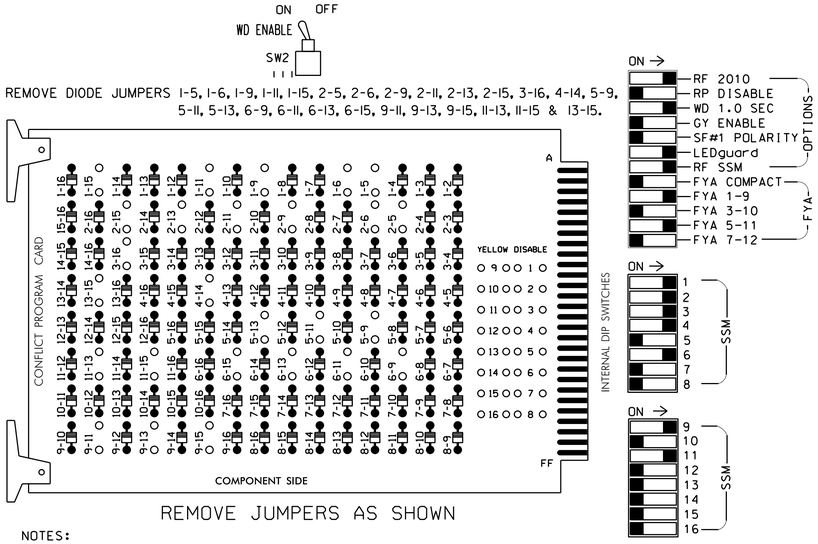

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Make sure jumpers SEL2-SEL5 are present on the monitor board.

■ = DENOTES POSITION OF SWITCH

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 5,7,8 10,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Start Up In Green.
5. Program phases 2, 3, 4 and 6 for 'STARTUP PED CALL'.
6. Program phases 2 and 6 for Yellow Flash and overlap 1 as Wag Overlaps.
7. The cabinet and controller are part of the Fayetteville City System.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1		S2	S2P	S3			S4			S4P	S5	S6	S6P	S7	S8	S8P	S9	S10	S11	S12	S13	S14
PHASE	1		2	2 PED	3			4			4 PED	5	6	6 PED	7	8	3 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11★	33	21,22	P21, P22	31	32	33	41	42	62	P41, P42	51★	61,62	P61, P62	NU	NU	P31, P32	11★	NU	NU	51★	NU	NU
RED	✱		128			116	116	101	101				134										
YELLOW			129			117	117	102	102			✱	135										
GREEN			130			118	118	103	103				136										
RED ARROW					116													A121			A114		
YELLOW ARROW		126			117					102								A122			A115		
FLASHING YELLOW ARROW																		A123			A116		
GREEN ARROW	127	127			118	118		103		103		133											
✋				113							104			119			110						
🚶				115							106			121			112						

NU = Not Used

✱ Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

EQUIPMENT INFORMATION

CONTROLLER.....2070L
CABINET.....332 /W/ AUX
SOFTWARE.....ECONOLITE OASIS
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
LOAD SWITCHES USED.....S1,S2,S2P,S3,S4,S4P,S5,S6,S6P,S8P,S9,S12.
PHASES USED.....1,2,3,4,5,6,2PED,3PED,4PED,6PED.
OVERLAP "A".....1+2
OVERLAP "B".....NOT USED
OVERLAP "C".....5+6
OVERLAP "D".....NOT USED

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

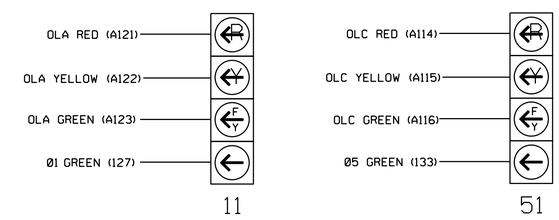

NOTE

The sequence display for these signal heads require special logic programming. See sheet 2 for programming instructions.

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	10	11	12	13	14
FILE "I"	U	Ø1	Ø2	Ø3	WIRED INPUT ⊗	SLOT EMPTY	Ø4	Ø3	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	Ø2 PED DC ISOLATOR	Ø6 PED DC ISOLATOR	FS DC ISOLATOR
		1A	2A,2B,2C	3A			4A	3C					Ø4 PED DC ISOLATOR	Ø3 PED DC ISOLATOR	ST DC ISOLATOR
	L	NOT USED	Ø6	Ø3			Ø4	NOT USED							
			6A,6B	3B			4B								
FILE "J"	U	Ø5	SLOT EMPTY	SLOT EMPTY	WIRED INPUT ⊗	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
		5A													
	L	NOT USED													

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A[1]	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10	26	6	Y	Y			
2A,2B,2C	TB2-5,6	I2U	39	1	2	2	Y	Y			
3A	TB2-9,10	I3U	63	25	32	3	Y	Y			3
3B	TB2-11,12	I3L	76	38	42	3	Y	Y			
3C	TB6-1,2	I7U	65	27	34	3	Y	Y			15
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			3
4B	TB4-11,12	I6L	45	7	14	4	Y	Y			10
5A[2]	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	I4U	47	9	22	2	Y	Y			
6A,6B	TB2-7,8	I2L	43	5	12	6	Y	Y			
PED PUSH BUTTONS											
P21,P22	TB8-4,6	I12U	67	29	PED 2	2 PED					
P41,P42	TB8-5,6	I12L	69	31	PED 4	4 PED					
P61,P62	TB8-7,9	I13U	68	30	PED 6	6 PED					
P31,P32	TB8-8,9	I13L	70	32	PED 8	3 PED					

NOTE:
INSTALL DC ISOLATORS IN INPUT FILE SLOTS I12 AND I13.

[1] Add jumper from I1-W to J4-W, on rear of input file.

[2] Add jumper from J1-W to I4-W, on rear of input file.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

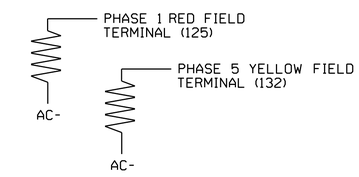

PED 3 PROGRAMMING DETAIL

(program controller as shown below)

CHANGING OUTPUT ASSIGNMENTS

1. FROM MAIN MENU SELECT '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS)
2. ENTER 17 (PHASE 8 DW) FOR OUTPUT ASSIGNMENT #.
3. SCROLL DOWN TO 'PEDESTRIAN PHASE' AND ENTER 'Y' REGARDLESS OF DEFAULT PROGRAMMING
4. ENTER '3' FOR 'SELECT PEDESTRIAN PHASE'. NO CHANGE NEEDED FOR 'SELECT COLOR'
5. BACKUP TO 'OUTPUT ASSIGNMENTS AND SETTINGS MENU:' BY PRESSING THE 'ESC' BUTTON ON KEYBOARD.
6. SELECT '1' (OUTPUT ASSIGNMENTS)
7. ENTER 18 (PHASE 8 W) FOR OUTPUT ASSIGNMENT #.
8. REPEAT STEPS # 3 AND # 4.

CHANGING INPUT ASSIGNMENTS

1. FROM MAIN MENU SELECT '7' (DETECTORS), THEN '2' (PEDESTRIAN DETECTOR ASSIGNMENTS)
2. CYCLE TO PED DETECTOR #8 BY REPEATEDLY DEPRESSING '+' KEY
3. MODIFY PHASE ASSIGNED TO PED DETECTOR # 8 FROM PHASE 8 TO PHASE 3

PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 06-0039T3
DESIGNED: July 2015
SEALED: 8/26/15
REVISED: N/A

Electrical Detail - Sheet 1 of 2 - Temp 3 Phase 4

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signal Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

NC 24-210 (Rowan Street) at Ray Avenue

Division 6 Cumberland County Fayetteville

PLAN DATE: July 2015	REVIEWED BY:
PREPARED BY: B. Simmons	REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 022013 ENGINEER GEORGE C. BROWN

DocuSigned by: George C. Brown 8/27/2015
F12601E0BEB434 DATE

SIG. INVENTORY NO. 06-0039T3

26-AUG-2015 09:11
S:\TISSAL\TIS Signals\Workgroups\Sig Mon\Simmons\Working Folder\Electrical Details\Division 06\060039_sm_ele_xxx.dgn
bsimmons