DocuSign Envelope ID: 82D8C649-6B56-4745-B9CD-FF1402C4349A

PROJECT REFERENCE NO.	SHEET NO.
U-5839	Sig 3.1

18 CHANNEL IP CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

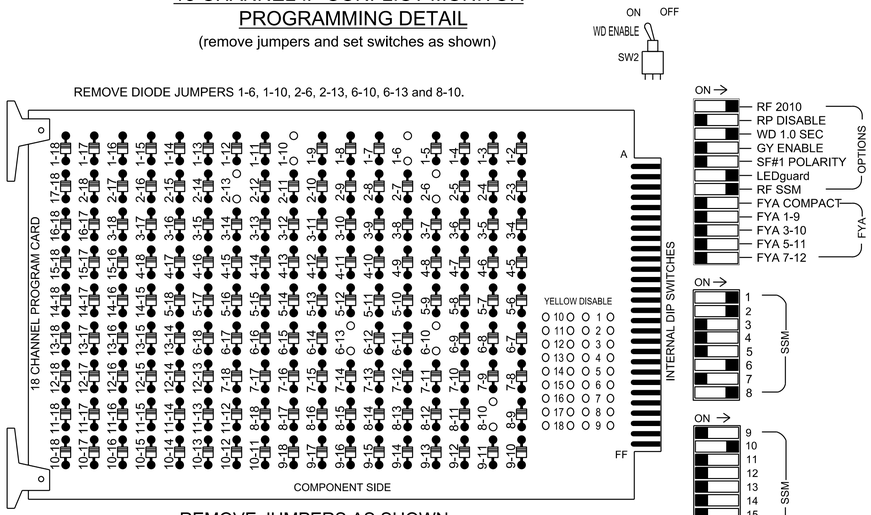

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that the Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
2. Program controller to start up in phase 2 Green Walk and 6 Green No Walk.
3. If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.
4. The cabinet and controller are part of the D14-12 Waynesville Signal System.

EQUIPMENT INFORMATION

Controller.....2070LX
Cabinet.....332 w/ Aux
Software.....Q-Free MAXTIME
Cabinet Mount.....Base
Output File Positions.....18 With Aux. Output File
Load Switches Used.....S1, S2, S3, S8, S11, AUX S2
Phases Used.....1, 2, 2PED, 6, 8
Overlap "1".....NOT USED
Overlap "2".....*
Overlap "3".....NOT USED
Overlap "4".....NOT USED

*See overlap programming detail on this sheet

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OL1	OL2	SPARE	OL3	OL4	SPARE
SIGNAL HEAD NO.	61	21,22	P21, P22	NU	NU	NU	NU	61,62	NU	NU	81	NU	NU	82,83	NU	NU	NU	NU
RED	*	128						134						A124				
YELLOW		129						135										
GREEN		130						136										
RED ARROW											107							
YELLOW ARROW	126										108			A125				
FLASHING YELLOW ARROW																		
GREEN ARROW	127										109			A126				
✋			113															
🚶			115															

NU = Not Used
* Denotes install load resistor. See load resistor installation detail this sheet.

SPECIAL DETECTOR NOTE

Install a multizone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	1O	11	12	13	14
FILE "I"	U	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	Ø 2 PED DC ISOLATOR	SLOT EMPTY	FS DC ISOLATOR
	L												NOT USED		ST DC ISOLATOR
FILE "J"	U	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
	L														

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT POINT	DETECTOR NO.	CALL PHASE	DELAY TIME	EXTEND TIME	EXTEND	ADDED INITIAL	CALL	DELAY DURING GREEN
PED PUSH BUTTONS												
P21,P22	TB8-4,6	I12U	67	33	2	PED 2						

NOTE:
INSTALL DC ISOLATOR IN INPUT FILE SLOT I12

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

ACCESSIBLE PEDESTRIAN SIGNAL (APS) INSTALLATION NOTES

1. Install push buttons and APS equipment per manufacturer's instructions.
2. Provide a dedicated cable to each push button per manufacturer's instructions.
3. If APS equipment is mounted in cabinet, use filtered power (i.e., Controller Receptacle) to power APS equipment. Do not use Equipment Receptacle, which is a GFCI outlet.
4. Never attempt to operate a standard contact closure push button with the APS system unless cabinet is re-wired for standard button operation or unless explicitly allowed by the manufacturer.
5. Place manufacturer's instructions in cabinet with cabinet prints, signal plans, and electrical details.

LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown)

ACCEPTABLE VALUES	
Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

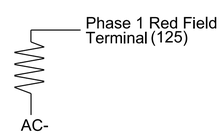

OVERLAP PROGRAMMING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	2
Type	Normal
Included Phases	1,8
Modifier Phases	-
Trail Green	0
Trail Yellow	0.0
Trail Red	0.0

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 14-0417T1
DESIGNED: Apr 2023
SEALED: 04/11/2023
REVISED: N/A

Electrical Detail
Temporary Design 1 - (TMP Phase II)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared for: Transportation Mobility and Safety Division, Traffic Engineering & Signals Management Section, Department of Transportation, State of North Carolina

US 276 (Russ Avenue) at Walnut Street

Division 14 Haywood County Waynesville

PLAN DATE:	April 2023	REVIEWED BY:	WJ Hamilton
PREPARED BY:	TS Popelka	RKA PROJ. NO:	16085 (040)

REVISIONS	INIT.	DATE

750 N.Greenfield Pkwy,Garner,NC 27529

Infrastructure Consulting Services, Inc. dba RKA
RAMEY KEMP ASSOCIATES
8210 University Executive Park Drive Suite 220 Charlotte, North Carolina 28262
Phone: 704-549-4260 | www.rameykemp.com | NC License No. F-1489

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 32396 ENGINEER WILLIAM J. HAMILTON

DocuSigned by: William J. Hamilton
A0560D704648484...
04/11/2023
SIGNATURE DATE

SIG. INVENTORY NO. 14-0417T1