Docusign Envelope ID: CEA204B1-8994-4503-B71A-292DC63130FF

18 CHANNEL IP CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

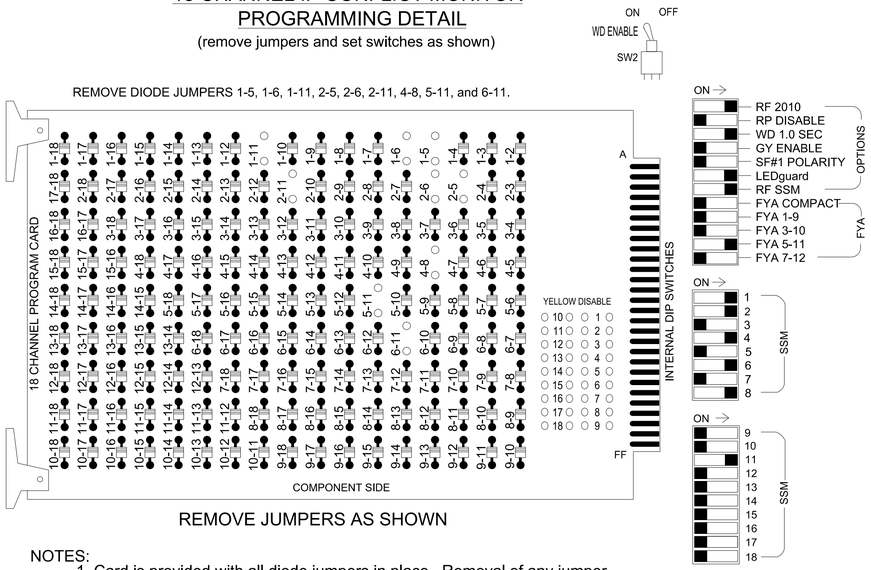

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that the Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
2. Program phases 4 and 8 for Dual Entry.
3. Program controller to start up in phase 2 Green No Walk and 6 Green No Walk.
4. If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.
5. The cabinet and controller are part of the Goldsboro Signal System.

EQUIPMENT INFORMATION

Controller.....2070LX
Cabinet.....332 w/ Aux
Software.....Q-Free MAXTIME
Cabinet Mount.....Base
Output File Positions.....18 With Aux. Output File
Load Switches Used.....S1,S2,S5,S7,S8,S11,AUXS4
Phases Used.....1,2,4,5,6,8
Overlap "1".....N/A
Overlap "2".....N/A
Overlap "3".....*
Overlap "4".....N/A

*See overlap programming detail on sheet 2

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OL1	OL2	SPARE	OL3	OL4	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	41,42	NU	51★	61,62	NU	NU	81,82	NU	NU	NU	NU	51★	NU	NU
RED		128			101			134			107							
YELLOW		129			102		*	135			108							
GREEN		130			103			136			109							
RED ARROW	125															A114		
YELLOW ARROW	126															A115		
FLASHING YELLOW ARROW																A116		
GREEN ARROW	127						133											

NU = Not Used

*Denotes install load resistor. See load resistor installation detail this sheet.

★See pictorial of head wiring in detail this sheet.

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

51

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	1O	11	12	13	14
FILE "I"	U	Ø 1 1A	Ø 2 2A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	Ø 4 4A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	FS DC ISOLATOR
	L	NOT USED	NOT USED				NOT USED								ST DC ISOLATOR
FILE "J"	U	Ø 5 5A	Ø 6 6A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	Ø 8 8A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
	L	NOT USED	NOT USED				Ø 8 8B								

EX. : 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT POINT	DETECTOR NO.	CALL PHASE	DELAY TIME	EXTEND TIME	EXTEND	ADDED INITIAL	CALL	DELAY DURING GREEN
1A	TB2-1,2	I1U	56	18	1	1	3.0		X		X	
2A	TB2-5,6	I2U	39	1	2	2			X	X	X	
4A	TB4-9,10	I6U	41	3	8	4			X		X	
5A	TB3-1,2	J1U	55	17	15★	5	10.0		X		X	
				-	31★	2	3.0		X		X	X
6A	TB3-5,6	J2U	40	2	16	6			X	X	X	
8A	TB5-9,10	J6U	42	4	22	8			X		X	
8B	TB5-11,12	J6L	46	8	23	8	15.0		X		X	

★For the detectors to work as shown on the signal desing plan, see the MAXTIME Detector Programming Detail for Alternate Phasing on sheet 2.

INPUT FILE POSITION LEGEND: J2L

FILE J
SLOT 2
LOWER

MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Front Panel
Main Menu >Controller >Unit

Web Interface
Home >Controller >Unit

Modify parameters as shown below and save changes.

Start Up Parameters

StartUp Clearance Hold
6

Unit Flash Parameters

All Red Flash Exit Time
6

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

ACCEPTABLE VALUES	
Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

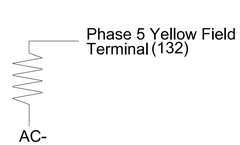

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 04-0423
DESIGNED: March 2025
SEALED: 8/18/2025
REVISED:

Stantec

Stantec Consulting Services Inc.
801 Jones Franklin Road-Suite 300
Raleigh, NC 27606
Tel. (919) 851-6866
Fax. (919) 851-7024
www.stantec.com
License No. F-0672

Electrical and Programming Details For:

Prepared for the Offices of:

Traffic Engineering Branch, Signals Management Section, Transportation Mobility and Safety Division, State of North Carolina Department of Transportation

750 N. Greenfield Pkwy, Garner, NC 27529

Electrical Detail - Sheet 1 of 2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SR 1003 (New Hope Road)
at
SR 1709 (Central Heights Road)

Division 4 Wayne County Goldsboro

PLAN DATE: March 2025		REVIEWED BY:	D A Waller
PREPARED BY: J Galloway		REVIEWED BY:	R M Muncey

REVISIONS	INIT.	DATE

NORTH CAROLINA PROFESSIONAL SEAL 029904 ENGINEER JASON E. GALLOWAY

Signed by: Jason Galloway 100 1E2B4084846E...

SIGNATURE 8/18/2025 DATE

SIG. INVENTORY NO. 04-0423

11:26:53 AM
U:\Workfiles\Signals\Design\Electrical Details\Final Design\040423_smuele.2025.dgn
User:jgalloway