PROJECT REFERENCE NO.	SHEET NO.
U-5302	Sig. 8.1

18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

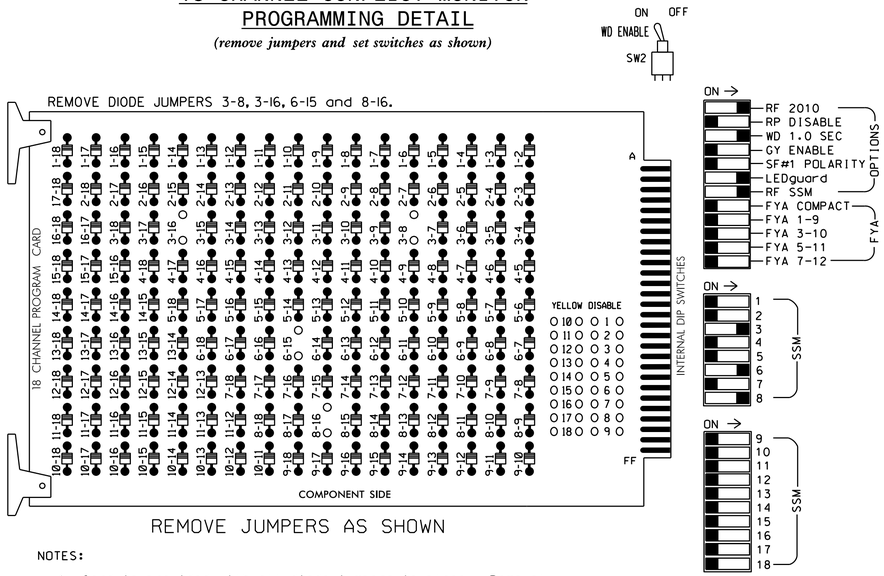

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Program controller to start up in phases 2 and 6 Green/ Don't Walk.
3. Enable simultaneous gap-out feature for all phases.
4. Program phases 3 and 8 for dual entry.
5. Program phase 6 for volume density operation.
6. The cabinet and controller are part of the Raleigh Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070LX
CABINET.....332 W/ AUX
SOFTWARE.....SE-PAC2070 ver 5.5 or later
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
LOAD SWITCHES USED.....S4,S8,S9,S11,S12
PHASES USED.....*2,3,6,6PED,8,8PED
OVERLAP "A".....NOT USED
OVERLAP "B".....NOT USED
OVERLAP "C".....NOT USED
OVERLAP "D".....NOT USED

* Phase used for timing purposes only.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8		S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6		15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6		6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	NC	NU	31,32	NU	NU	NU	61	62,63	P61, P62	NU	81,82	P81, P82	NU	NU	NU	NU	NU	NU
RED								134	134			107							
YELLOW								135	135										
GREEN									136										
RED ARROW				116															
YELLOW ARROW				117								108							
GREEN ARROW				118				136				109							
✋										119			110						
🚶										121			112						

NU = Not Used
NC = Not Connected

ALL RED FLASH STARTUP PROGRAMMING DETAIL

(program controller as shown below)

1. From Main Menu select [4 - UNIT DATA]
2. From UNIT DATA Submenu select [1 - STARTUP & MISC]

```
EPAC STARTUP & MISC
STARTUP TIME.:  6 (SEC) STATE: 2 (O-FL
RED REV/10...: 40 (TSEC)          1-RED
AUTO PED CLR.:  0 (O-NO  1-YES)   2-RAF)
STOP T RESET.:  0 (O-NO  1-YES)
SEQUENCE.....:  1 (1-19)
SPECIAL SEQ  :  0 (SEE HELP)
A-UP B-DN C-LT D-RT E-ENTER F-PRIOR MENU
```

STARTUP PROGRAMMING COMPLETE
PRESS 'F' TO RETURN TO UNIT DATA

INPUT FILE POSITION LAYOUT

(front view)

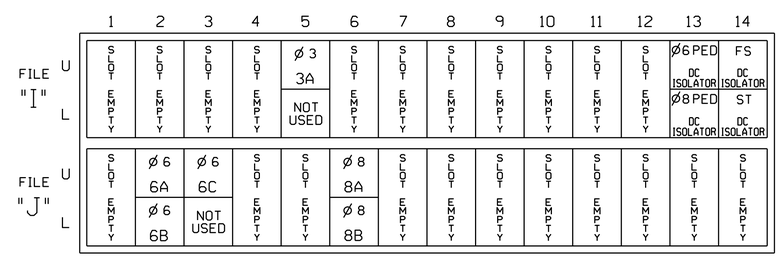

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	DETECTOR NO.	NEMA PHASE	DELAY TIME	EXTEND (STRETCH) TIME
3A	TB4-5,6	I5U	58	9	3		
6A	TB3-5,6	J2U	40	21	6		
6B	TB3-7,8	J2L	44	22	6		
6C	TB3-9,10	J3U	64	23	6		
8A	TB5-9,10	J6U	42	31	8	15	
8B	TB5-11,12	J6L	46	32	8	15	
PED PUSH BUTTONS							
P61,P62	TB8-7,9	I13U	68	PED 6	6 PED		
P81,P82	TB8-8,9	I13L	70	PED 8	8 PED		

NOTE:
INSTALL DC ISOLATORS IN INPUT FILE SLOT I13.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

INIT & N.A. RESP PROGRAMMING DETAIL

1. From Main Menu select [3 - PHASE DATA]
2. From PHASE DATA Submenu select [4 - INIT & N.A RESP]

Note Phases 1, 4, 5 and 7 NOT used!

```
PHASE......1...2...3...4...5...6...7...8
 INITIAL   0   6   1   0   0   6   0   1
 NA RESP   0   1   0   2   0   1   0   2
 UPDT GRN  0   0   0   0   0   0   0   0

CODES.....0....1....2....3....4....5...6
 INITL  NONE INACT RED  YEL  GRN  DRK G/DW
 NA RSP NONE  NA1  NA2  1&2  ---  --- ---
                                      ***
```

INIT & N.A. RESP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-1784
DESIGNED: February 2025
SEALED: 03/27/2025
REVISED: N/A

Electrical Detail - Sheet 1 of 2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared for the Offices of:
Transportation Mobility and Safety Division
Traffic Engineering & Safety Systems Branch
Signal Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

US 401 SB (Fayetteville Road)
at
SR 1374 (Farm Road)

Division 5 Wake County Raleigh

PLAN DATE: March 2025 REVIEWED BY:
PREPARED BY: S.Kirkpatrick REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 036833 ENGINEER RYAN W. HOUGH
Signed by: Ryan W. Hough
A3D3D0EA6365AC8...
03/28/2025
SIGNATURE DATE
SIG. INVENTORY NO. 05-1784

28-MAR-2025 08:05
dgn=/projects.bentley.com:ncdot-pw-01/Documents/NCDOT TSMO/Signal Design Section/Division_05/05-1784/Signals Management/051784_sm_ele_20250328.dgn
User=SKirkpatrick