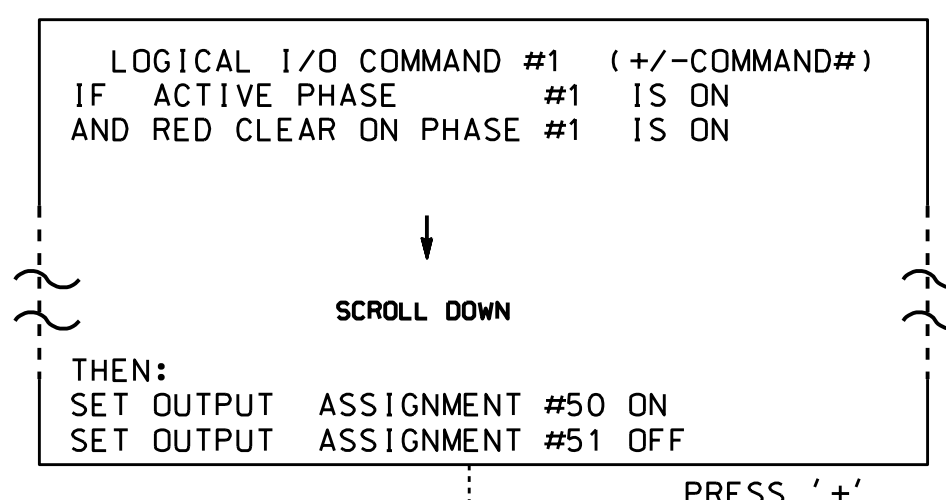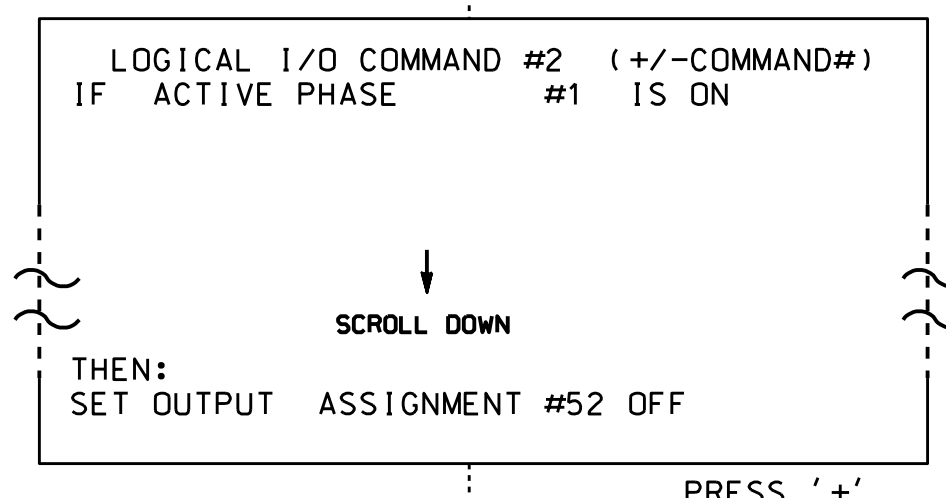## LOGICAL I/O PROCESSOR PROGRAMMING DETAIL

TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE
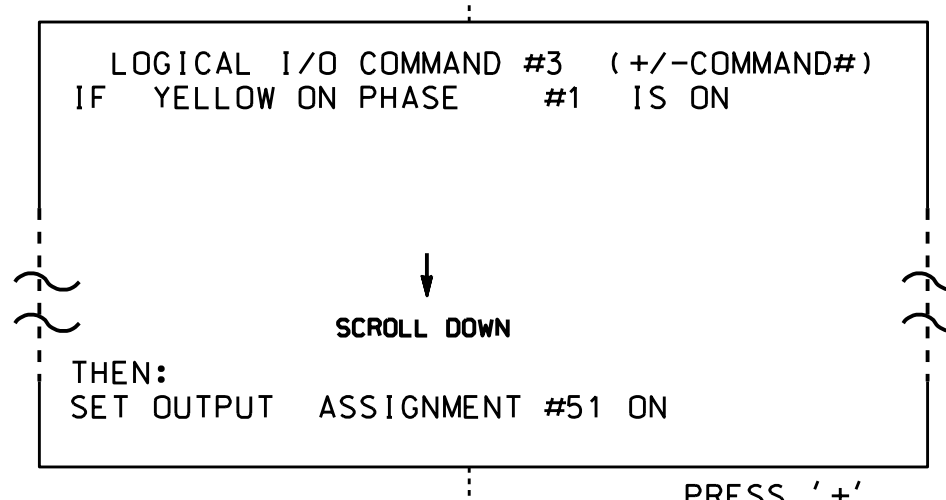
(program controller as shown below)

1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5 AND 6.

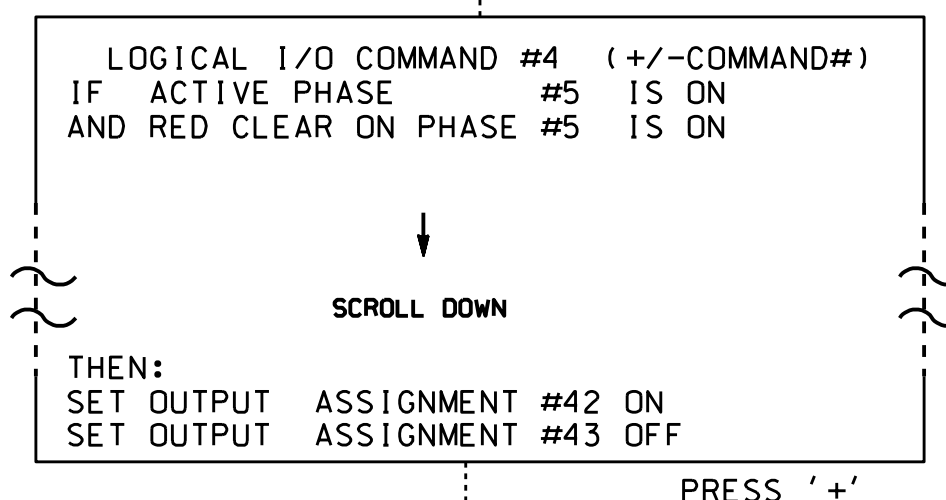2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

```
LOGICAL I/O COMMAND #1   (+/-COMMAND#)
IF  ACTIVE PHASE      #1   IS ON
AND RED CLEAR ON PHASE #1  IS ON

              ↓
          SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #50 ON
SET OUTPUT  ASSIGNMENT #51 OFF
                        PRESS '+'
```
NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

```
LOGICAL I/O COMMAND #2   (+/-COMMAND#)
IF  ACTIVE PHASE      #1   IS ON

              ↓
          SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #52 OFF
                        PRESS '+'
```
NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

```
LOGICAL I/O COMMAND #3   (+/-COMMAND#)
IF  YELLOW ON PHASE   #1   IS ON

              ↓
          SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #51 ON
                        PRESS '+'
```
NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

```
LOGICAL I/O COMMAND #4   (+/-COMMAND#)
IF  ACTIVE PHASE      #5   IS ON
AND RED CLEAR ON PHASE #5  IS ON

              ↓
          SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #42 ON
SET OUTPUT  ASSIGNMENT #43 OFF
                        PRESS '+'
```
NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).
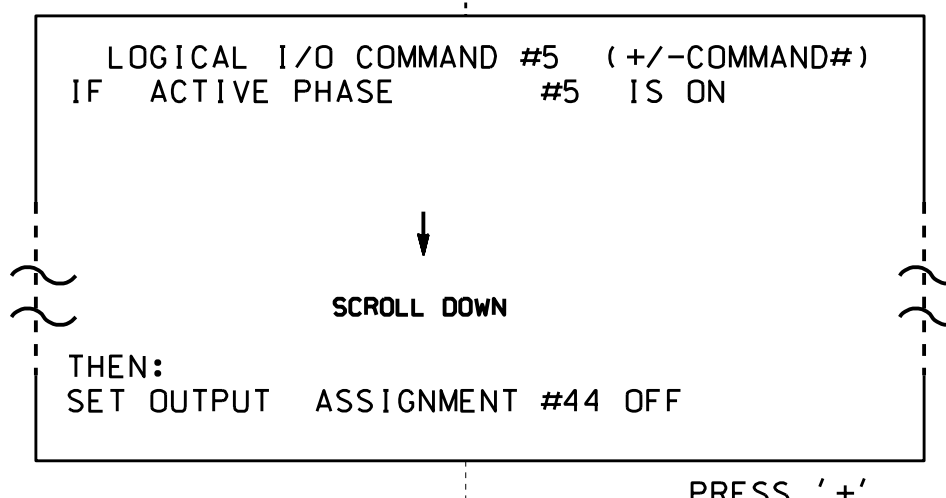
```
LOGICAL I/O COMMAND #5   (+/-COMMAND#)
IF  ACTIVE PHASE      #5   IS ON

              ↓
          SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #44 OFF
                        PRESS '+'
```
NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).
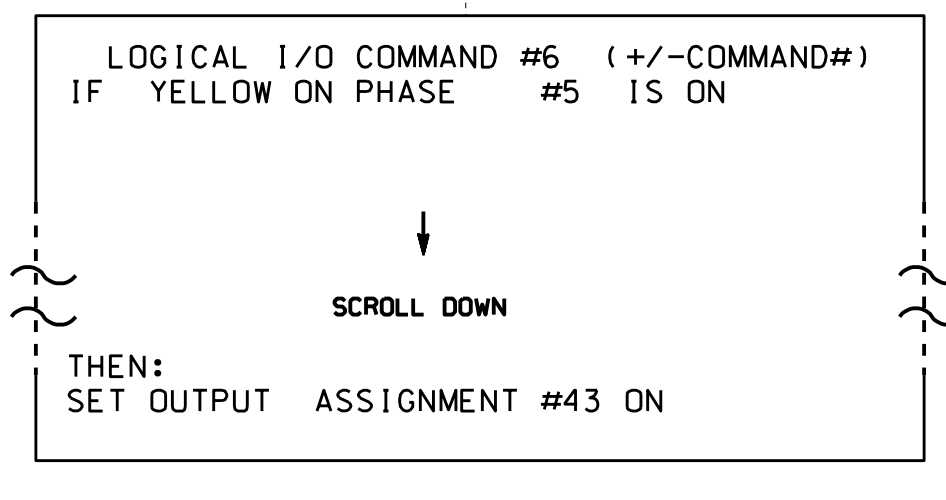
```
LOGICAL I/O COMMAND #6   (+/-COMMAND#)
IF  YELLOW ON PHASE   #5   IS ON

              ↓
          SCROLL DOWN

THEN:
SET OUTPUT  ASSIGNMENT #43 ON
```
NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE

```
OUTPUT 42 = Overlap C Red
OUTPUT 43 = Overlap C Yellow
OUTPUT 44 = Overlap C Green
OUTPUT 50 = Overlap A Red
OUTPUT 51 = Overlap A Yellow
OUTPUT 52 = Overlap A Green
```

OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

```
PAGE 1: VEHICLE OVERLAP 'A' SETTINGS
  PHASE:             :1234567891011213141516
VEH OVL PARENTS::XX
VEH OVL NOT VEH::
VEH OVL NOT PED::
VEH OVL GRN EXT::
STARTUP COLOR: _ RED  _ YELLOW  _ GREEN
FLASH COLORS:  _ RED  _ YELLOW  X GREEN      ← NOTICE GREEN FLASH
SELECT VEHICLE OVERLAP OPTIONS:    (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)........O
YELLOW CLEAR (O=PARENT,3-25.5 SEC)..O.O
RED CLEAR (O=PARENT,0.1-25.5 SEC)...O.O
OUTPUT AS PHASE # (O=NONE, 1-16)....O
```
PRESS '+' TWICE

```
PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
  PHASE:             :1234567891011213141516
VEH OVL PARENTS::      XX
VEH OVL NOT VEH::
VEH OVL NOT PED::
VEH OVL GRN EXT::
STARTUP COLOR: _ RED  _ YELLOW  _ GREEN
FLASH COLORS:  _ RED  _ YELLOW  X GREEN      ← NOTICE GREEN FLASH
SELECT VEHICLE OVERLAP OPTIONS:    (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)........O
YELLOW CLEAR (O=PARENT,3-25.5 SEC)..O.O
RED CLEAR (O=PARENT,0.1-25.5 SEC)...O.O
OUTPUT AS PHASE # (O=NONE, 1-16)....O
```

OVERLAP PROGRAMMING COMPLETE

PED 3 PROGRAMMING DETAIL

(program controller as shown below)

CHANGING OUTPUT ASSIGNMENTS

1. FROM MAIN MENU SELECT '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS)

2. ENTER 17 (PHASE 8 DW) FOR OUTPUT ASSIGNMENT #.

3. SCROLL DOWN TO 'PEDESTRIAN PHASE' AND ENTER 'Y' REGARDLESS OF DEFAULT PROGRAMMING

4. ENTER '3' FOR 'SELECT PEDESTRIAN PHASE'. NO CHANGE NEEDED FOR 'SELECT COLOR'

5. BACKUP TO 'OUTPUT ASSIGNMENTS AND SETTINGS MENU:' BY PRESSING THE 'ESC' BUTTON ON KEYBOARD.

6. SELECT '1' (OUTPUT ASSIGNMENTS)

7. ENTER 18 (PHASE 8 W) FOR OUTPUT ASSIGNMENT #.

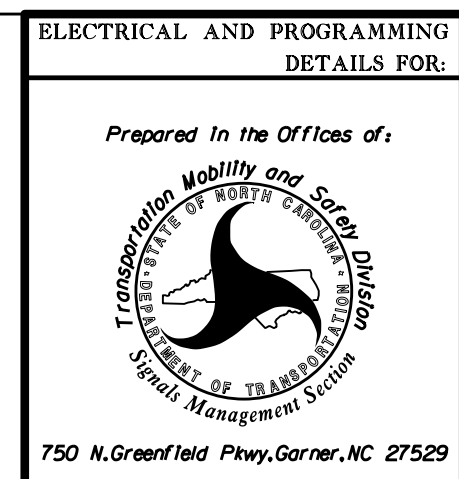8. REPEAT STEPS # 3 AND # 4.

CHANGING INPUT ASSIGNMENTS

1. FROM MAIN MENU SELECT '7' (DETECTORS), THEN '2' (PEDESTRIAN DETECTOR ASSIGNMENTS)

2. CYCLE TO PED DETECTOR #8 BY REPEATEDLY DEPRESSING '+' KEY

3. MODIFY PHASE ASSIGNED TO PED DETECTOR # 8 FROM PHASE 8 TO PHASE 3

PROGRAMMING COMPLETE

Electrical Detail - Sheet 2 of 2

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 13-1129
DESIGNED: June 2016
SEALED: 9/2/2016
REVISED:

ELECTRICAL AND PROGRAMMING
DETAILS FOR:

Prepared in the Offices of:

Transportation Mobility and Safety Division
Signal Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

US 19-23 (Patton Avenue)
at
Parkwood Road/Wilburn Road

Division 13	Buncombe County	Asheville
PLAN DATE: August 2016		REVIEWED BY: T. Joyce
PREPARED BY: C. Strickland		REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA
SEAL
030530
ZACHARY M. LITTLE
ENGINEER

DocuSigned by:
Zachary M. Little 9/6/2016
DATE
SIG. INVENTORY NO. 13-1129