DocuSign Envelope ID: 76AEEEE8-F9B4-4C51-AB0B-242AF0C7BF1E

PROJECT REFERENCE NO.	SHEET NO.
BR-0041	Sig. 13.1

18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

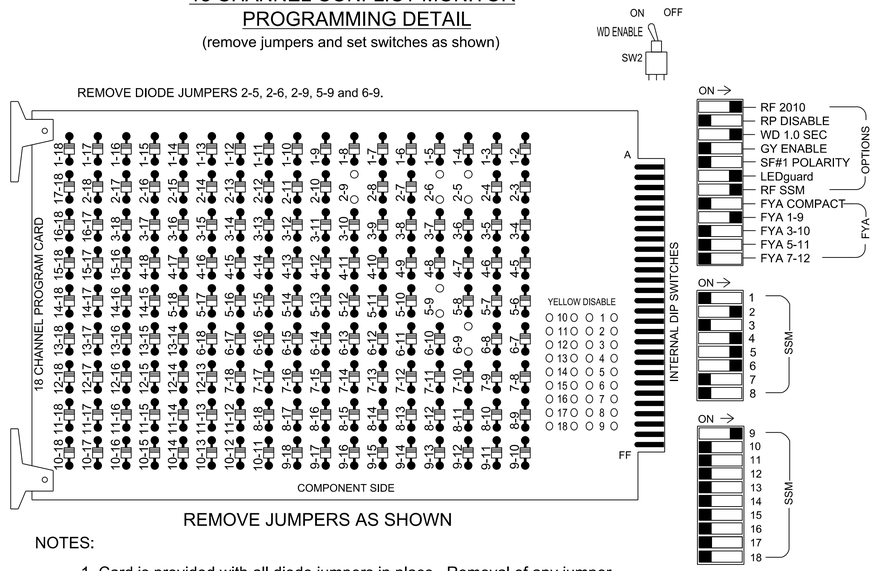

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that the Red Enable is active at all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
2. Program controller to start up in phase 2 Green No Walk and 6 Green No Walk.
3. If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.
4. The cabinet and controller are part of NC 87/ SR 2817 (Barnes Street) Closed Loop System. Signal System #: D07-10 Reidsville.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7		S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5		6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5		6	6 PED	7	8	8 PED	OL1	OL2	SPARE	OL3	OL4	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	NU	42	51,52	62,63	NU	NU	NU	NU	61★	NU	NU	NU	NU	NU
RED		128			101		*		134										
YELLOW		129			102				135										
GREEN		130			103				136										
RED ARROW								131						A121					
YELLOW ARROW							132	132						A122					
FLASHING YELLOW ARROW														A123					
GREEN ARROW							133	133											

NU = Not Used

*Denotes install load resistor. See load resistor installation detail this sheet.

★See pictorial of head wiring in detail this sheet.

EQUIPMENT INFORMATION

Controller.....2070LX
Cabinet.....332 w/ Aux
Software.....Q-Free MAXTIME
Cabinet Mount.....BASE
Output File Positions.....18 With Aux. Output File
Load Switches Used.....S2, S5, S7, S8, AUX S1
Phases Used.....2, 4, 5, 6
Overlap "1".....*
Overlap "2".....NOT USED
Overlap "3".....NOT USED
Overlap "4".....NOT USED

*See overlap programming detail on this sheet.

FYA SIGNAL WIRING DETAIL

(wire signal head as shown)

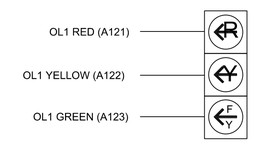

61

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	1O	11	12	13	14
FILE "I"	U	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	Ø 4 4A	SLOT EMPTY	SLOT EMPTY	SYS. DET. S7	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	FS DC ISOLATOR
	L						NOT USED			SYS. DET. S8					ST DC ISOLATOR
FILE "J"	U	Ø 5 5A	Ø 5 5B	Ø 6 6A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
	L	NOT USED		Ø 5 5C	Ø 6 6B										

EX. : 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT POINT	DETECTOR NO.	CALL PHASE	DELAY TIME	EXTEND TIME	EXTEND	ADDED INITIAL	QUEUE	CALL	PASSAGE 2
4A	TB4-9,10	I6U	41	3	8	4	3		X			X	
*S7	TB6-9,10	I9U	60	22	13	SYS							
*S8	TB6-11,12	I9L	62	24	14	SYS							
5A	TB3-1,2	J1U	55	17	15	5	3		X			X	
5B	TB3-5,6	J2U	40	2	16	5			X			X	
5C	TB3-7,8	J2L	44	6	17	5	15		X			X	
6A	TB3-9,10	J3U	64	30	18	6			X	X		X	
6B	TB3-11,12	J3L	77	43	19	6			X	X		X	

*System detector only. Remove any assigned vehicle phase.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

OVERLAP PROGRAMMING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	2	3	4
Type	FYA 4 - Section	-	-	-
Included Phases	2	-	-	-
Modifier Phases	-	-	-	-
Trail Green	0	-	-	-
Trail Yellow	0.0	-	-	-
Trail Red	0.0	-	-	-

LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown)

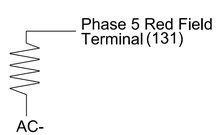

ACCEPTABLE VALUES	
Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

SPECIAL DETECTOR NOTE

Install a video detection system for vehicle detection for Zones 2A and 2B. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 07-0888T
DESIGNED: Jan 2023
SEALED: 3/10/2023
REVISED:

AECOM
NC Firm License No.: F-0342
5438 Wade Park Boulevard
Suite 200, Raleigh, NC 27607
Phone: 919-461-1100

Temporary Design (TMP Phase II)
Electrical Detail

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Electrical and Programming Details For:

Prepared for the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
ITS & Signals Management Section
750 N. Greenfield Pkwy, Garner, NC 27529

SR 2817 (Barnes Street)
at
SR 3103 (Diesel Drive)

Division 7 Rockingham County Reidsville

PLAN DATE:	January 2023	REVIEWED BY:	H M Surti
PREPARED BY:	A Ravipati	REVIEWED BY:	

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 034481 ENGINEER HEMANG M. SURTI

DocuSigned by:
Hemang M. Surti 3/10/2023
A5C3B9D6C7A64B1...

SIG. INVENTORY NO. 07-0888T

3/10/2023
pw:\\aecomnonprod.bentley.com:AECOM_DS21_NA_2020\Documents\60581577-NCDOT SMU BR-0041\900-CAD GIS\910_CAD\70_NCDOT_TIP\Signals\Design\Electrical Details_2022\MAXTIME_3-10-23\07088T_smu_ele_2022XXX.dgn
michael.cavenaugh