Docusign Envelope ID: EDBF09DE-B24D-4F89-928A-48F3924CA521

PROJECT REFERENCE NO.	SHEET NO.
R-5600	Sig-41.1

18 CHANNEL IP CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

REMOVE DIODE JUMPERS
1-3, 1-5, 1-6, 1-9, 1-10, 1-11, 1-12, 1-15, 2-5, 2-6, 2-9, 2-11, 2-12, 2-13, 2-15, 2-18, 3-5, 3-6, 3-9, 3-10, 3-11,3-12, 3-15, 4-8, 4-10, 4-12, 4-16, 5-9, 5-10, 5-11, 5-12, 5-13, 5-18, 6-9, 6-10, 6-11, 6-13, 6-15, 6-18, 8-10, 8-12, 8-16, 9-10, 9-11, 9-12, 9-13, 9-15, 9-18, 10-11, 10-12, 10-15, 10-16, 11-12, 11-13, 11-15, 11-18, 12-13, 12-16, 12-18, 13-15, 13-18 AND 15-18.

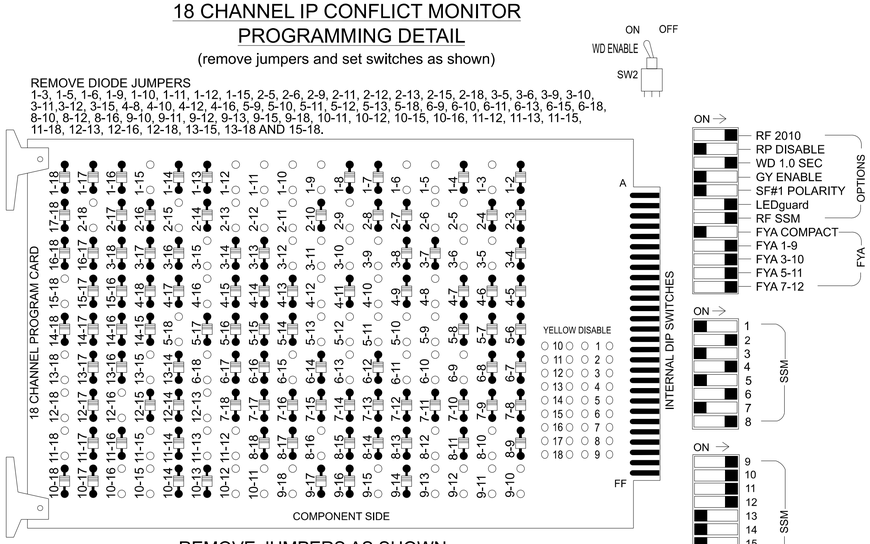

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that the Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

REMOVE JUMPERS AS SHOWN

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
2. Program phases 4 and 8 for Dual Entry.
3. Program controller to start up in phase 2 Green No Walk and 6 Green No Walk.
4. If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.
5. The cabinet and controller are part of the XXX Time Based Coordination System.

EQUIPMENT INFORMATION

Controller.....2070LX
Cabinet.....332 w/ Aux
Software.....Q-Free MAXTIME
Cabinet Mount.....Base
Output File Positions.....18 With Aux. Output File
Load Switches Used.....S1, S2, S3, S4, S5, S7, S8, S10, S11, S12, AUX S1, AUX S2, AUX S4, AUX S5, AUX S6
Phases Used.....1, 2, 2 PED, 4, 5, 6, 6 PED, 8, 8 PED
Overlap "1".....*
Overlap "2".....*
Overlap "3".....*
Overlap "4".....*
Overlap "5".....NOT USED
Overlap "6".....*
Overlap "7".....*

*See overlap programming detail on sheet 2.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	OL7	4	4 PED	5	6	6 PED	7	8	8 PED	OL1	OL2	SPARE	OL3	OL4	OL6
SIGNAL HEAD NO.	11★	21,22	P21, P22	83★	41,42	NU	51★	61,62	NU	P61, P62	81,82	P81, P82	11★	83★	NU	51★	43★	23★
RED		128			101			134			107			A124			A101	A104
YELLOW	*	129		*	102		*	135			108							
GREEN		130			103			136			109							
RED ARROW													A121			A114		
YELLOW ARROW													A122	A125		A115	A102	A105
FLASHING YELLOW ARROW													A123	A126		A116	A103	A106
GREEN ARROW	127			118			133											
✋			113						119			110						
🚶			115						121			112						

NU = Not Used NC = Not Connected
* Denotes install load resistor. See load resistor installation detail this sheet.
★ See pictorial of head wiring in detail this sheet.

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

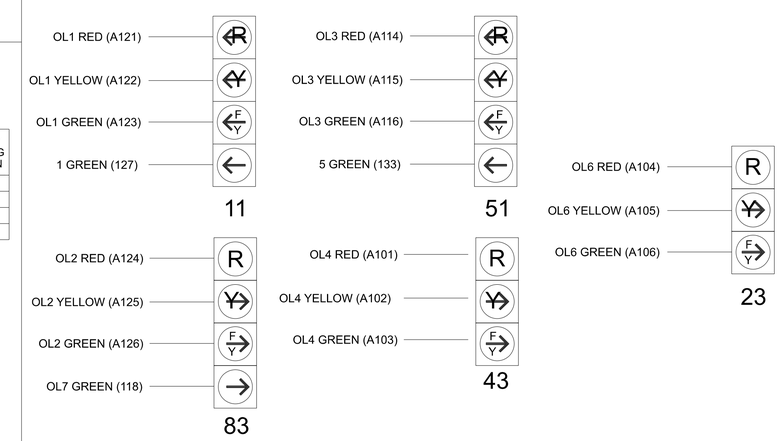

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	1O	11	12	13	14
FILE "I"	U	∅ 1 1A	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	∅ 2 PED DC ISOLATOR	∅ 6 PED DC ISOLATOR	FS DC ISOLATOR
	L	NOT USED	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	NOT USED	∅ 8 PED DC ISOLATOR	ST DC ISOLATOR
FILE "J"	U	∅ 5 5A	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT
	L	NOT USED	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

Note: For Detection Zones 1A and 5A the equipment and slots reserved are typical for a NCDOT installation.

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT POINT	DETECTOR NO.	CALL PHASE	DELAY TIME	EXTEND TIME	EXTEND	ADDED INITIAL	CALL	DELAY DURING GREEN
1A	TB2-1,2	I1U	56	18	1	1	15.0		X		X	
				-	29	6			X		X	
5A	TB3-1,2	J1U	55	17	15	5	15.0		X		X	
				-	31	2			X		X	
PED PUSH BUTTONS												
P21,P22	TB8-4,6	I12U	67	33	2	PED 2						
P61,P62	TB8-7,9	I13U	68	34	6	PED 6						
P81,P82	TB8-8,9	I13L	70	36	8	PED 8						

NOTE:
INSTALL DC ISOLATORS IN INPUT FILE SLOTS I12 AND I13.

*System detector only. Remove any assigned vehicle phase.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

ACCEPTABLE VALUES	
Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

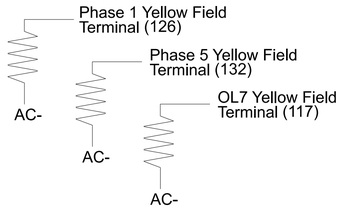

SPECIAL DETECTOR NOTE

1. Install a multi-zone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer -approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.
2. For Detection Zones 1A and 5A, the equipement placement is typical for a NCDOT installation.

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 14-0790T4
DESIGNED: Aug 2025
SEALED: 8/26/2025
REVISED: N/A

Electrical Detail - Sheet 1 of 2
Temporary Design 4 - TMP Ph3, S1

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR:

NC 107
at
SR 1724 (Fairview Road) /
CVS Driveway

Division 14 Jackson County Sylva

PLAN DATE:	August 2025	REVIEWED BY:	ZM Esposito
PREPARED BY:	DS Griffith	REVIEWED BY:	BN Groome

REVISIONS | INIT. | DATE

750 N.Greenfield Pkwy,Garner,NC 27529

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 052936 ENGINEER BRITTANY N GROOME

Signed by: Brittany Groome 1E09340E1D9465A... 8/26/2025
DATE

SIG. INVENTORY NO. 14-0790T4

Plans Prepared By:
DRMP
DRMP, INC.
8210 UNIVERSITY EXECUTIVE PARK DR.
SUITE 220
CHARLOTTE, NC 28262
NC LICENSE NO. F-1524 (704) 549-4260

21-AUG-2025 12:11
dgriffith
S:\Traffic\Signals\Design\Signal Management\14-0790\14-0790T4_smuele.2025mmds.dgn
S:\Structure\Traffic\Signals\Design\Signal Management\14-0790\14-0790T4_smuele.2025mmds.dgn
S:\Western_Div_On-Call_MC_NCDOT_6170_R5600_NC170_US258US/6.0_CAD_BIM/6.2_Work_In_Progress/R-5600 NCDOT File Structure
Documents/NCDOT/NCDOT_Western_Div_On-Call_MC_NCDOT_6170_R5600_NC170_US258US/6.0_CAD_BIM/6.2_Work_In_Progress/R-5600 NCDOT File Structure
dgriffith AT CH4-DGRIFFITH