

OVERLAP PROGRAMMING DETAIL FOR OVERLAPS A AND C*

(program controller as shown below)

*NOTE FOR ALL OVERLAPS: Use Default values for Overlap 'PLUS' programming details.

FROM MAIN MENU PRESS "1" CONTROLLER
AND THEN "5" OVERLAPS

Overlaps
1.General Parm
2.Program
3.Status

Enter Overlap # 1
then press Enter

Overlap A-1
1.Program Parm
2.Confl Prog+
3.Program Parm+

Ovr1p A-1 Ps.....
Included Ps 2 0 0 0 0 0 0 0
Modifier Ps 0 0 0 0 0 0 0 0
Type:NORMAL Grn: 0 Yel: 3.5 Red: 1.5

PRESS "ESC" TWICE

Enter Overlap # 3
then press Enter

Overlap C-3
1.Program Parm
2.Confl Prog+
3.Program Parm+

Ovr1p C-3 Ps.....
Included Ps 5 0 0 0 0 0 0 0
Modifier Ps 6 0 0 0 0 0 0 0
Type:FYA-4 Grn: 0 Yel: 3.5 Red: 1.5

PRESS "ESC" THREE TIMES

Notice
type
FYA-4 →

Overlaps
1.General Parm
2.Program
3.Status

General Overlap Parameters
Lock Inhibit OFF
Confl Lock Enable OFF
Parent P Cirnc ON
Extra Included Phases OFF
InhibitLockInterval ALWAYS

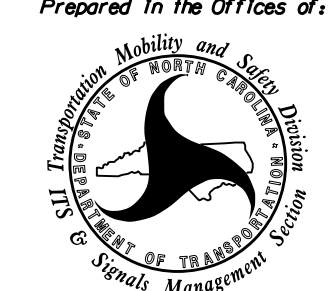
OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: GBO-559
DESIGNED: October 2017
SEALED: 10/31/2017
REVISED:

Electrical Detail - Sheet 2 of 3

DOCUMENT NOT CONSIDERED
FINAL UNLESS ALL
SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING
DETAILS FOR:

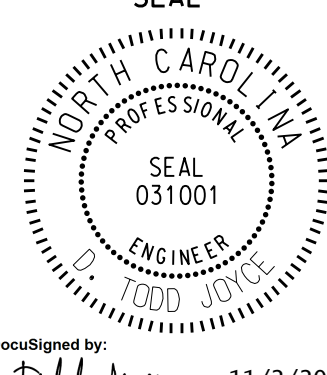
Prepared In the Offices of:

 750 N. Greenfield Pkwy, Garner, NC 27529


N. Elm Street
at
United Health Care and
Lake Jeanette Office Park

Division 7 Guilford County Greensboro

PLAN DATE: October 2017 REVIEWED BY: T. Joyce
PREPARED BY: C. Strickland REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL

 SEAL 031001
 ENGINEER
 TODD JOYCE

DocuSigned by:

 11/2/2017

SIG. INVENTORY NO. GBO-559

09-10-2017 09:56
 C:\NTS\2017\Signal\work\hous\sig\Main\Strickland\hous-559_sim\ele_xxx.dgn
 C:\NTS\2017\Signal\work\hous\sig\Main\Strickland