


EDI MODEL 2010ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

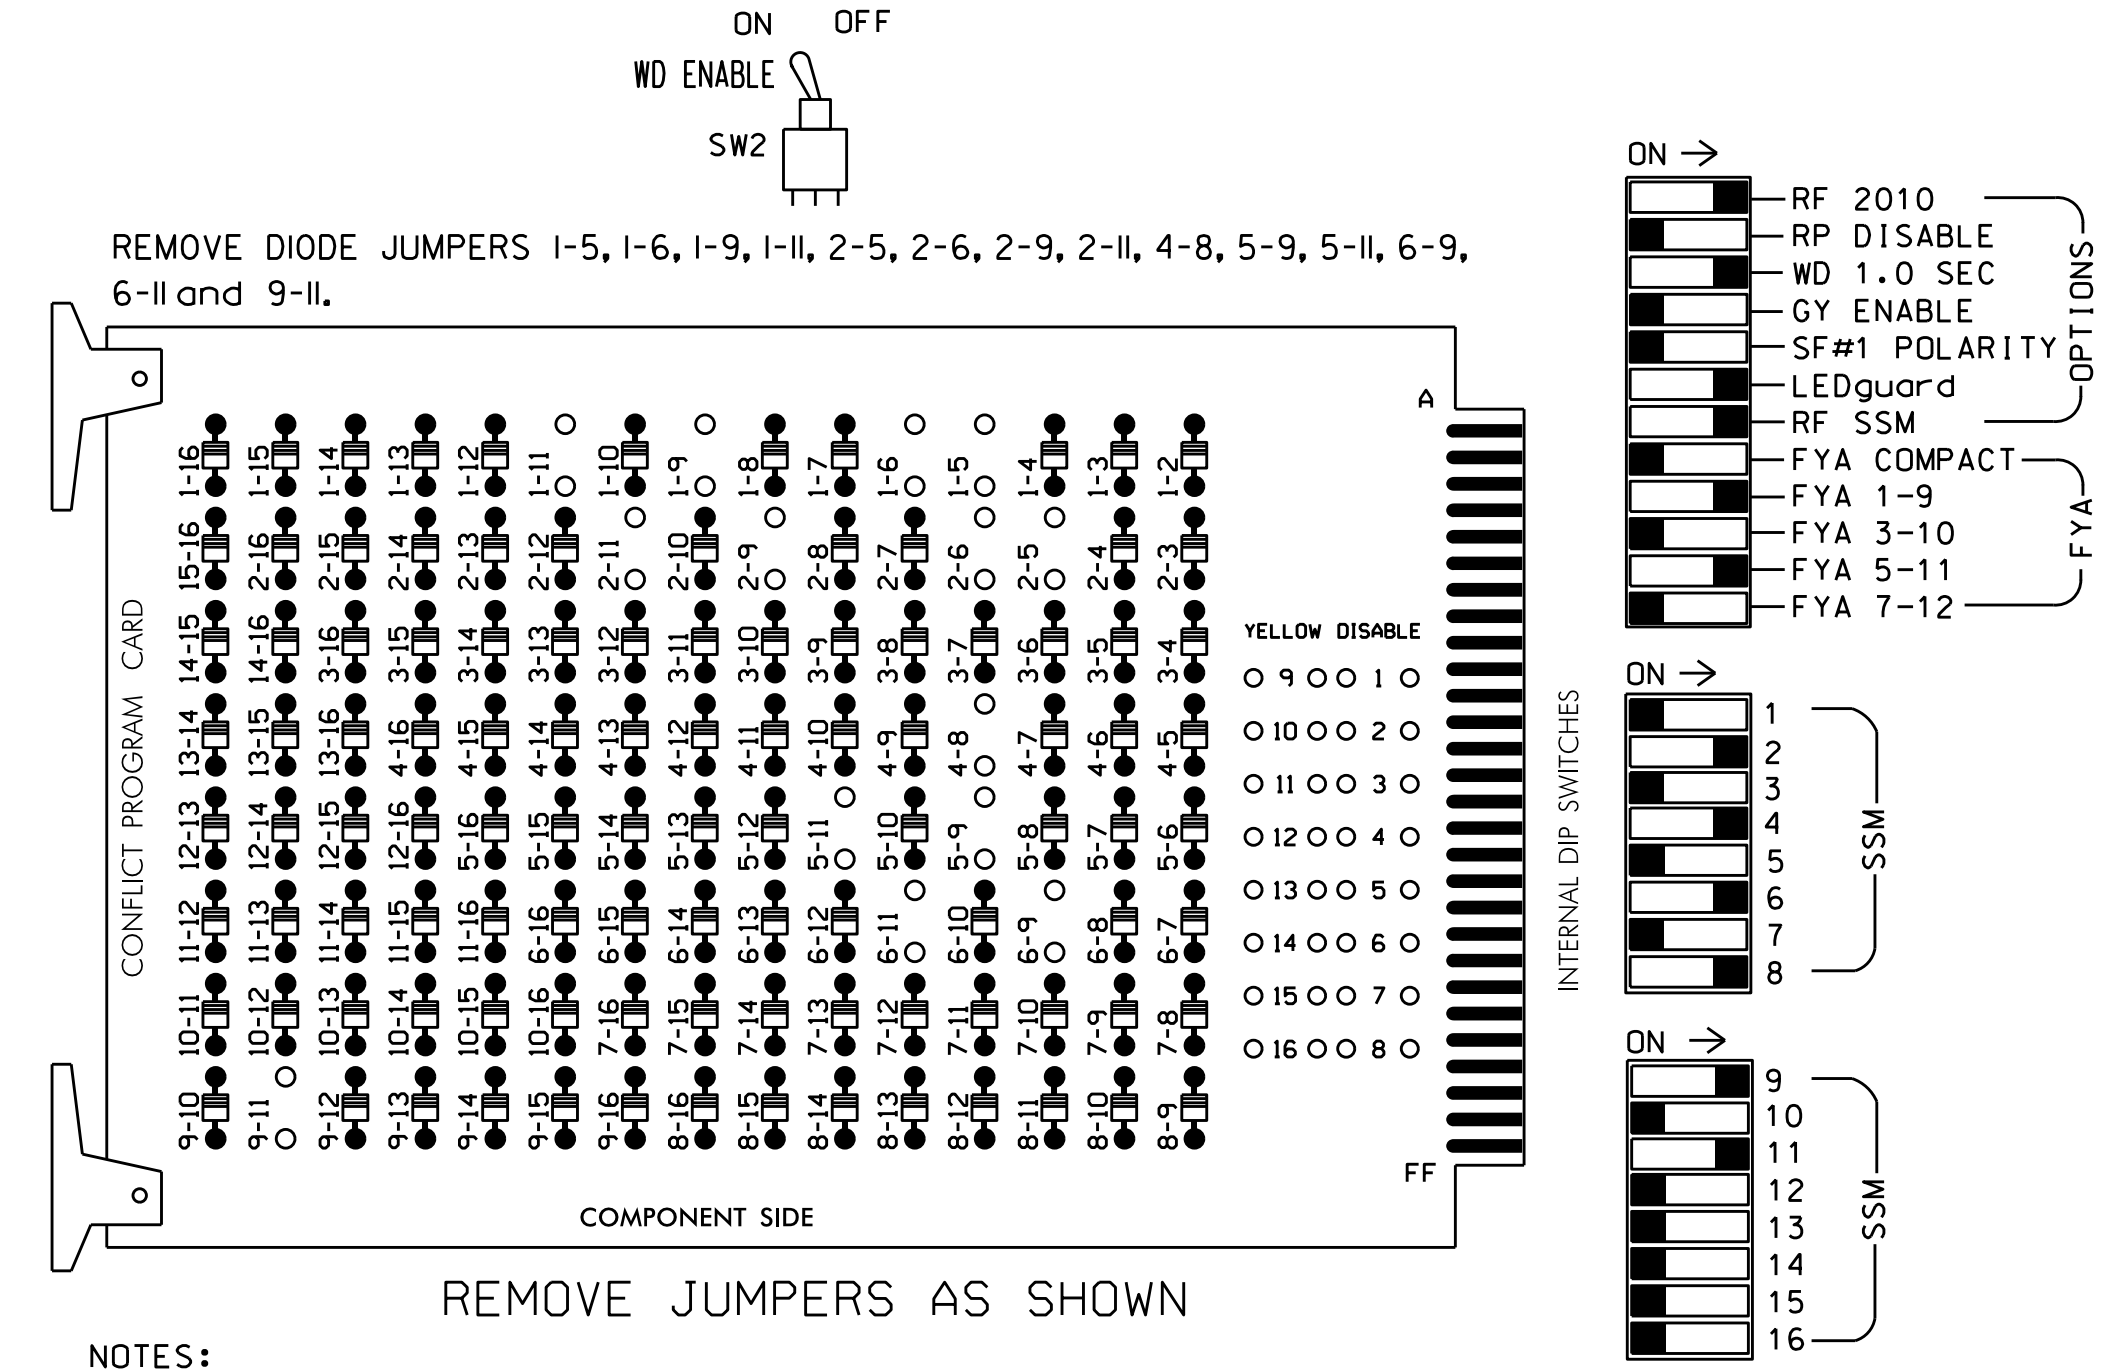

- REMOVE DIODE JUMPERS 1-5, 1-6, 1-9, 1-11, 2-5, 2-6, 2-9, 2-11, 4-8, 5-9, 5-11, 6-9, 6-11 and 9-11.
- REMOVE JUMPERS AS SHOWN
- NOTES:
- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
 - Make sure jumpers SEL2-SEL5 are present on the monitor board.

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 1,3,5,7,10,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for Variable Initial and Gap Reduction.
- Program phases 2 and 6 for Start Up In Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlaps.
- The cabinet and controller are part of the Wilmington City System.

SIGNAL HEAD HOOK-UP CHART

| LOAD SWITCH NO. | S1 | S2 | S2P | S3 | S4 | S4P | S5 | S6 | S6P | S7 | S8 | S8P | S9 | S10 | S11 | S12 | S13 | S14 |
|-----------------------|-----|-------|-------|----|-------|-------|-----|-------|-------|----|-------|-------|------|-----|-------|------|-----|-------|
| PHASE | 1 | 2 | 2 PED | 3 | 4 | 4 PED | 5 | 6 | 6 PED | 7 | 8 | 8 PED | OLA | OLB | SPARE | OLC | OLD | SPARE |
| SIGNAL HEAD NO. | 11* | 21,22 | NU | NU | 41,42 | NU | 51* | 61,62 | NU | NU | 81,82 | NU | 11* | NU | NU | 51* | NU | NU |
| RED | | 128 | | | 101 | | | 134 | | | 107 | | | | | | | |
| YELLOW | * | 129 | | | 102 | | * | 135 | | | 108 | | | | | | | |
| GREEN | | 130 | | | 103 | | | 136 | | | 109 | | | | | | | |
| RED ARROW | | | | | | | | | | | | | A121 | | | A114 | | |
| YELLOW ARROW | | | | | | | | | | | | | A122 | | | A115 | | |
| FLASHING YELLOW ARROW | | | | | | | | | | | | | A123 | | | A116 | | |
| GREEN ARROW | 127 | | | | | | | 133 | | | | | | | | | | |


NU = Not Used
 * Denotes install load resistor. See load resistor installation detail this sheet.
 ★ See pictorial of head wiring in detail below.

EQUIPMENT INFORMATION

CONTROLLER.....2070L
 CABINET.....332 /W/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S1,S2,S4,S5,S6,S8,S9,S12
 PHASES USED.....1,2,4,5,6,8
 OVERLAP "A".....1+2
 OVERLAP "B".....NOT USED
 OVERLAP "C".....5+6
 OVERLAP "D".....NOT USED

4 SECTION FYA PPLT SIGNAL WIRING DETAIL

(wire signal heads as shown)

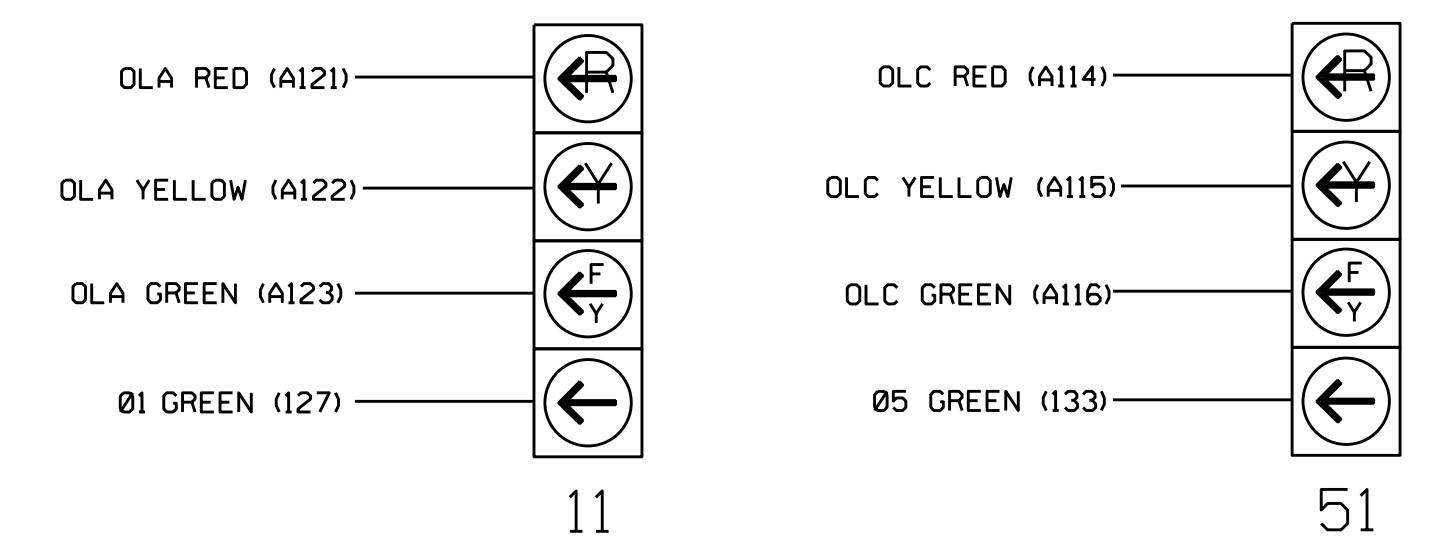

- NOTE
- The sequence display for this signal requires special logic programming. See sheet 2 of 2 for programming instructions.

INPUT FILE POSITION LAYOUT

(front view)

| FILE | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 |
|------|-----|-----|-----|-----|-----|------|------|------|------|------|------|------|------|------|
| U | ∅ 1 | ∅ 2 | ∅ 3 | ∅ 4 | ∅ 5 | ∅ 6 | ∅ 7 | ∅ 8 | ∅ 9 | ∅ 10 | ∅ 11 | ∅ 12 | ∅ 13 | ∅ 14 |
| L | 1A | 2A | 3A | 4A | 5A | 6A | 7A | 8A | 9A | 10A | 11A | 12A | 13A | 14A |
| U | ∅ 5 | ∅ 6 | ∅ 7 | ∅ 8 | ∅ 9 | ∅ 10 | ∅ 11 | ∅ 12 | ∅ 13 | ∅ 14 | ∅ 15 | ∅ 16 | ∅ 17 | ∅ 18 |
| L | 5A | 6A | 7A | 8A | 9A | 10A | 11A | 12A | 13A | 14A | 15A | 16A | 17A | 18A |

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE
 ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card

INPUT FILE CONNECTION & PROGRAMMING CHART


| LOOP NO. | LOOP TERMINAL | INPUT FILE POS. | PIN NO. | INPUT ASSIGNMENT NO. | DETECTOR NO. | NEMA PHASE | CALL | EXTEND | FULL TIME DELAY | STRETCH TIME | DELAY TIME |
|-----------------|---------------|-----------------|---------|----------------------|--------------|------------|------|--------|-----------------|--------------|------------|
| 1A ¹ | TB2-1,2 | I1U | 56 | 18 | 1 | 1 | Y | Y | | | 10 |
| | | J4U | 48 | 10 | 26 | 6 | Y | Y | Y | | 3 |
| 2A | TB2-5,6 | I2U | 39 | 1 | 2 | 2 | Y | Y | | | |
| 2B | TB2-7,8 | I2L | 43 | 5 | 12 | 2 | Y | Y | | | |
| 4A | TB4-9,10 | I6U | 41 | 3 | 4 | 4 | Y | Y | | | 3 |
| 5A ² | TB3-1,2 | J1U | 65 | 17 | 5 | 5 | Y | Y | | | 10 |
| | | I4U | 47 | 9 | 22 | 2 | Y | Y | Y | | 3 |
| 6A | TB3-5,6 | J2U | 40 | 2 | 6 | 6 | Y | Y | | | |
| 6B | TB3-7,8 | J2L | 44 | 6 | 16 | 6 | Y | Y | | | |
| 8A | TB5-9,10 | J6U | 42 | 4 | 8 | 8 | Y | Y | | | 3 |
| 8B | TB5-11,12 | J6L | 46 | 8 | 18 | 8 | Y | Y | | | 15 |

- Add jumper from I1-W to J4-W, on rear of input file.
- Add jumper from J1-W to I4-W, on rear of input file.

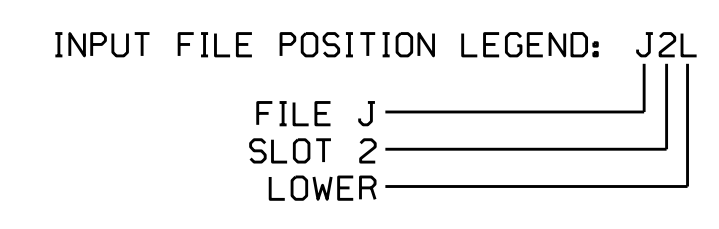

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

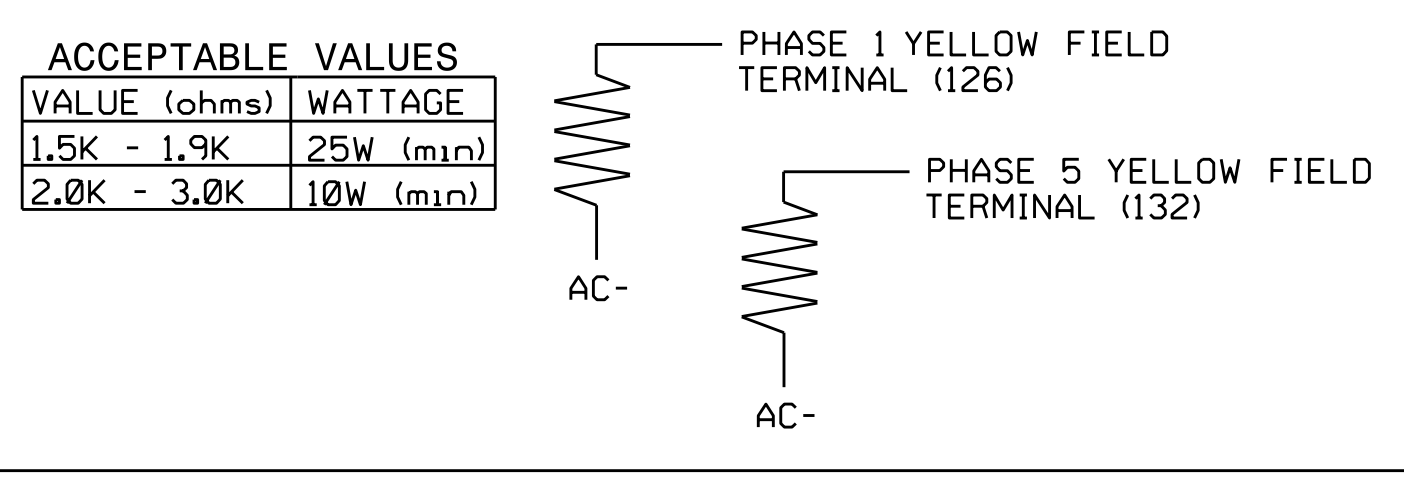

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0832
 DESIGNED: July 2015
 SEALED: 7-28-15
 REVISED: N/A

This Electrical Detail supersedes the detail sealed on 7-15-14.

Electrical Detail - Sheet 1 of 2

| | | | |
|--|---|--|----------|
| ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared In the Offices of: 750 N. Greenfield Pkwy, Garner, NC 27529 | US 421 (Carolina Beach Road) at SR 1197 (Silver Lake Road) / SR 2381 (Shade Tree Lane) | | SEAL |
| | Division 3 PLAN DATE: July 2015 PREPARED BY: James Peterson | New Hanover County REVIEWED BY: JTR REVIEWED BY: | |