LOADSWITCH = 12

VEH SET 1 = 8

RED CLEARANCE = 2.2

YELLOW CLEARANCE = 4.1

END OF OVERLAP PROGRAMMING

NOTE: FOR SIGNAL HEAD 41

OVERLAP [4]:

## FYA PPLT PROGRAMMING

- 1. Program Flashing Yellow Arrow phases as follows: Main Menu - 1) PHASE - 2) PHASE FUNCTIONS PAGE TWO PPLT FYA = PHASE 3
- 2. Assign output pin for Flashing Yellow Arrow as follows: Main Menu - 6) OUTPUTS - F) FYA PPLT Phase 3 = 96
- 3. Redirect RED and YELLOW outputs for the left turn phases as follows: Main Menu - 6) OUTPUTS - 8) REDIRECT PHASE Phase 3 RED = 94, Phase 3 YELLOW = 95

# EMERGENCY VEHICLE PREEMPTION PROGRAMMING

 Program EVB preempt as follows: Main Menu - 2) PREEMPT - 2) EMERGENCY VEHICLE EVB Clear = 2EVB Clearance Phases = 3,8

2. Program general preemption parameters as follows: Main Menu - 2) PREEMPT - 6) MISC PREEMPTION PARAMETERS Min Time Before PF ForceOff = 1

PROJECT REFERENCE NO.

U-3308

Sig.21.2

3. Ped Clear Before Preempt is a pedestrian timing parameter, and is programmed as follows: Main Menu - 1) PHASE - 5) PEDESTRIAN TIMING PHASE 2 MIN FDW = 6PHASE 4 MIN FDW = 9PHASE 6 MIN FDW = 5PHASE 8 MIN FDW = 8

Program extend time on optical detector units for 2.0 sec for EVB.

#### COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

## SPECIAL NOTES EV PREEMPT PROGRAMMING

Setting 'FYA DURING PREEMPT' to 'Y' eliminates yellow trap when transitioning to preempt from adjacent through phase. Main Menu - 9) UTILITIES - 9) MISC FYA DURING PREEMPT (Y/N) = Y

#### FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO INSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

- 1. ON REAR OF PDA REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
- 2. ON REAR OF PDA REMOVE WIRE FROM TERM, T2-5 AND TERMINATE ON T2-3. 3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

# OVERLAP GREEN FLASH PROGRAMMING FOR 3 SECTION FYA

The following will cause the overlap green outputs to flash, which are wired to the flashing yellow arrow. Program as follows:

Main Menu - 1) PHASE - 2) PHASE FUNCTIONS PAGE TWO OLAP G FL = 1, 3, 4

## MIN WALK DURING PREEMPTION PROGRAMMING


To disable MIN WALK pedestrian timing during preemption, program the controller as follows: Main Menu - 9) UTILITIES - 5) CONFIGURATION EXTRA TWO = 3

#### STARTUP CALLS PROGRAMMING

Prevents Veh Call to phase 3 during Startup. Phase 3 used only during Preempt. Main Menu - 9) UTILITIES - 1) STARTUP VEHICLE CALLS 2,4,6,8

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-1030T5 DESIGNED: September 2014 SEALED: 4-02-15 REVISED: N/A

Electrcial Detail - Sheet 2 of 2

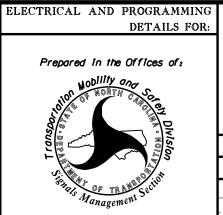

NC 55 (South/North Alston Avenue) at

E. Main St.

ivision 5 PLAN DATE: November 2014 REVIEWED BY: QTR PREPARED BY: James Peterson Reviewed BY: REVISIONS INIT. DATE SEAL

SIG. INVENTORY NO. 05-1030T5