

OUTPUT CHANNEL CONFIGURATION

Front Panel
Main Menu >Controller >More>Channels>Channels Config

Web Interface
Home >Controller >Advanced IO>Channels>Channels Configuration

Channel Configuration

Channel	Control Type	Control Source	Flash Yellow	Flash Red	Flash Alt	MMU Channel
1	Phase Vehicle	1		X	X	1
2	Phase Vehicle	2		X		2
3	Overlap	7		X	X	3
4	Phase Vehicle	4		X		4
5	Phase Vehicle	5		X		5
6	Phase Vehicle	6		X	X	6
7	Phase Vehicle	7		X		7
8	Phase Vehicle	8		X	X	8
9	Overlap	1		X	X	9
10	Overlap	2		X	X	10
11	Overlap	3		X		11
12	Overlap	4		X		12
13	Phase Ped	2				13
14	Phase Ped	4				14
15	Phase Ped	6				15
16	Phase Ped	8				16
17	Overlap	5		X	X	17
18	Overlap	6		X		18

NOTE OL7 ASSIGNED
TO CHANNEL 3



↑
NOTE: ALL RED FLASH
↑

MAXTIME STARTUP AND SOFTWARE FLASH
PROGRAMMING DETAIL

Front Panel
Main Menu >Controller >Unit

Web Interface
Home >Controller >Unit

Modify parameters as shown below and save changes.

Start Up Parameters

StartUp Clearance Hold
6

Unit Flash Parameters

All Red Flash Exit Time
6

MAXTIME OVERLAP PROGRAMMING DETAIL
FOR DEFAULT PHASING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	2	3	5	7
Type	FYA - 4 Section	FYA - 4 Section	FYA - 4 Section	Normal	Normal
Included Phases	2	6	6	3	4
Modifier Phases	1	4	5	-	-
Modifier Overlaps	-	-	-	-	-
Trail Green	0	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0	0.0

MAXTIME OVERLAP PROGRAMMING DETAIL
FOR ALTERNATE PHASING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps

In the table view of the web interface, right click on "Overlap" in the top left corner of the table. Copy the entire contents of Overlap Plan 1. Paste Overlap Plan 1 into Overlap Plan 2. Modify Overlap Plan 2 as shown below and save changes.

Overlap Plan 2

Overlap	1	2	3	5	7
Type	FYA - 4 Section	FYA - 4 Section	FYA - 4 Section	Normal	Normal
Included Phases	-	6	-	3	4
Modifier Phases	1	4	5	-	-
Modifier Overlaps	-	-	-	-	-
Trail Green	0	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0	0.0

NOTICE
INCLUDED
PHASE



MAXTIME DETECTOR PROGRAMMING DETAIL
FOR ALTERNATE PHASING LOOPS 1A & 5A

Front Panel
Main Menu >Controller >Detector >Veh Det Plans

Web Interface
Home >Controller >Detector Configuration >Vehicle Detectors

In the table view of web interface right click on "Detector" in the top left corner of the table. Copy the entire contents of Detector Plan 1. Paste Detector Plan 1 into Detector Plan 2. Modify Detector Plan 2 as shown below and save changes.

1A

Plan 2


Detector	Call Phase	Delay
1	1	-
29	0	-

5A

Detector	Call Phase	Delay
15	5	-
31	0	-

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 06-1387T3
DESIGNED: Jan 2026
SEALED: 1/27/2026
REVISED:

Temporary Design 3 - TMP Phase VI, Step 4
Electrical Detail - Sheet 2 of 4

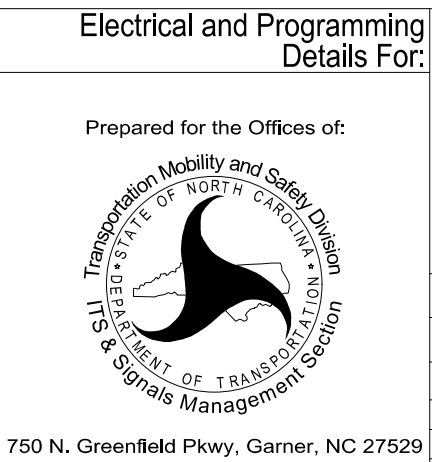

NC 211 (N. Roberts Avenue) at Boomerang Drive / Restaurant Driveway			
Division 6	Robeson County	Lumberton	
PLAN DATE:	Jan 2026	REVIEWED BY:	B.J. Roth-Roffy
PREPARED BY:	J.C. Grimm	REVIEWED BY:	T.M. Moody
REVISIONS		INIT.	DATE

