
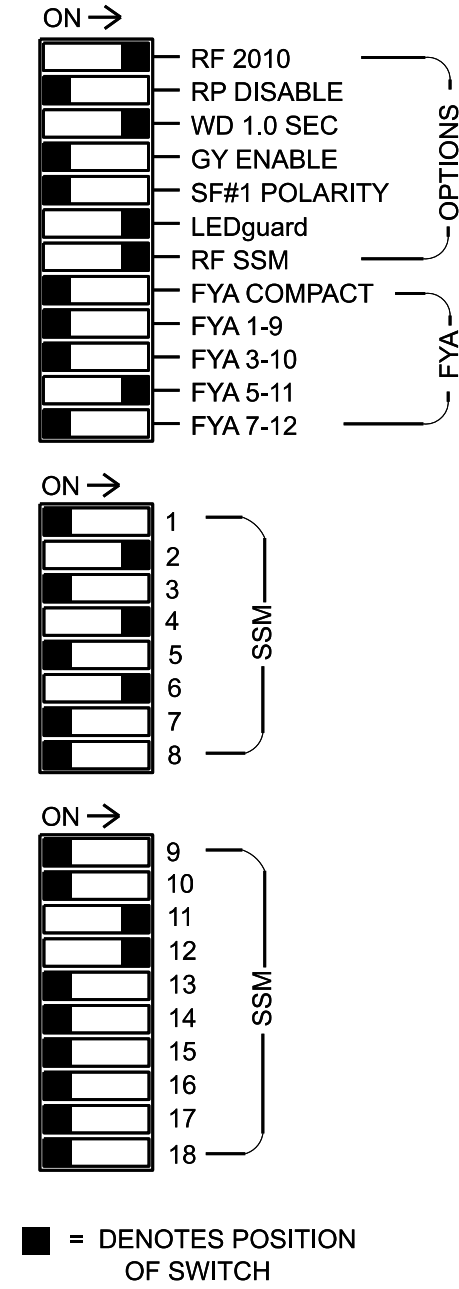
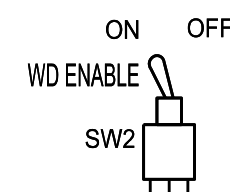


18 CHANNEL CONFLICT MONITOR

PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

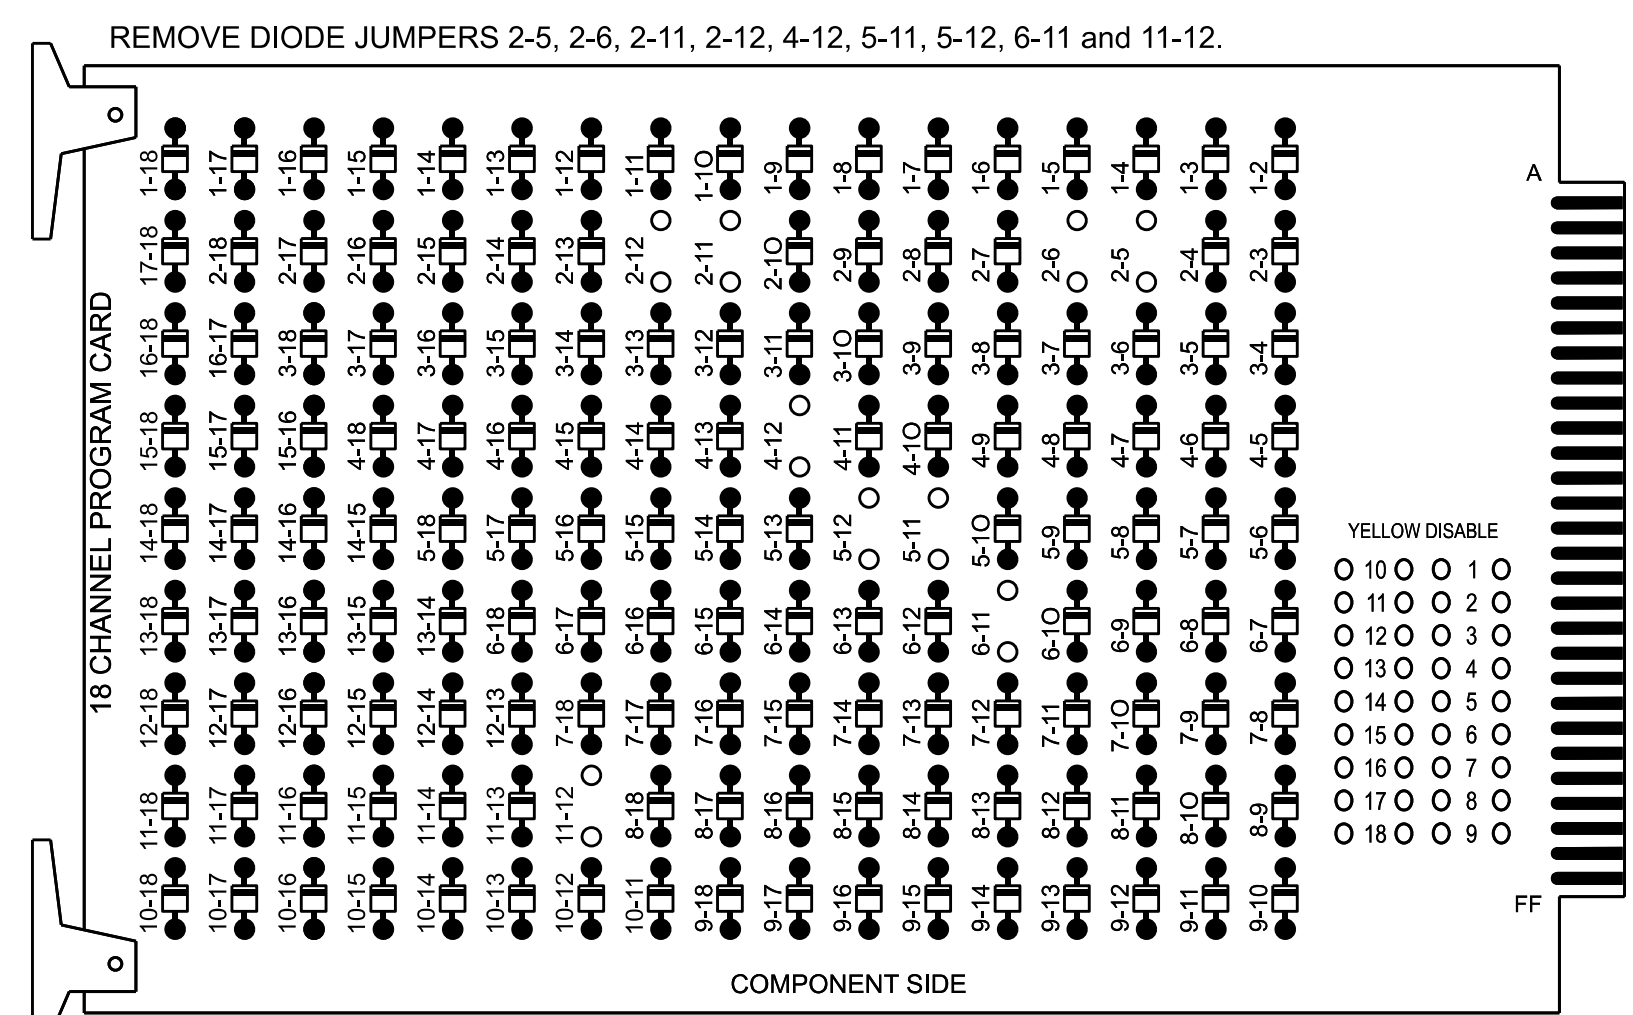

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Variable Initial and Gap Reduction.
- Disable all phases for Startup In Green.
- Program phases 2 and 6 as First Phases.
- Disable all phases for Yellow Flash.
- The cabinet and controller are part of the Winston-Salem Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070
 CABINET.....332 W/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S2,S5,S7,S8,AUX S4,AUX S5
 PHASES USED.....2,4,5,6
 OVERLAP "A".....NOT USED
 OVERLAP "B".....NOT USED
 OVERLAP "C".....5+6
 OVERLAP "D".....4+5

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,43	NU	51	61,62	NU	NU	NU	NU	NU	NU	NU	51	42	NU
RED		128						134										A101
YELLOW		129					*	135										
GREEN		130						136										
RED ARROW					101													A114
YELLOW ARROW					102													A115 A102
FLASHING YELLOW ARROW																		A116
GREEN ARROW					103		133											A103

NU = Not Used
 * Denotes install load resistor. See load resistor installation detail this sheet.
 * See pictorial of head wiring in detail this sheet.

INPUT FILE POSITION LAYOUT

(front view)

FILE	1	2	3	4	5	6	7	8	9	10	11	12	13	14
U	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO
L	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO
U	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO
L	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO	TO

EX : 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE
 ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card

INPUT FILE CONNECTION & PROGRAMMING CHART


LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
5A ¹	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	I4U	47	9	22	2	Y	Y	Y		3

¹ Add jumper from J1-W to I4-W, on rear of input file.

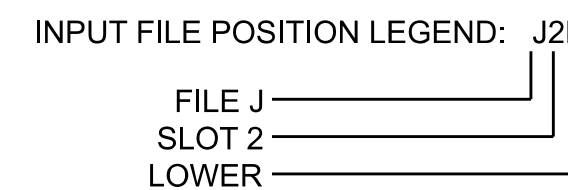

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

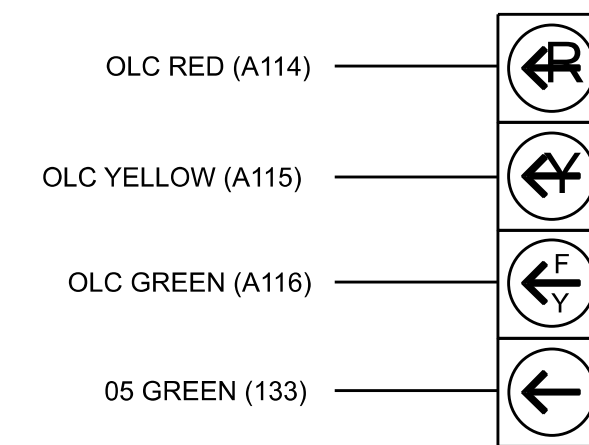


51

NOTE
 The sequence display for signal head 51 requires special logic programming. See sheet 2 for programming instructions.

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

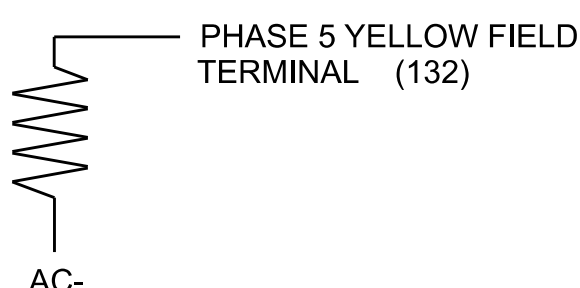

SPECIAL DETECTOR NOTE

Install a non-intrusive detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer -approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

For detection zone 5A, detector card placement and slots reserved for wired inputs are typical for a NCDOT installation.

Electrical Detail - Sheet 1 of 2

Electrical and Programming Details For:

Prepared in the Offices of:

Transportation Mobility and Safety Division
 Forsyth County
 Winston-Salem

750 N. Greenfield Pkwy, Garner, NC 27529

SR 4000 (University Parkway)
 at
 US 52 SB Ramps

Division 9
 PLAN DATE: February 2026
 PREPARED BY: James Peterson

REVIEWED BY:
 REVIEWED BY:

REVISIONS

INIT. DATE

02/13/2026

DATE

SEAL
 036880
 KEITH M. MIMS
 ENGINEER

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SIG. INVENTORY NO. 09-0651T1