EMERGENCY VEHICLE PREEMPTION PROGRAMMING

- 1. Program EVB preempt as follows: Main Menu - 2) PREEMPT - 4) EMERGENCY VEHICLE EVB Clear = 2 EVB Clearance Phases = 3,8
- 2. Program general preemption parameters as follows: Main Menu - 2) PREEMPT - 6) MISC PREEMPTION PARAMETERS Min Time Before PE ForceOff = 1
- 3. Ped Clear Before Preempt is a pedestrian timing parameter, and is programmed as follows: Main Menu - 1) PHASE - 5) PEDESTRIAN TIMING PHASE 2 MIN FDW = 7

Program extend time on optical detector units for 2.0 sec for EVB

FYA PPLT PROGRAMMING (SIGNAL HEAD 31)

- 1. Program Flashing Yellow Arrow phases as follows: Main Menu - 1) PHASE - 2) PHASE FUNCTIONS PAGE TWO PPLT FYA = PHASE 3
- 2. Assign output pin for Flashing Yellow Arrow as follows: Main Menu - 6) OUTPUTS - F) FYA PPLT Phase 3 = 96
- 3. Redirect RED and YELLOW outputs for the left turn phases as follows: Main Menu - 6) OUTPUTS - 8) REDIRECT PHASE Phase 3 RED = 94, Phase 3 YELLOW = 95

PROJECT REFERENCE NO. Sig. 36.2 U-3308

SPECIAL NOTE EV PREEMPT PROGRAMMING

Setting 'FYA DURING PREEMPT' to 'Y' eliminates yellow trap when transitioning to preempt from adjacent through phase. Main Menu - 9) UTILITIES - 9) MISC FYA DURING PREEMPT (Y/N) = Y

COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

MIN WALK DURING PREEMPTION PROGRAMMING

To disable MIN WALK pedestrian timing during preemption, program the controller as follows: Main Menu - 9) UTILITIES - 5) CONFIGURATION EXTRA TWO = 3

FLASHER CIRCUIT MODIFICATION DETAIL

In order to insure that signals flash concurrently on the same approach, make the following flasher circuit changes:

- 1. On rear of PDA Remove wire from Term. T2-4 and Terminate on T2-2.
- 2. On rear of PDA Remove wire from Term. T2-5 and Terminate on T2-3.
- 3. Remove Flasher Unit 2.

The changes listed above ties all Phases and Overlaps to Flasher Unit 1.

OVERLAPS (1), (3) & (4) PROGRAMMING DETAIL

Program overlaps as follows: Main Menu - 4) OVERLAP

OVERLAP [1]:

LOADSWITCH = 9VEH SET 1 = 2.6YELLOW CLEARANCE = 3.8 RED CLEARANCE = 1.8

Press "+" Twice

OVERLAP [3]:

LOADSWITCH = 11VEH SET 1 = 2.6YELLOW CLEARANCE = 3.8 RED CLEARANCE = 1.8

Press "+"

OVERLAP [4]:

LOADSWITCH = 12VEH SET 1 = 4.8YELLOW CLEARANCE = 4.4RED CLEARANCE = 1.4

END OF OVERLAP PROGRAMMING

STARTUP CALLS PROGRAMMING

Prevents Veh Call to phase 3 during Startup. Phase 3 used only during Preempt. Main Menu - 9) UTILITIES - 1) STARTUP VEHICLE CALLS 2,4,6,8

OVERLAP GREEN FLASH PROGRAMMING (SIGNAL HEAD 21, 41 & 61)


The following will cause the overlap green output to flash, which is wired to the FYA. Program as follows:

> Main Menu - 1) PHASE - 2) PHASE FUNCTIONS PAGE TWO OLAP G FL = 1, 3, 4

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-1029T6 DESIGNED: September 2014 SEALED: 4/2/15 REVISED: N/A

Electrical Detail - Sheet 2 of 2 (Temporary Design 6)

REVISIONS

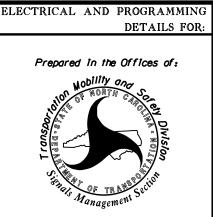

NC 55 (North Alston Avenue) Liberty St

ivision 5 PLAN DATE: November 2014 REVIEWED BY: T. Joyce PREPARED BY: B. SIMMONS REVIEWED BY:

INIT. DATE

SEAL