


**EDI MODEL 2018EClip-NC CONFLICT MONITOR**  
**PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)

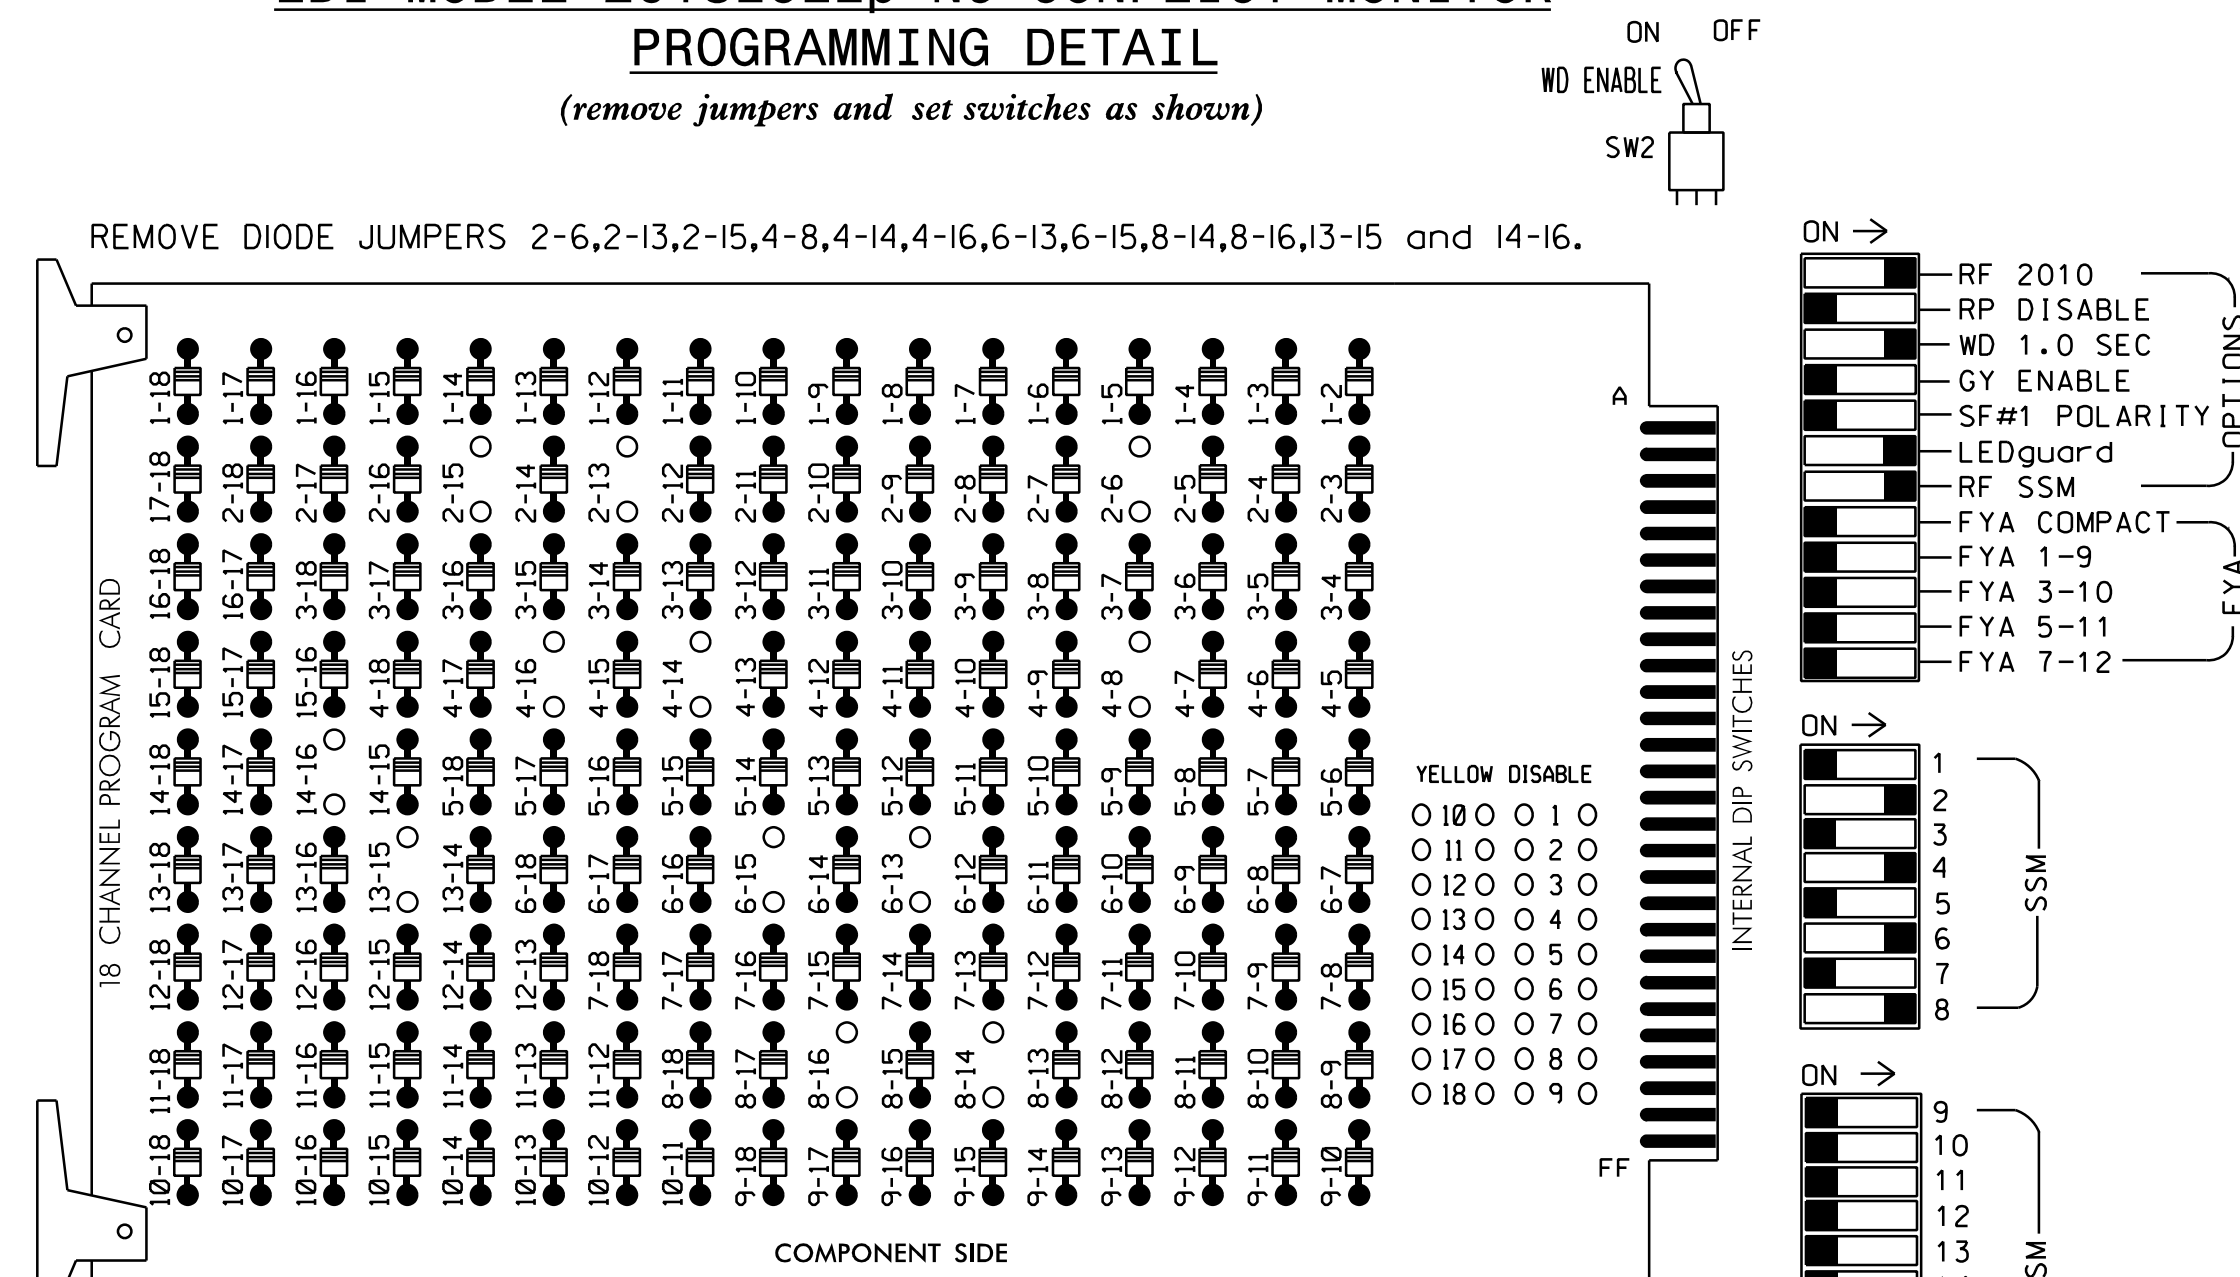

REMOVE JUMPERS AS SHOWN

**NOTES:**

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Integrate monitor with Ethernet network in cabinet.

■ = DENOTES POSITION OF SWITCH

**NOTES**

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6, on the controller unit, for Start Up In Green. SPECIAL PROGRAMMING IS NEEDED FOR PROPER START-UP OF PED SIGNALS. SEE SHEET 2 OF 2 OF THIS ELECTRICAL DETAIL FOR INSTRUCTIONS.
- Program phases 2, 4, 6 and 8 for 'STARTUP PED CALL'.
- Program phases 2 and 6 for Yellow Flash.
- The cabinet and controller are part of the Asheville Signal System.

**EQUIPMENT INFORMATION**

CONTROLLER.....2070E  
 CABINET.....336  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...12  
 LOAD SWITCHES USED.....S2,S3,S5,S6,S8,S9,S11,S12.  
 PHASES USED.....2,4,6,8,2PED,4PED,6PED,8PED.  
 OVERLAPS.....NONE


**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED
SIGNAL HEAD NO.	NU	21,22	P21, P22	NU	41,42	P41, P42	NU	61,62	P61, P62	NU	81,82	P81, P82
RED		128			101			134			107	
YELLOW		129			102			135			108	
GREEN		130			103			136			109	
RED ARROW												
YELLOW ARROW												
FLASHING YELLOW ARROW												
GREEN ARROW												
Hand icon			113		104			119			110	
Walking person icon			115		106			121				112

NU = Not Used

**INPUT FILE POSITION LAYOUT**

(front view)

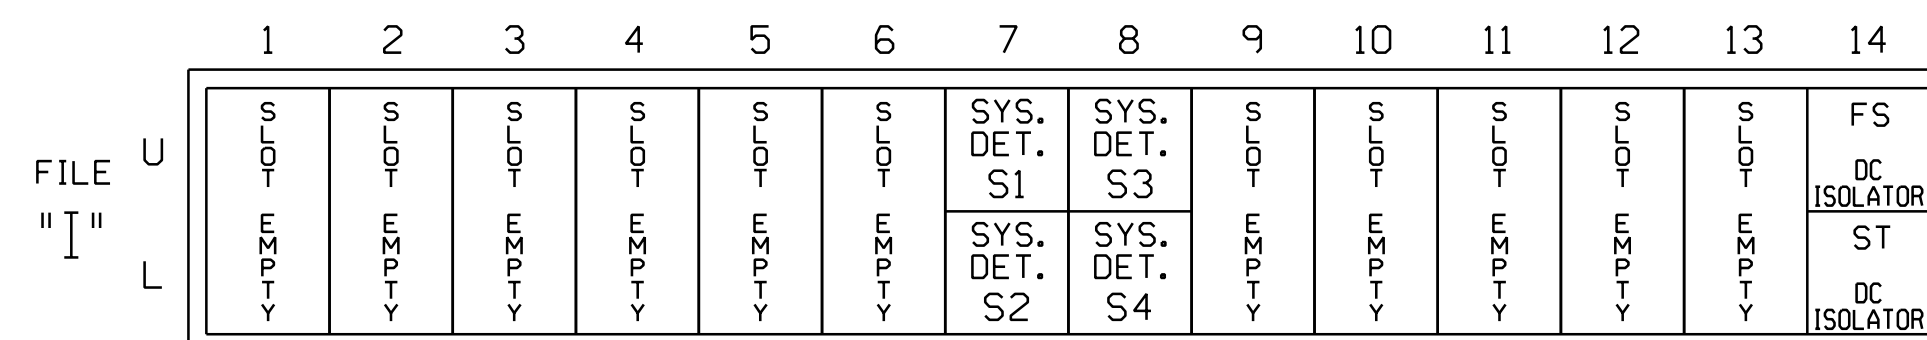

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE  
 ST = STOP TIME

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
*S1	TB21-13,14	I7U	57	19	7	SYS	Y	Y			
*S2	TB23-13,14	I7L	50	12	28	SYS	Y	Y			
*S3	TB22-1,2	I8U	42	4	8	SYS	Y	Y			
*S4	TB24-1,2	I8L	46	8	18	SYS	Y	Y			

\* SYSTEM DETECTOR ONLY. REMOVE THE VEHICLE PHASE ASSIGNED TO THIS DETECTOR IN THE DEFAULT PROGRAMMING.

INPUT FILE POSITION LEGEND: I2L

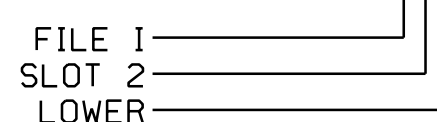

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: COA-0111  
 DESIGNED: MAY 2016  
 SEALED: 12-13-2016  
 REVISED:

**COUNTDOWN PEDESTRIAN SIGNAL OPERATION**

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

**ADVANCED WALK PROGRAMMING NOTE**

(program controller as shown below)

From Main Menu press '2' (Phase Control), then '1' (Phase Control Functions). Program phases 2, 4, 6, and 8 for 'Advanced Walk'. Make sure the Walk Advance times shown on the Signal Design Plans are programmed in the the 'Phase Timing' menu.

ELECTRICAL DETAIL SHEET 1 OF 2

ELECTRICAL AND PROGRAMMING DETAILS FOR:

**Mattern & Craig**  
 CONSULTING ENGINEERS • SURVEYORS  
 FIRM LICENSE No. C-1154  
 12 BROAD STREET  
 ASHEVILLE, NORTH CAROLINA 28801  
 (828) 254-2201  
 FAX (828) 254-4562



Patton Ave  
 at  
 N French Broad Ave and  
 S French Broad Ave

Division 13 Buncombe County Asheville

PLAN DATE: MAY 2016 REVIEWED BY: SMH  
 PREPARED BY: BGR REVIEWED BY: JBV

REVISIONS: INIT. DATE

SEAL  
 NORTH CAROLINA PROFESSIONAL ENGINEER  
 SEAL 022599  
 JAMES B. VOSS  
 James Voss  
 140FD0378E041F  
 SIGNATURE DATE  
 SIG. INVENTORY NO. COA-0111