

**This electronic collection of documents is provided
for the convenience of the user
and is Not a Certified Document –**

**The documents contained herein were originally issued
and sealed by the individuals whose names and license
numbers appear on each page, on the dates appearing
with their signature on that page.**

**This file or an individual page
shall not be considered a certified document.**




STATE OF NORTH CAROLINA
DIVISION OF HIGHWAYS

ROWAN COUNTY

LOCATION: REPLACE BRIDGE 66 OVER THE NORFOLK SOUTHERN RAILWAY TRACKS ON SR 1724 (HURLEY SCHOOL ROAD)

TYPE OF WORK: TRAFFIC SIGNALS FOR OFF-SITE DETOUR

Project: B-5772

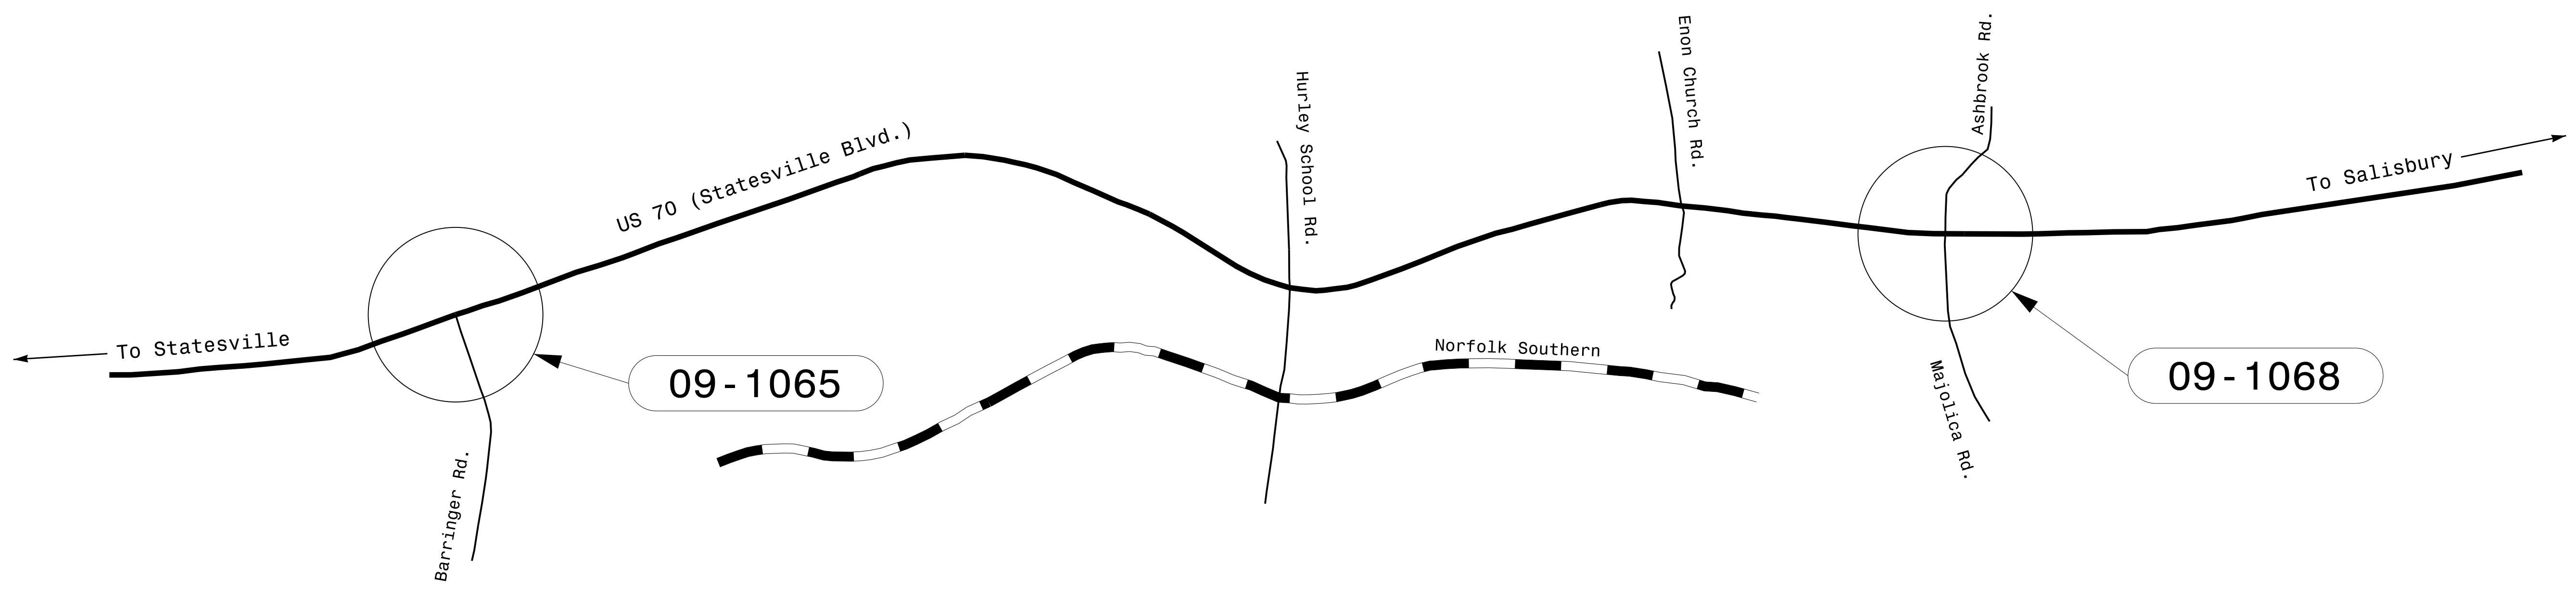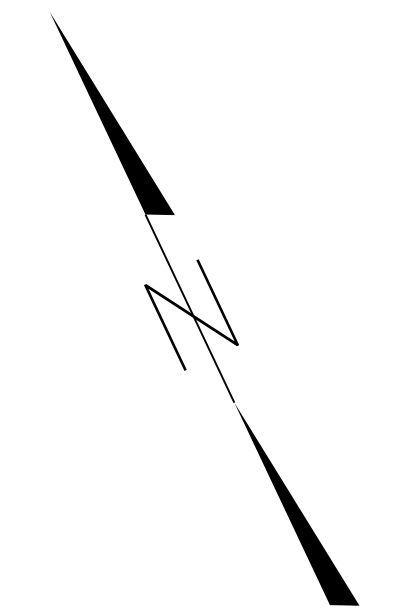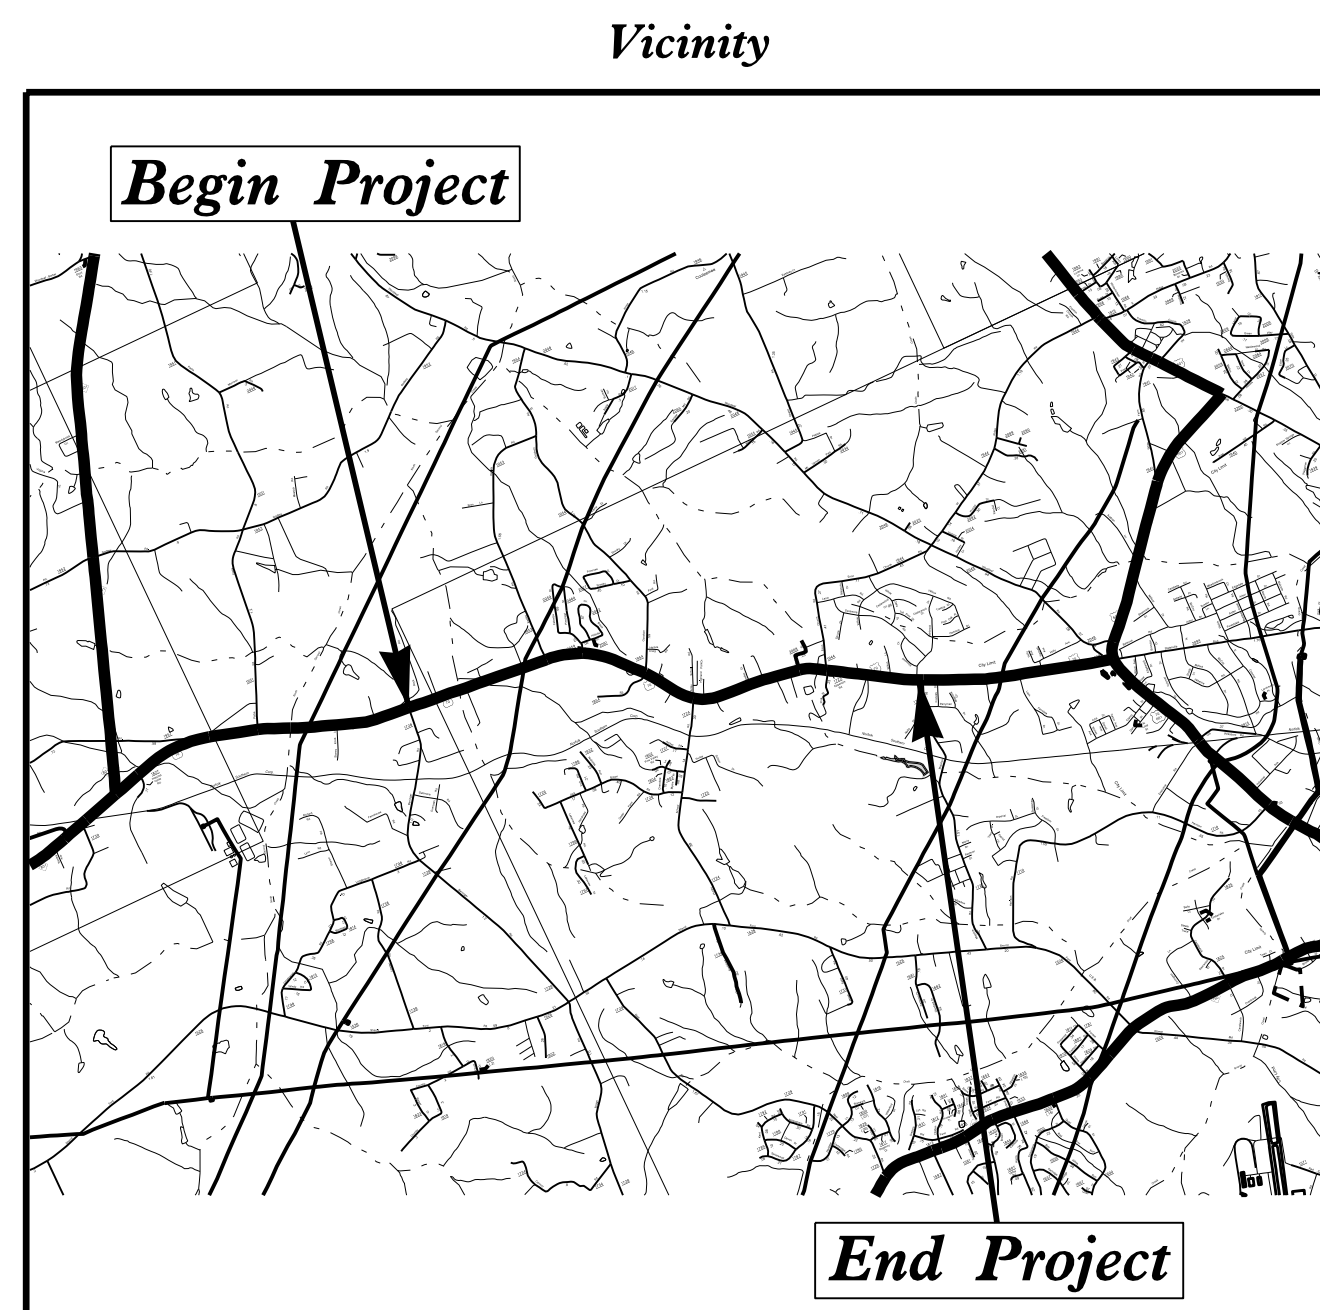

Refer to "Roadway Standard Drawings NCDOT" dated January 2018 and "Standard Specifications for Roads and Structures" dated January 2018.

Sheet #	Reference #	Index of Plans Location/Description
Sig. 1.0	-----	Title Sheet
Sig. 2.0-2.4	09-1065	US 70 (Statesville Boulevard) at SR 1728 (Barringer Road)
Sig. 3.0-3.5	09-1068	US 70 (Statesville Boulevard) at SR 1722 (Majolica Road) and Ashbrook Road

**TRANSPORTATION SYSTEMS
MANAGEMENT & OPERATIONS UNIT**

Contacts:


Robert J. Ziembra, PE - Central Region Signals Engineer
D. Todd Joyce, PE - Signal Equipment Design Review Engineer

Prepared in the Office of:
DIVISION OF HIGHWAYS
TRANSPORTATION MOBILITY & SAFETY DIVISION

750 N. Greenfield Parkway, Garner, NC 27529


I:\2021\Signal Design\Central Region\Div 9\B-5772\B-5772.sig.tsh, 2021mdd.dgn

DEFAULT PHASING DIAGRAM

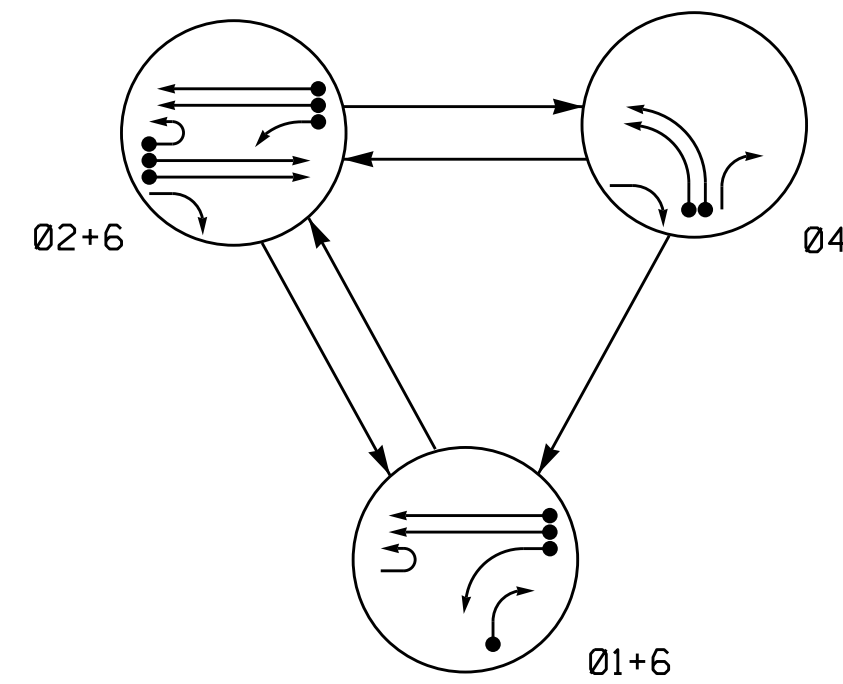

SIGNAL FACE	PHASE			
	Ø 1 + 6	Ø 2 + 6	Ø 4	F LOCAL
11	←	←	←	←
21	←	←	←	←
22	R	G	R	Y
23	R	G	R	Y
41, 42	←	←	←	←
43	→	→	→	→
61, 62	G	G	R	Y

ALTERNATE PHASING DIAGRAM

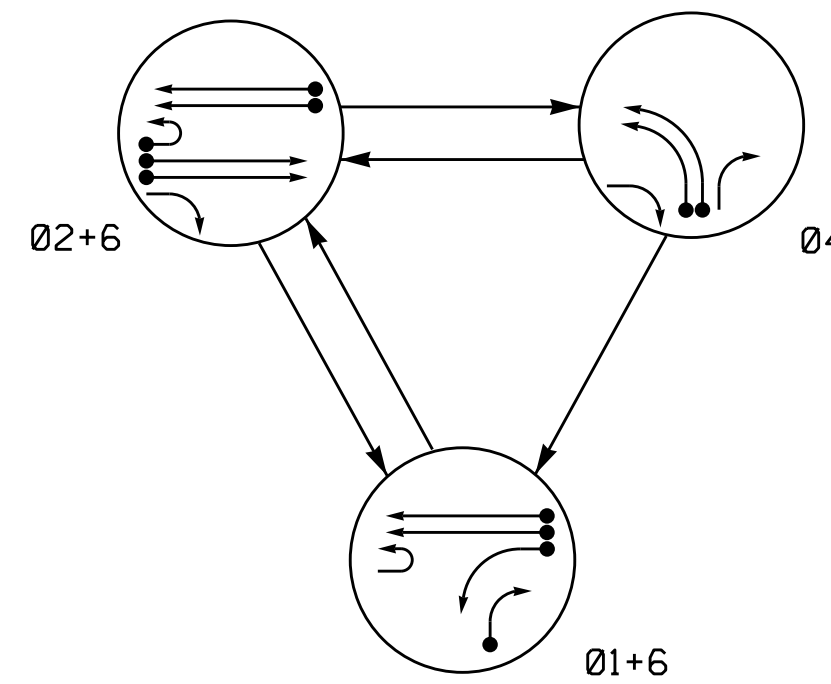

SIGNAL FACE	PHASE			
	Ø 1 + 6	Ø 2 + 6	Ø 4	F LOCAL
11	←	←	←	←
21	←	←	←	←
22	R	G	R	Y
23	R	G	R	Y
41, 42	←	←	←	←
43	→	→	→	→
61, 62	G	G	R	Y


PHASING DIAGRAM DETECTION LEGEND

- ←●→ DETECTED MOVEMENT
- ←→ UNDETECTED MOVEMENT (OVERLAP)
- ←- - -→ UNSIGNALIZED MOVEMENT
- ←- - -→ PEDESTRIAN MOVEMENT

3 Phase Fully Actuated (Isolated)

NOTES

- Refer to "Roadway Standard Drawings NCDOT" dated January 2018 and "Standard Specifications for Roads and Structures" dated January 2018.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 1 may be lagged.
- Set all detector units to presence mode.
- In the event of loop replacement, refer to the current ITS and Signals Design Manual and submit a Plan of Record to the Signal Design Section.
- Remove existing lane control signs.
- Pavement markings are existing.
- The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.

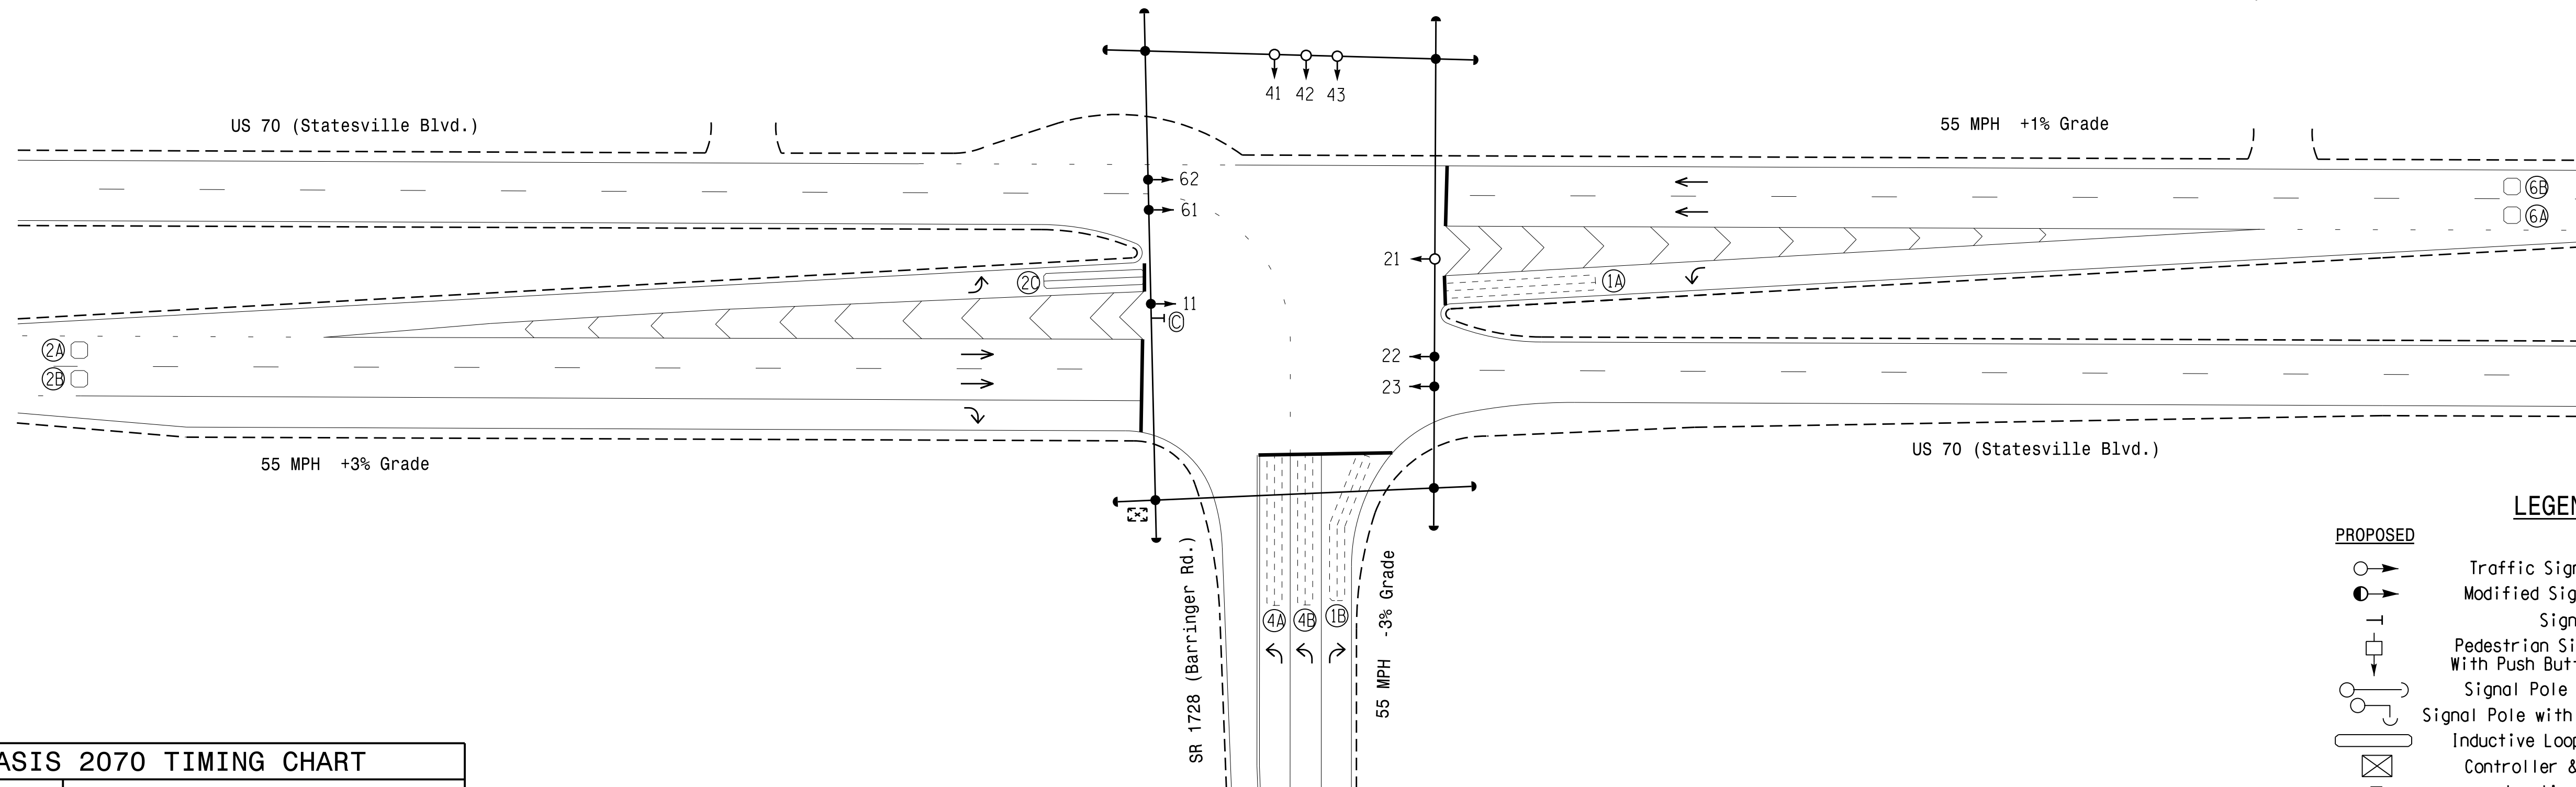

FEATURE	PHASE			
	1	2	4	6
Min Green 1 *	7	14	7	14
Extension 1 *	1.0	6.0	1.0	6.0
Max Green 1 *	20	90	25	90
Yellow Clearance	3.0	5.1	3.0	5.1
Red Clearance	3.3	1.5	3.7	1.5
Red Revert	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-
Don't Walk 1	-	-	-	-
Seconds Per Actuation *	-	1.5	-	1.5
Max Variable Initial *	-	46	-	46
Time Before Reduction *	-	15	-	15
Time To Reduction *	-	45	-	45
Minimum Gap	-	3.4	-	3.4
Recall Mode	-	MIN RECALL	-	MIN RECALL
Vehicle Call Memory	-	YELLOW	-	YELLOW
Dual Entry	-	-	-	-
Simultaneous Gap	ON	ON	ON	ON


* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

OASIS 2070 LOOP & DETECTOR INSTALLATION												
INDUCTIVE LOOPS					DETECTOR PROGRAMMING							
LOOP	SIZE (FT)	TURNS	DISTANCE FROM STOPBAR (FT)	NEW LOOP	PHASE	CALLING	EXTENSION	FULL TIME DELAY	SYSTEM LOOP	STRETCH TIME	DELAY TIME	NEW CARD
1A	6X60	2-4-2	0	-	1	Y	Y	-	-	-	15 *	-
1B	6X60	2-4-2	0	-	1	Y	Y	-	-	-	10	-
2A	6X6	6	420	-	2	Y	Y	-	-	-	-	-
2B	6X6	6	420	-	2	Y	Y	-	-	-	-	-
2C	6X40	2-4-2	0	Y	2	Y	Y	Y	-	-	3	Y
4A	6X60	2-4-2	0	-	4	Y	Y	-	-	-	3	-
4B	6X60	2-4-2	0	-	4	Y	Y	-	-	-	-	-
6A	6X6	6	420	-	6	Y	Y	-	-	-	-	-
6B	6X6	6	420	-	6	Y	Y	-	-	-	-	-

* Disable delay during alternate phasing operation.
Disable phase call for loop during alternate phasing operation.

SIGNAL FACE I.D.

All Heads L.E.D.

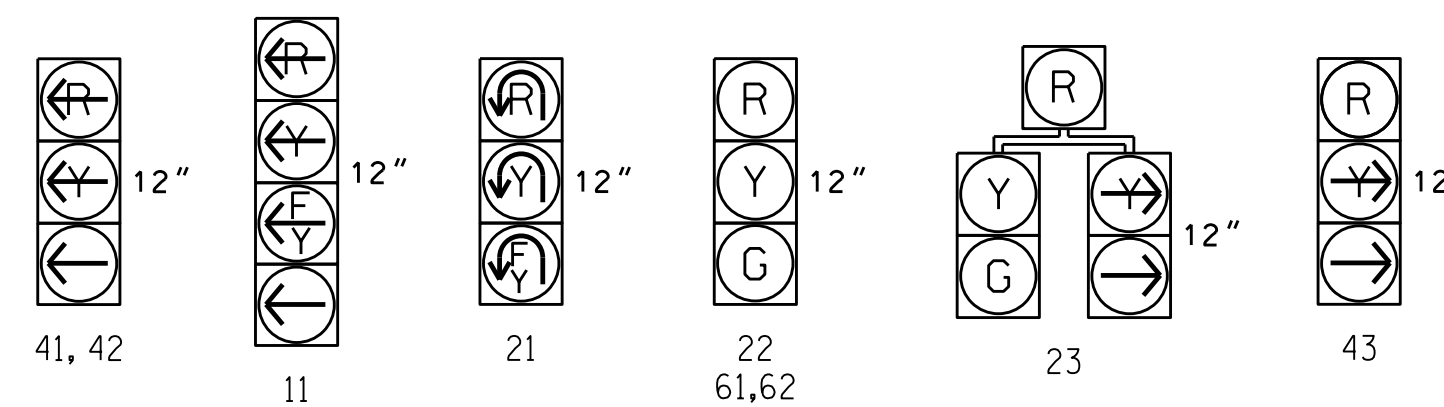

LEGEND

- | PROPOSED | EXISTING |
|--|--|
| ○→ Traffic Signal Head | ●→ Traffic Signal Head |
| ○→ Modified Signal Head | N/A |
| ⊥ Sign | ⊥ Sign |
| ⊥ Pedestrian Signal Head With Push Button & Sign | ⊥ Pedestrian Signal Head With Push Button & Sign |
| ○→ Signal Pole with Guy | ○→ Signal Pole with Guy |
| ○→ Signal Pole with Sidewalk Guy | ○→ Signal Pole with Sidewalk Guy |
| ⊠ Inductive Loop Detector | ⊠ Inductive Loop Detector |
| ⊠ Controller & Cabinet | ⊠ Controller & Cabinet |
| ⊠ Junction Box | ⊠ Junction Box |
| - - - 2-in Underground Conduit | - - - 2-in Underground Conduit |
| N/A Right of Way | N/A Right of Way |
| → Directional Arrow | → Directional Arrow |
| ⊙ "U-TURN YIELD TO RIGHT TURN" Sign (R10-16) | ⊙ "U-TURN YIELD TO RIGHT TURN" Sign (R10-16) |


Signal Upgrade

Prepared in the Offices of:

US 70 (Statesville Boulevard) at SR 1728 (Barringer Road)
 Division 9 Rowan County W. of Salisbury
 PLAN DATE: September 2021 REVIEWED BY:
 PREPARED BY: J.A. Lohr REVIEWED BY:
 SCALE: 0 40 1"=40'
 REVISIONS: INIT. DATE
 DATE: 9/30/2021
 SIG. INVENTORY NO. 09-1065

EDI MODEL 2018ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL
(remove jumpers and set switches as shown)



REMOVE DIODE JUMPERS 1-6, 1-9, 1-11, 1-12, 2-6, 2-9, 2-11, 4-12, 6-9, 6-11, 6-12, 9-11, 9-12 and 11-12.

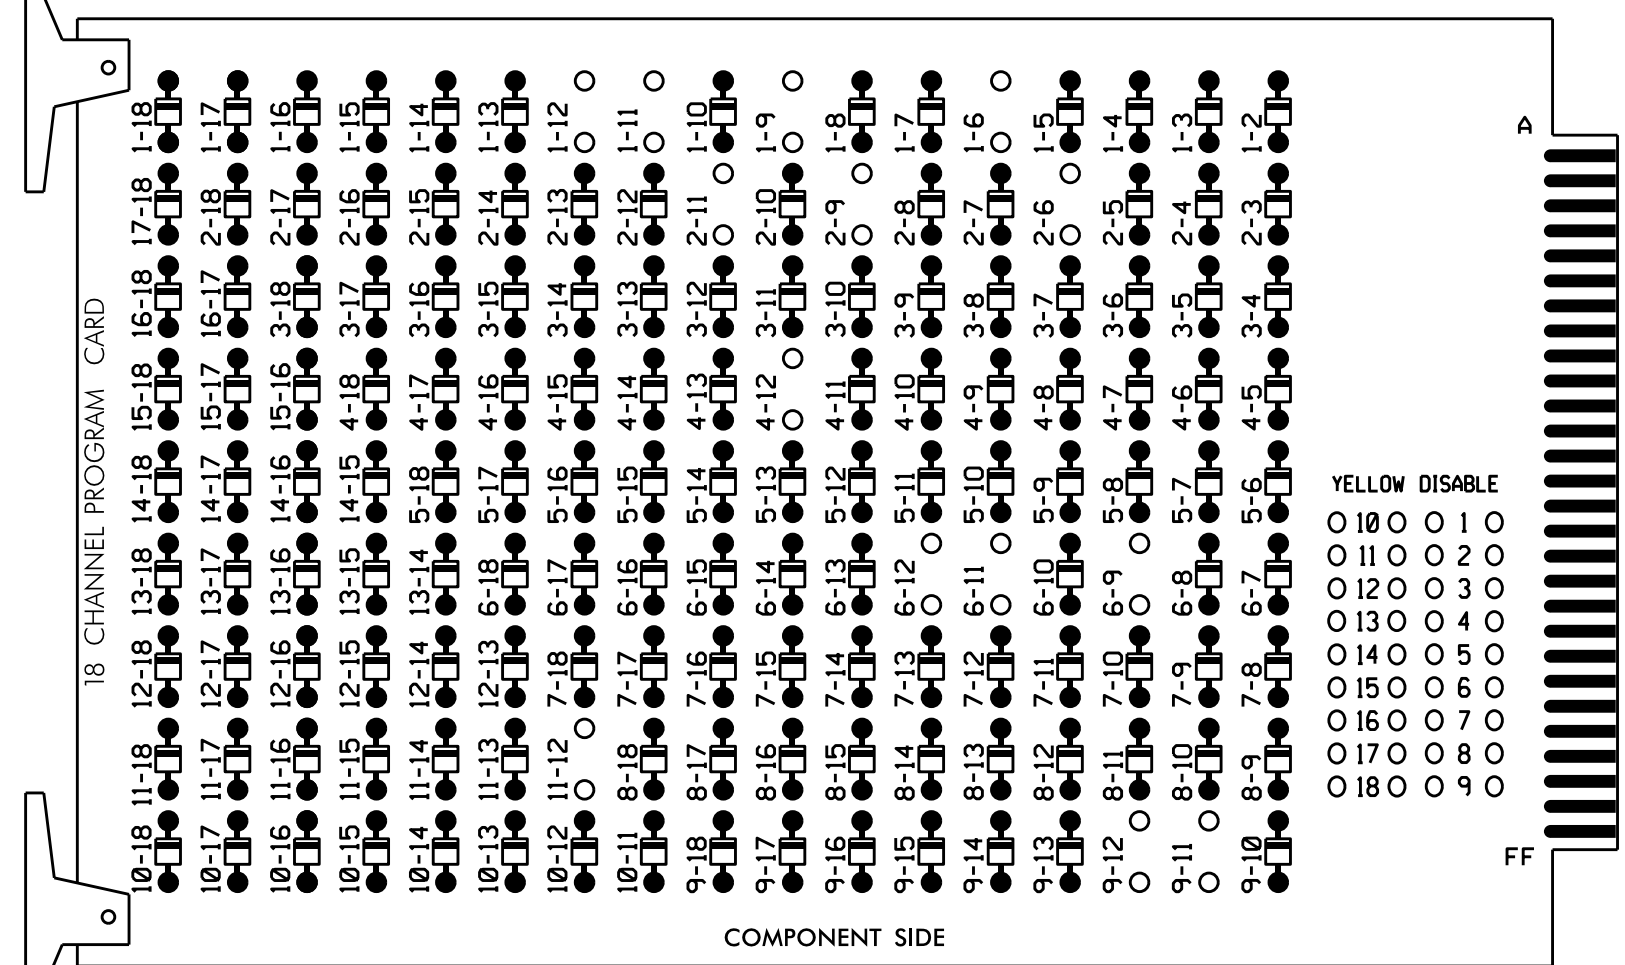

REMOVE JUMPERS AS SHOWN

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

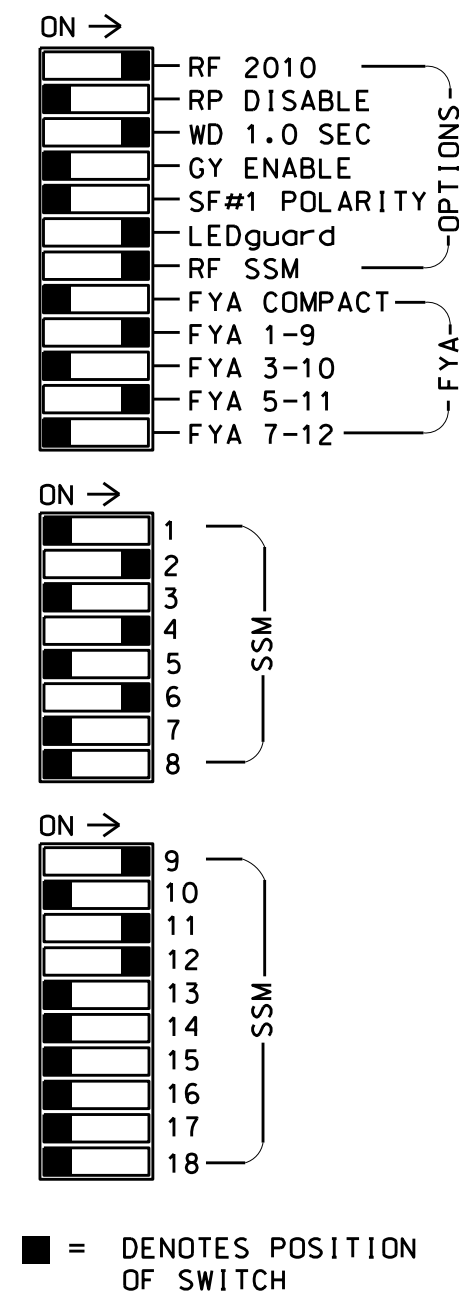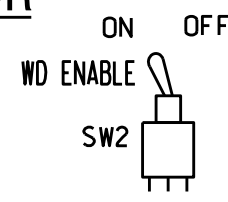

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Variable Initial and Gap Reduction.
- Program phases 2 and 6 for Startup In Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlaps.

EQUIPMENT INFORMATION

CONTROLLER.....2070
 CABINET.....332 W/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S1,S2,S5,S8,AUX S1,AUX S4,AUX S5
 PHASES USED.....1,2,4,6
 OVERLAP "A".....1+2
 OVERLAP "B".....NOT USED
 OVERLAP "C".....6
 OVERLAP "D".....1+4

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	22,23	NU	NU	41,42	23	NU	NU	61,62	NU	NU	NU	11	NU	NU	21	43	NU
RED		128								134								A101
YELLOW	*	129								135								
GREEN		130								136								
RED ARROW					101								A121			A114		
YELLOW ARROW					102	102							A122			A115	A102	
FLASHING YELLOW ARROW													A123			A116		
GREEN ARROW	127				103	103												A103


NU = Not Used

* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail this sheet.

INPUT FILE POSITION LAYOUT

(front view)

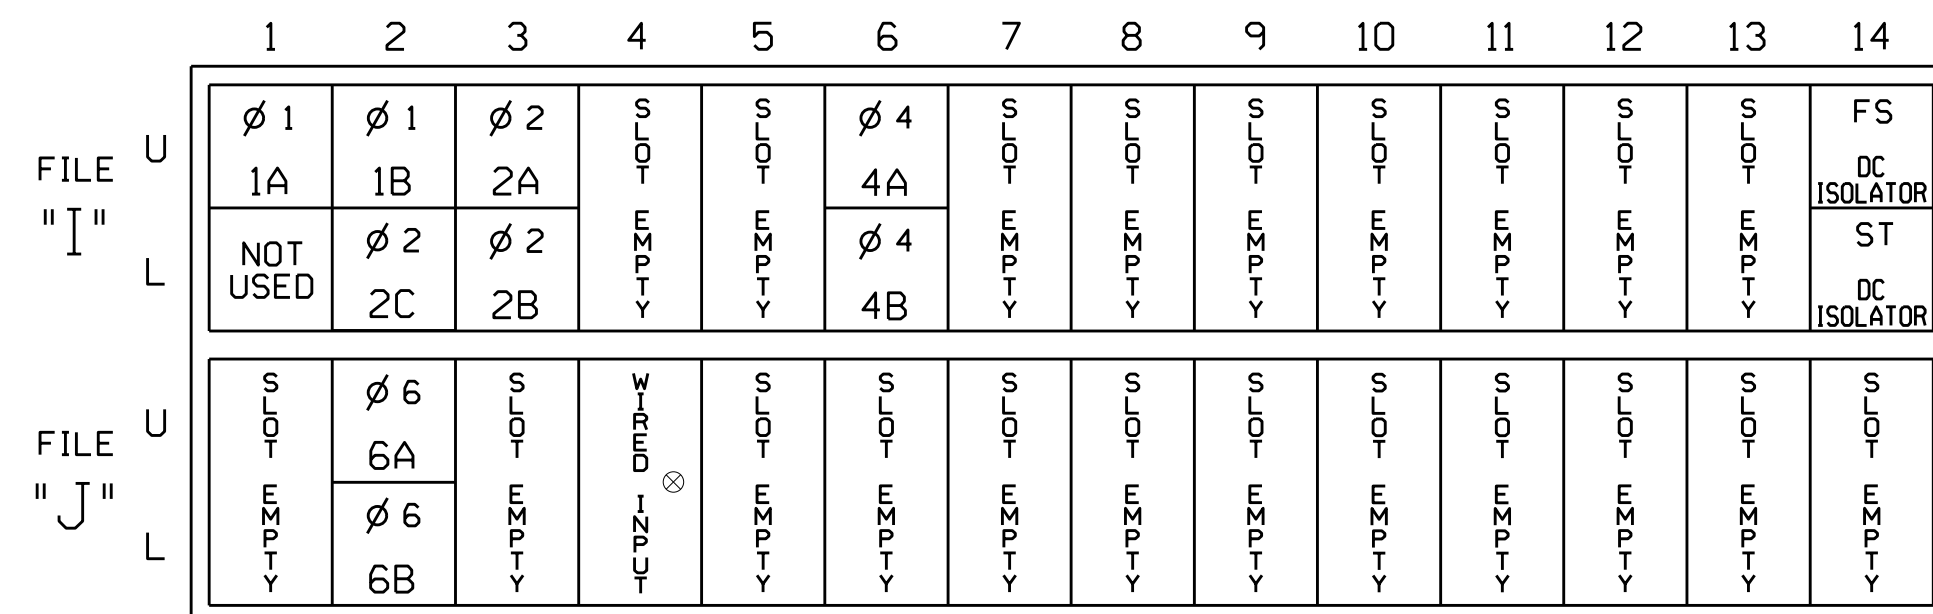

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card


INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A ¹	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10★	26	6	Y	Y	Y		3
	-	I1U	56	18★	51	1	Y	Y			
1B	TB2-5,6	I2U	39	1	2	1	Y	Y			10
2A	TB2-9,10	I3U	63	25	32	2	Y	Y			
2B	TB2-11,12	I3L	76	38	42	2	Y	Y			
2C	TB2-7,8	I2L	43	5	12	2	Y	Y	Y		3
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			3
4B	TB4-11,12	I6L	45	7	14	4	Y	Y			
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			

¹Add jumper from I1-W to J4-W, on rear of input file.


★ See Input Page Assignment programming details on sheet 3.

INPUT FILE POSITION LEGEND: J2L

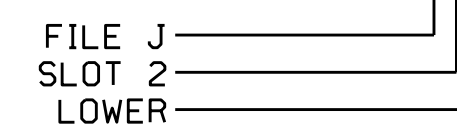

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

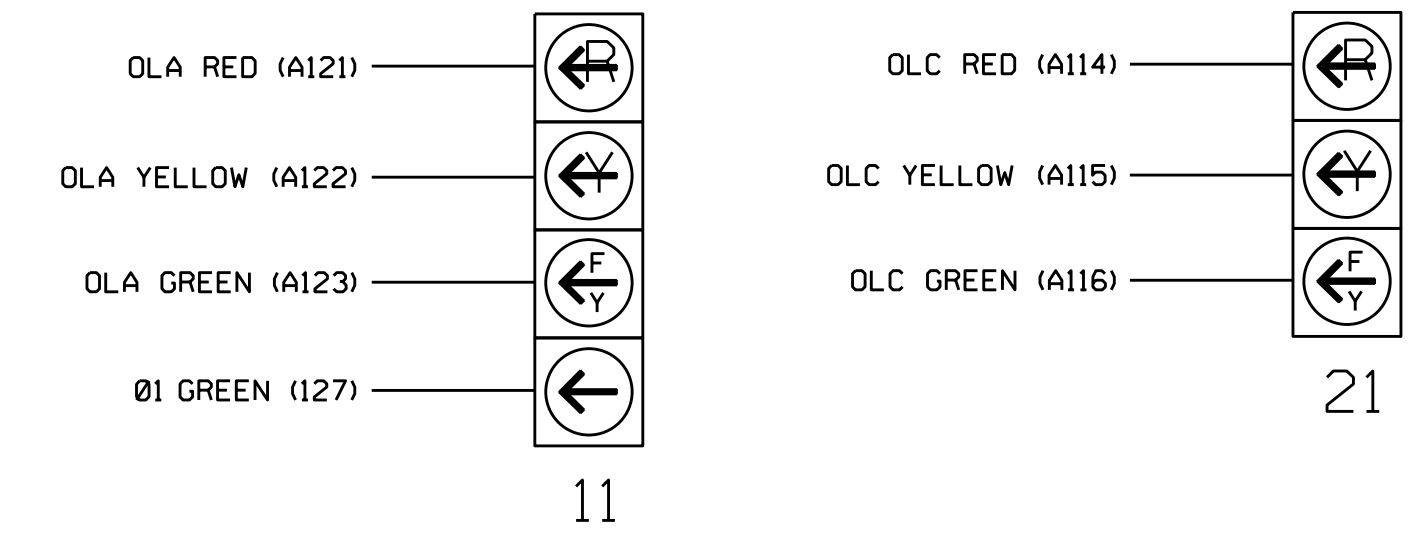


NOTE

The sequence display for signal head 11 requires special logic programming. See sheet 2 for programming instructions.


LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

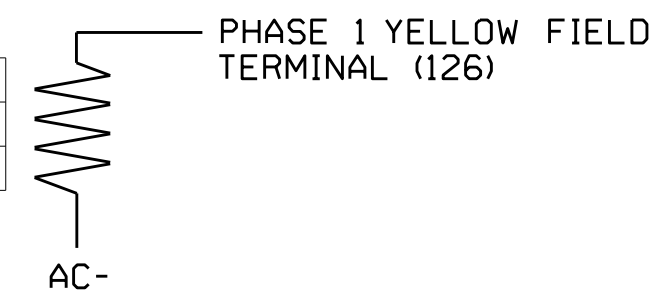

Electrical Detail - Sheet 1 of 4

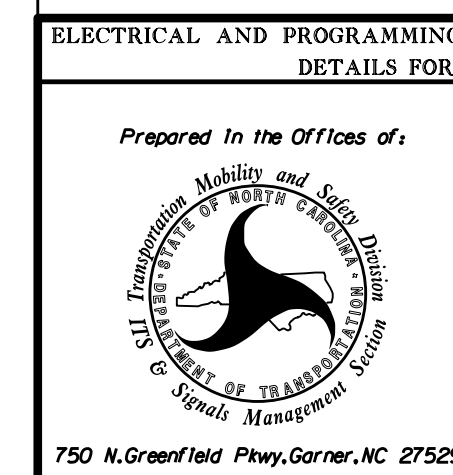


US 70 (Statesville Boulevard)
at
SR 1728 (Barringer Rd.)

Division 9 Rowan County W. of Salisbury
 PLAN DATE: September 2021 REVIEWED BY: T. Joyce
 PREPARED BY: C. Strickland REVIEWED BY:

REVISIONS	INIT.	DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

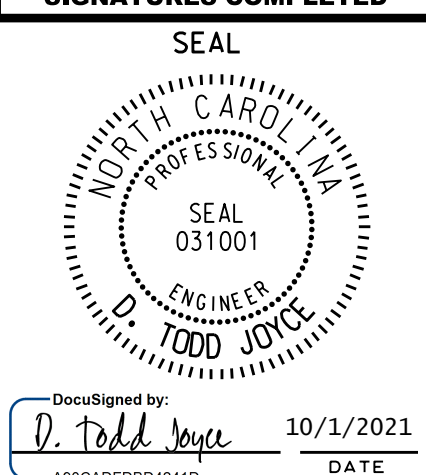

DocuSign by: D. Todd Joyce 10/1/2021
 DATE: 10/1/2021
 SIG. INVENTORY NO. 09-1065

OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS
 PHASE: 12345678910111213141516
 VEH OVL PARENTS: XX
 VEH OVL NOT VEH:
 VEH OVL NOT PED:
 VEH OVL GRN EXT:
 STARTUP COLOR: - RED - YELLOW - GREEN
 FLASH COLORS: - RED - YELLOW X GREEN
 SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
 FLASH YELLOW IN CONTROLLER FLASH?...Y
 GREEN EXTENSION (0-255 SEC)...0
 YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
 RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
 OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

PRESS '+' TWICE

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
 PHASE: 12345678910111213141516
 VEH OVL PARENTS: X
 VEH OVL NOT VEH:
 VEH OVL NOT PED:
 VEH OVL GRN EXT:
 STARTUP COLOR: - RED - YELLOW - GREEN
 FLASH COLORS: - RED - YELLOW X GREEN
 SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
 FLASH YELLOW IN CONTROLLER FLASH?...Y
 GREEN EXTENSION (0-255 SEC)...0
 YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
 RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
 OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

PRESS '+'

PAGE 1: VEHICLE OVERLAP 'D' SETTINGS
 PHASE: 12345678910111213141516
 VEH OVL PARENTS: X X
 VEH OVL NOT VEH:
 VEH OVL NOT PED:
 VEH OVL GRN EXT:
 STARTUP COLOR: - RED - YELLOW - GREEN
 FLASH COLORS: - RED - YELLOW - GREEN
 SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
 FLASH YELLOW IN CONTROLLER FLASH?...N
 GREEN EXTENSION (0-255 SEC)...0
 YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
 RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
 OUTPUT AS PHASE # (0=NONE, 1-16)...0

OVERLAP PROGRAMMING COMPLETE

OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS), PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'A' SETTINGS
 PHASE: 12345678910111213141516
 VEH OVL PARENTS: X
 VEH OVL NOT VEH:
 VEH OVL NOT PED:
 VEH OVL GRN EXT:
 STARTUP COLOR: - RED - YELLOW - GREEN
 FLASH COLORS: - RED - YELLOW - GREEN
 SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
 FLASH YELLOW IN CONTROLLER FLASH?...Y
 GREEN EXTENSION (0-255 SEC)...0
 YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
 RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
 OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+' TWICE

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'C' SETTINGS
 PHASE: 12345678910111213141516
 VEH OVL PARENTS: X
 VEH OVL NOT VEH:
 VEH OVL NOT PED:
 VEH OVL GRN EXT:
 STARTUP COLOR: - RED - YELLOW - GREEN
 FLASH COLORS: - RED - YELLOW X GREEN
 SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
 FLASH YELLOW IN CONTROLLER FLASH?...Y
 GREEN EXTENSION (0-255 SEC)...0
 YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
 RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
 OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

PRESS '+'

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'D' SETTINGS
 PHASE: 12345678910111213141516
 VEH OVL PARENTS: X X
 VEH OVL NOT VEH:
 VEH OVL NOT PED:
 VEH OVL GRN EXT:
 STARTUP COLOR: - RED - YELLOW - GREEN
 FLASH COLORS: - RED - YELLOW - GREEN
 SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
 FLASH YELLOW IN CONTROLLER FLASH?...N
 GREEN EXTENSION (0-255 SEC)...0
 YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
 RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
 OUTPUT AS PHASE # (0=NONE, 1-16)...0

OVERLAP PROGRAMMING COMPLETE

LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS), SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2 AND 3.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)
 IF ACTIVE PHASE #1 IS ON
 AND RED CLEAR ON PHASE #1 IS ON
 ↓
 SCROLL DOWN
 THEN:
 SET OUTPUT ASSIGNMENT #50 ON
 SET OUTPUT ASSIGNMENT #51 OFF

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)
 IF ACTIVE PHASE #1 IS ON
 ↓
 SCROLL DOWN
 THEN:
 SET OUTPUT ASSIGNMENT #52 OFF

NOTE: LOGIC FOR SWITCHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)
 IF YELLOW ON PHASE #1 IS ON
 ↓
 SCROLL DOWN
 THEN:
 SET OUTPUT ASSIGNMENT #51 ON

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE
 OUTPUT 50 = Overlap A Red
 OUTPUT 51 = Overlap A Yellow
 OUTPUT 52 = Overlap A Green

FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO INSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

- ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
- ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
- REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-1065
 DESIGNED: September 2021
 SEALED: 9/30/2021
 REVISED:

30-SEPT-2021 14:23
 W:\1065\em\el\09-1065.dgn
 cbs:tr:tkl:and

Electrical Detail - Sheet 2 of 4

ELLECTRICAL AND PROGRAMMING DETAILS FOR: US 70 (Statesville Boulevard) at SR 1728 (Barringer Rd.)

Prepared In the Offices of:
 C. Strickland
 Mobility and Signal Management
 750 N. Greenfield Pkwy, Garner, NC 27529

Division 9 Rowan County W. of Salisbury
 PLAN DATE: September 2021 REVIEWED BY: T. Joyce
 PREPARED BY: C. Strickland REVIEWED BY:

REVISIONS INIT. DATE

Seal: SEAL 031001
 ENGINEER TODD JOYCE

DocuSign by: D. Todd Joyce 10/1/2021
 SIG. INVENTORY NO. 09-1065


DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.
2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.


FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

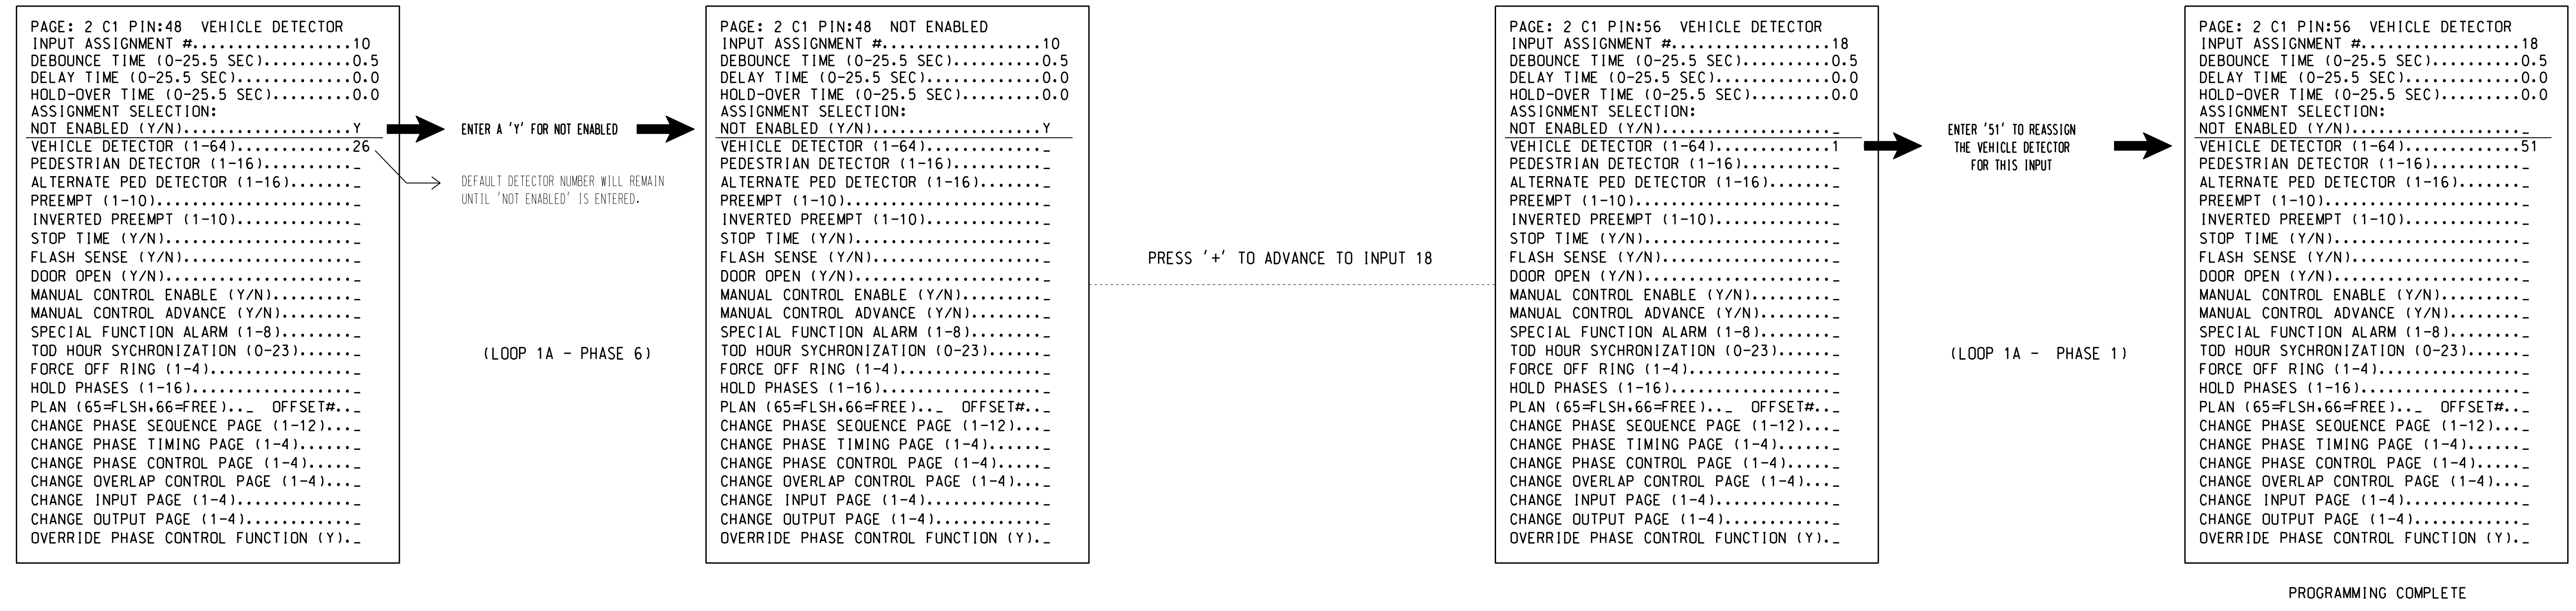

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

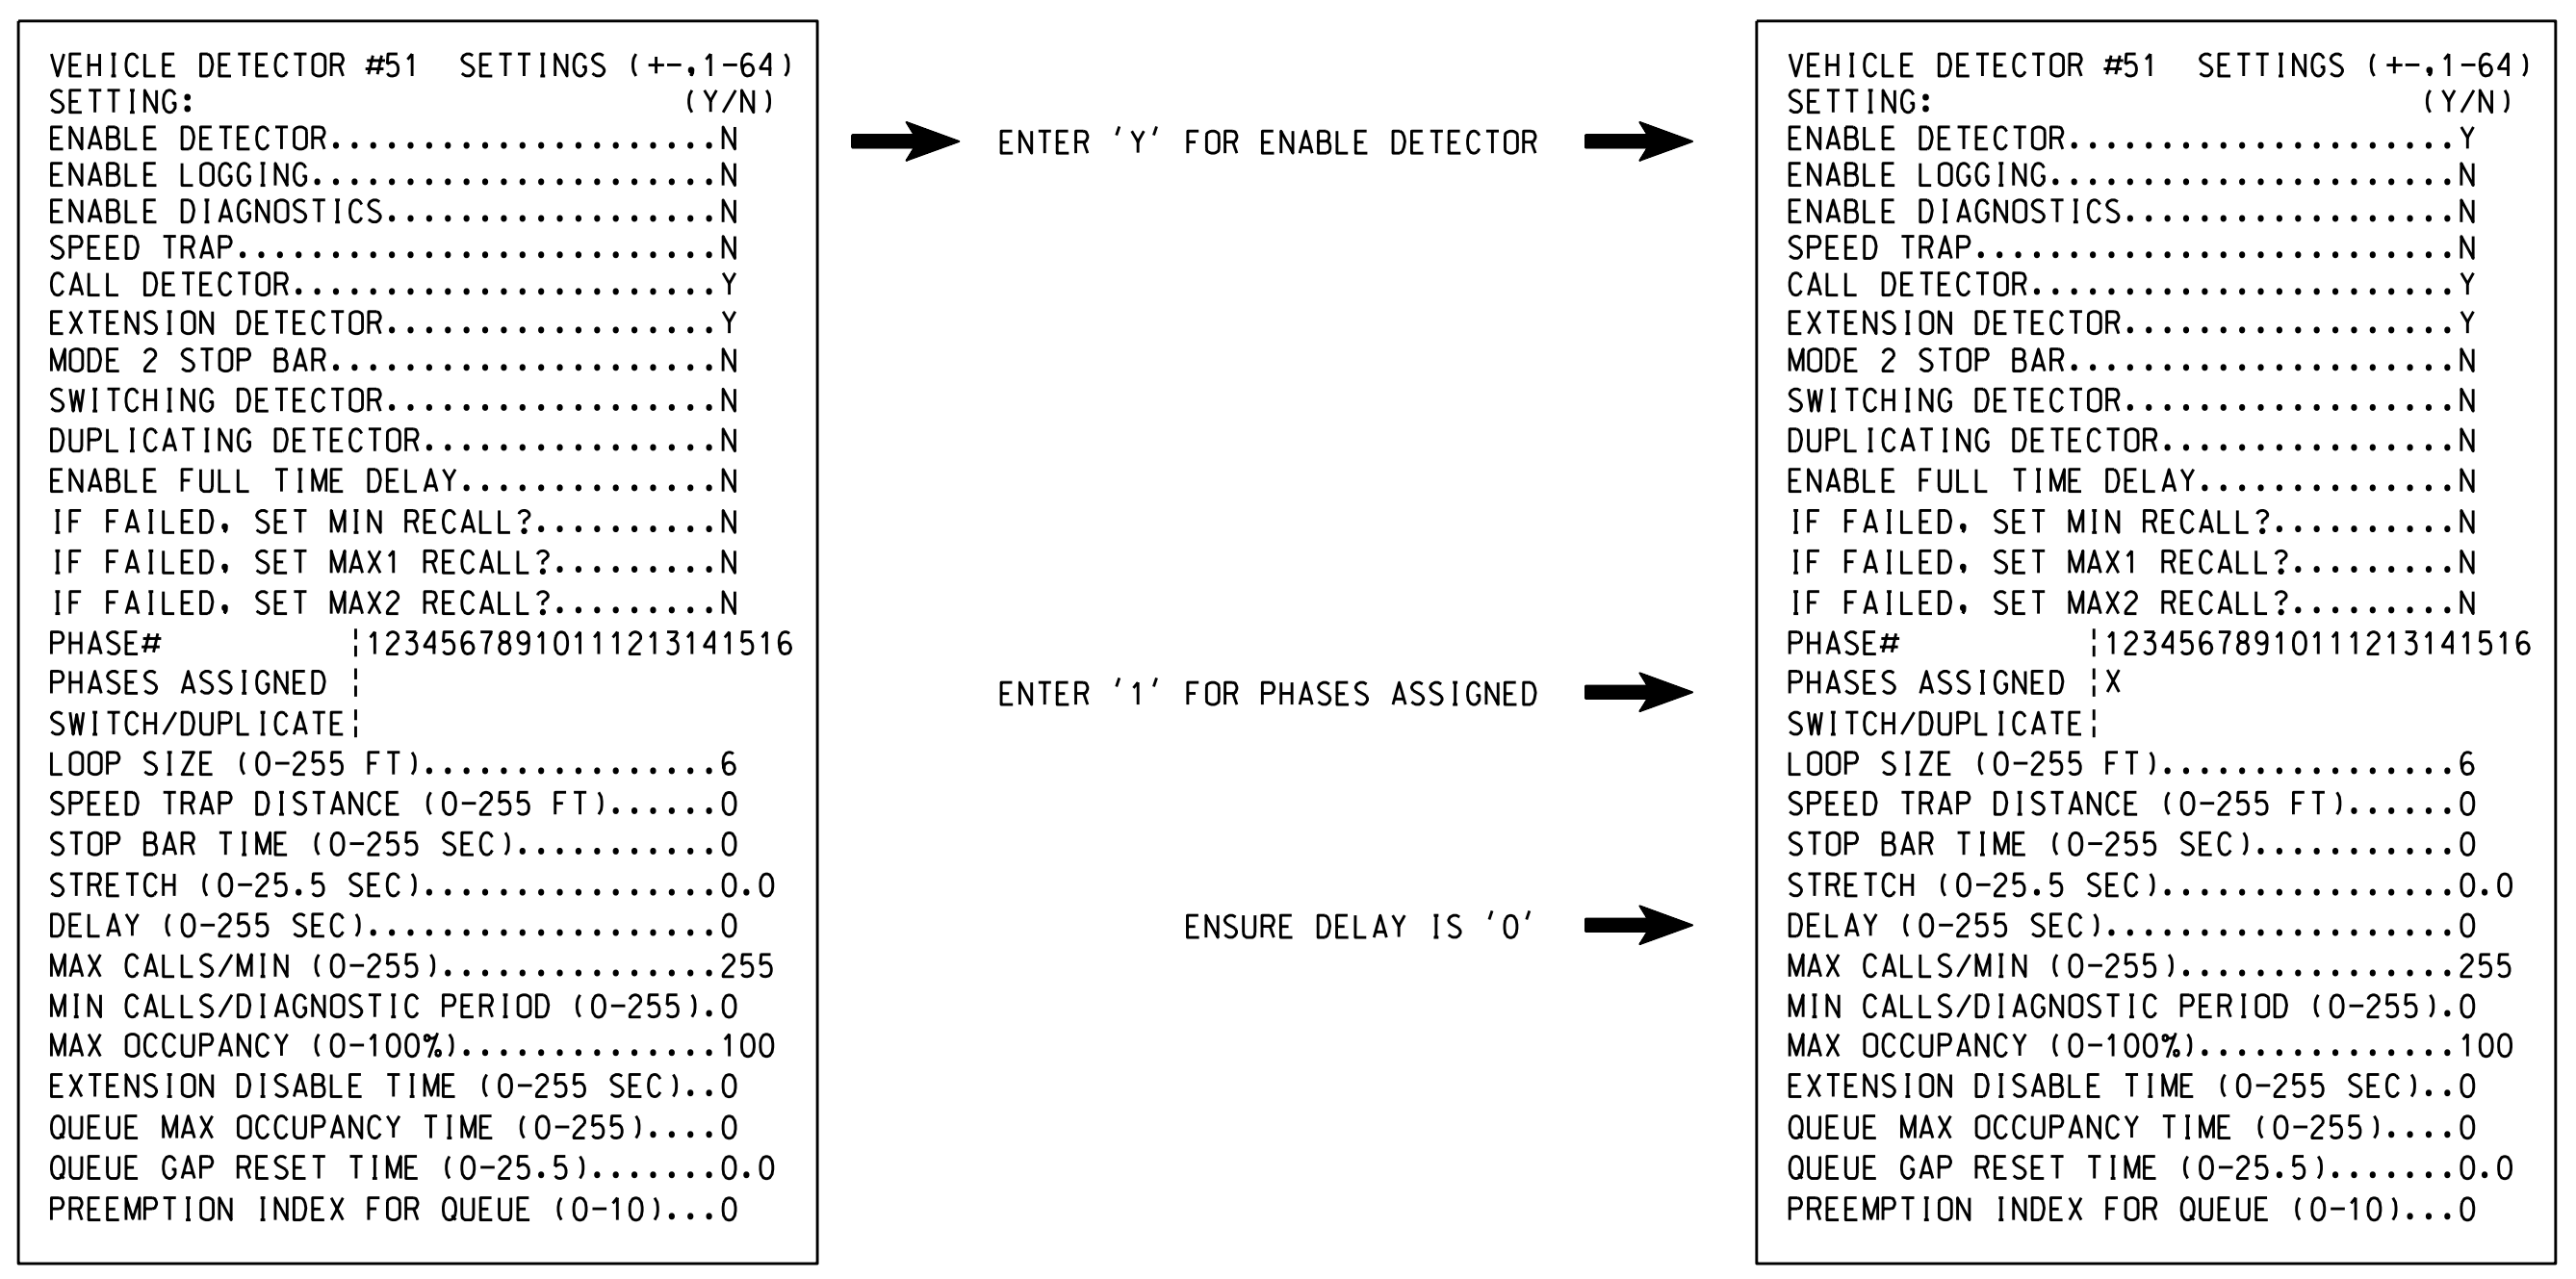

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-1065
 DESIGNED: September 2021
 SEALED: 9/30/2021
 REVISED:

Electrical Detail - Sheet 3 of 4

	US 70 (Statesville Boulevard) at SR 1728 (Barringer Rd.)		
	Prepared In the Offices of: C. Strickland T. Joyce	Division 9 PLAN DATE: September 2021 PREPARED BY: C. Strickland	
REVISIONS		INIT. DATE	DocuSigned by: Todd Joyce 10/1/2021

750 N. Greenfield Pkwy, Garner, NC 27529

SIG. INVENTORY NO. 09-1065

30-SEP-2021 1:42:24
 W:\1065\em\en\09-1065-wk.dgn
 cbs:tlr:ckl:and

ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

ALTERNATE PHASING PAGE CHANGE SUMMARY




THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAPS PAGE 2: Modifies overlap parent phases for head 11 to run protected turns only.



INPUTS PAGE 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 09-1065
DESIGNED: September 2021
SEALED: 9/30/2021
REVISED:


Electrical Detail - Sheet 4 of 4

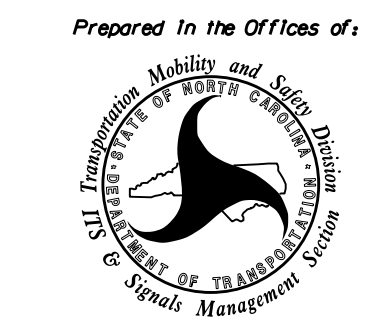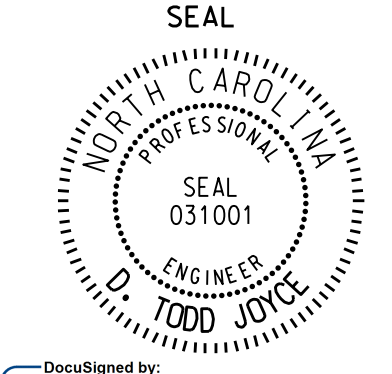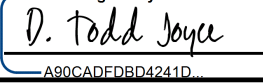ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared In the Offices of:  750 N. Greenfield Pkwy, Garner, NC 27529	US 70 (Statesville Boulevard) at SR 1728 (Barringer Rd.) Division 9 Rowan County W. of Salisbury PLAN DATE: September 2021 REVIEWED BY: T. Joyce PREPARED BY: C. Strickland REVIEWED BY:	DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED SEAL  SEAL 031001 ENGINEER TODD JOYCE												
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 70%;">REVISIONS</th> <th style="width: 15%;">INIT.</th> <th style="width: 15%;">DATE</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>		REVISIONS	INIT.	DATE										DocuSigned by:  10/1/2021 DATE SIG. INVENTORY NO. 09-1065
REVISIONS	INIT.	DATE												

DEFAULT PHASING DIAGRAM

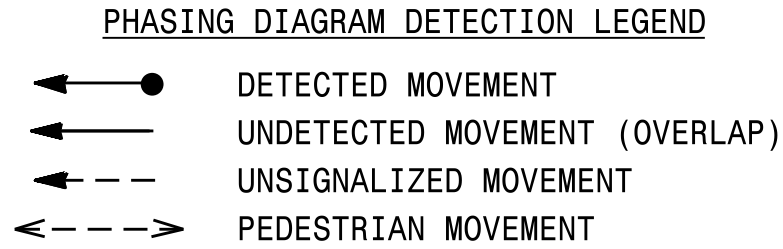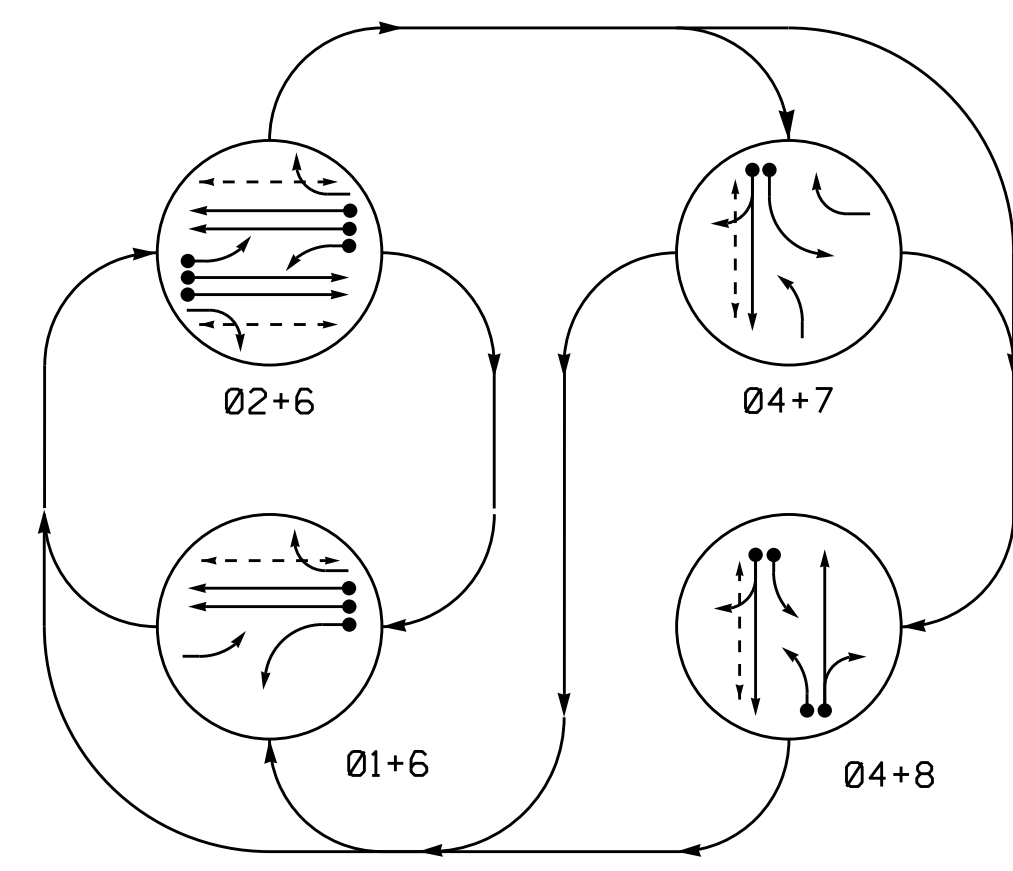


DEFAULT EV PREEMPT PHASES (Medium Priority)

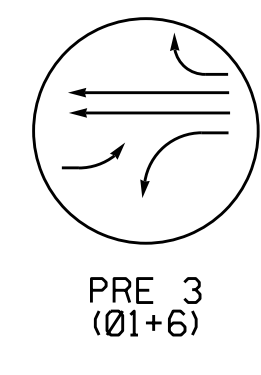


DEFAULT PHASING TABLE OF OPERATION

SIGNAL FACE	PHASE					
	01+6	02+6	04+7	04+8	PRE 3	FLOW
11	←	←	←	←	←	←
21	←	←	←	←	←	←
22, 23	R	G	R	R	R	Y
41, 42	R	R	G	G	R	R
62	G	G	R	R	G	Y
63	G	G	R	R	G	Y
71	←	←	←	←	←	←
81, 82	R	R	R	G	R	R
83	←	←	←	←	←	←
P21, P22	DW	W	DW	DW	DW	DRK
P41, P42	DW	DW	W	W	DW	DRK
P61, P62	W	W	DW	DW	DW	DRK

ALTERNATE PHASING DIAGRAM

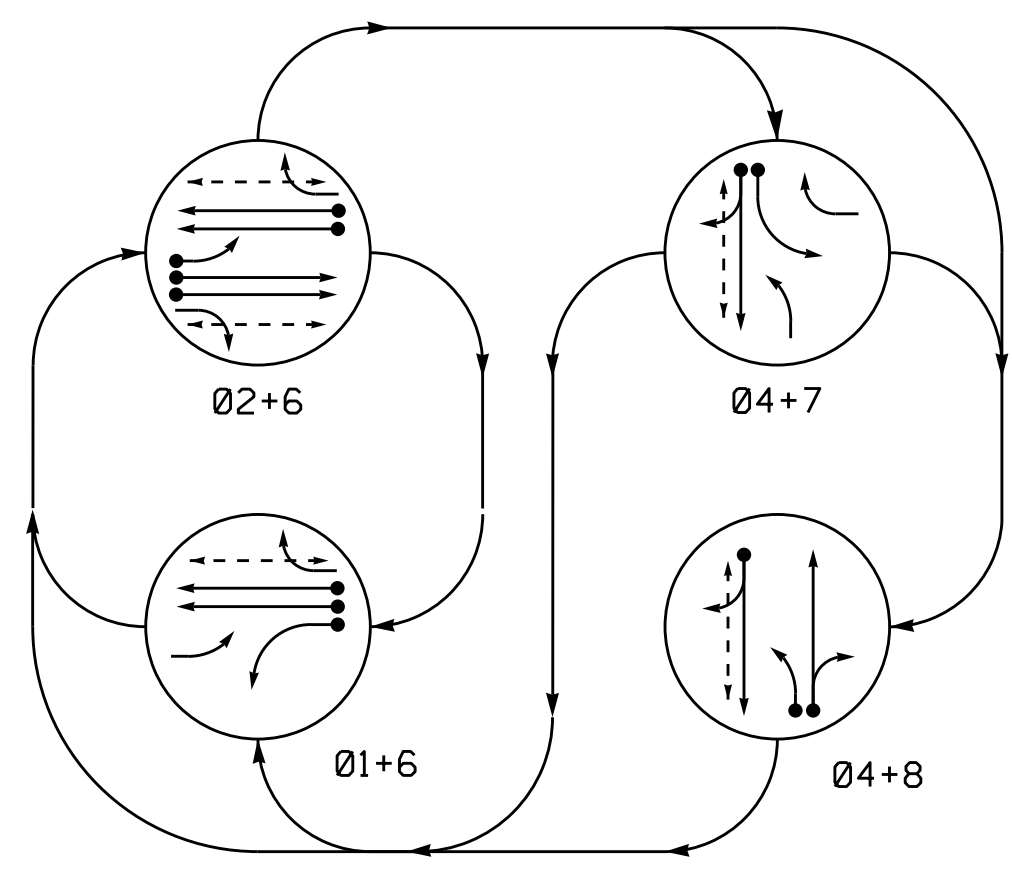

ALTERNATE EV PREEMPT PHASES (Medium Priority)

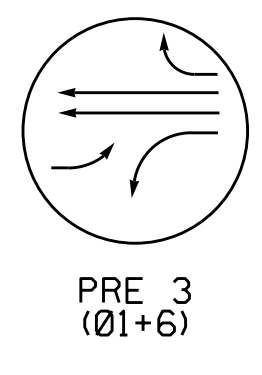

ALTERNATE PHASING TABLE OF OPERATION

SIGNAL FACE	PHASE					
	01+6	02+6	04+7	04+8	PRE 3	FLOW
11	←	←	←	←	←	←
21	←	←	←	←	←	←
22, 23	R	G	R	R	R	Y
41, 42	R	R	G	G	R	R
62	G	G	R	R	G	Y
63	G	G	R	R	G	Y
71	←	←	←	←	←	←
81, 82	R	R	R	G	R	R
83	←	←	←	←	←	←
P21, P22	DW	W	DW	DW	DW	DRK
P41, P42	DW	DW	W	W	DW	DRK
P61, P62	W	W	DW	DW	DW	DRK

4 Phase Fully Actuated w/ Emergency Vehicle Preemption (Salisbury Signal System)


NOTES

- Refer to "Roadway Standard Drawings NCDOT" dated January 2018 and "Standard Specifications for Roads and Structures" dated January 2018.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 1 may be lagged.
- Phase 7 may be lagged.
- Set all detector units to presence mode.
- In the event of loop replacement, refer to the current ITS and Signals Design Manual and submit a Plan of Record to the Signal Design Section.
- Omit "WALK" and flashing "DON'T WALK" with no pedestrian calls.
- Program pedestrian heads to countdown the flashing "Don't Walk" time only.
- Pavement markings are existing.
- This intersection features an optical preemption system. Shown locations of optical detectors are conceptual only.
- The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
- Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.

OASIS 2070 EV PREEMPTION

FUNCTION	PRE 3
Interval 1 - Dwell Green	255
Interval 1 - Dwell Yellow	0.0*
Interval 1 - Dwell Red	0.0*
Interval 5 - Exit Green	1
Interval 5 - Yellow	0.0
Interval 5 - Red	0.0
Exit Phase(s)	2+6
Priority	MED
Delay Time	0
Min Green Before Pre	1
Ped Clear Before Pre	0.0*
Yellow Clear Before Pre	0.0*
Red Clear Before Pre	0.0*
Dwell Min Time	7
Dwell Max Time (Minutes)	2
Enable Backup Protection	N
Ped Clear Through Yellow	Y
Omit Overlaps	-
Preempt Extend**	2

* Time defaults to time used for phase during normal operation
 ** Program Timing on Optical Detection Unit

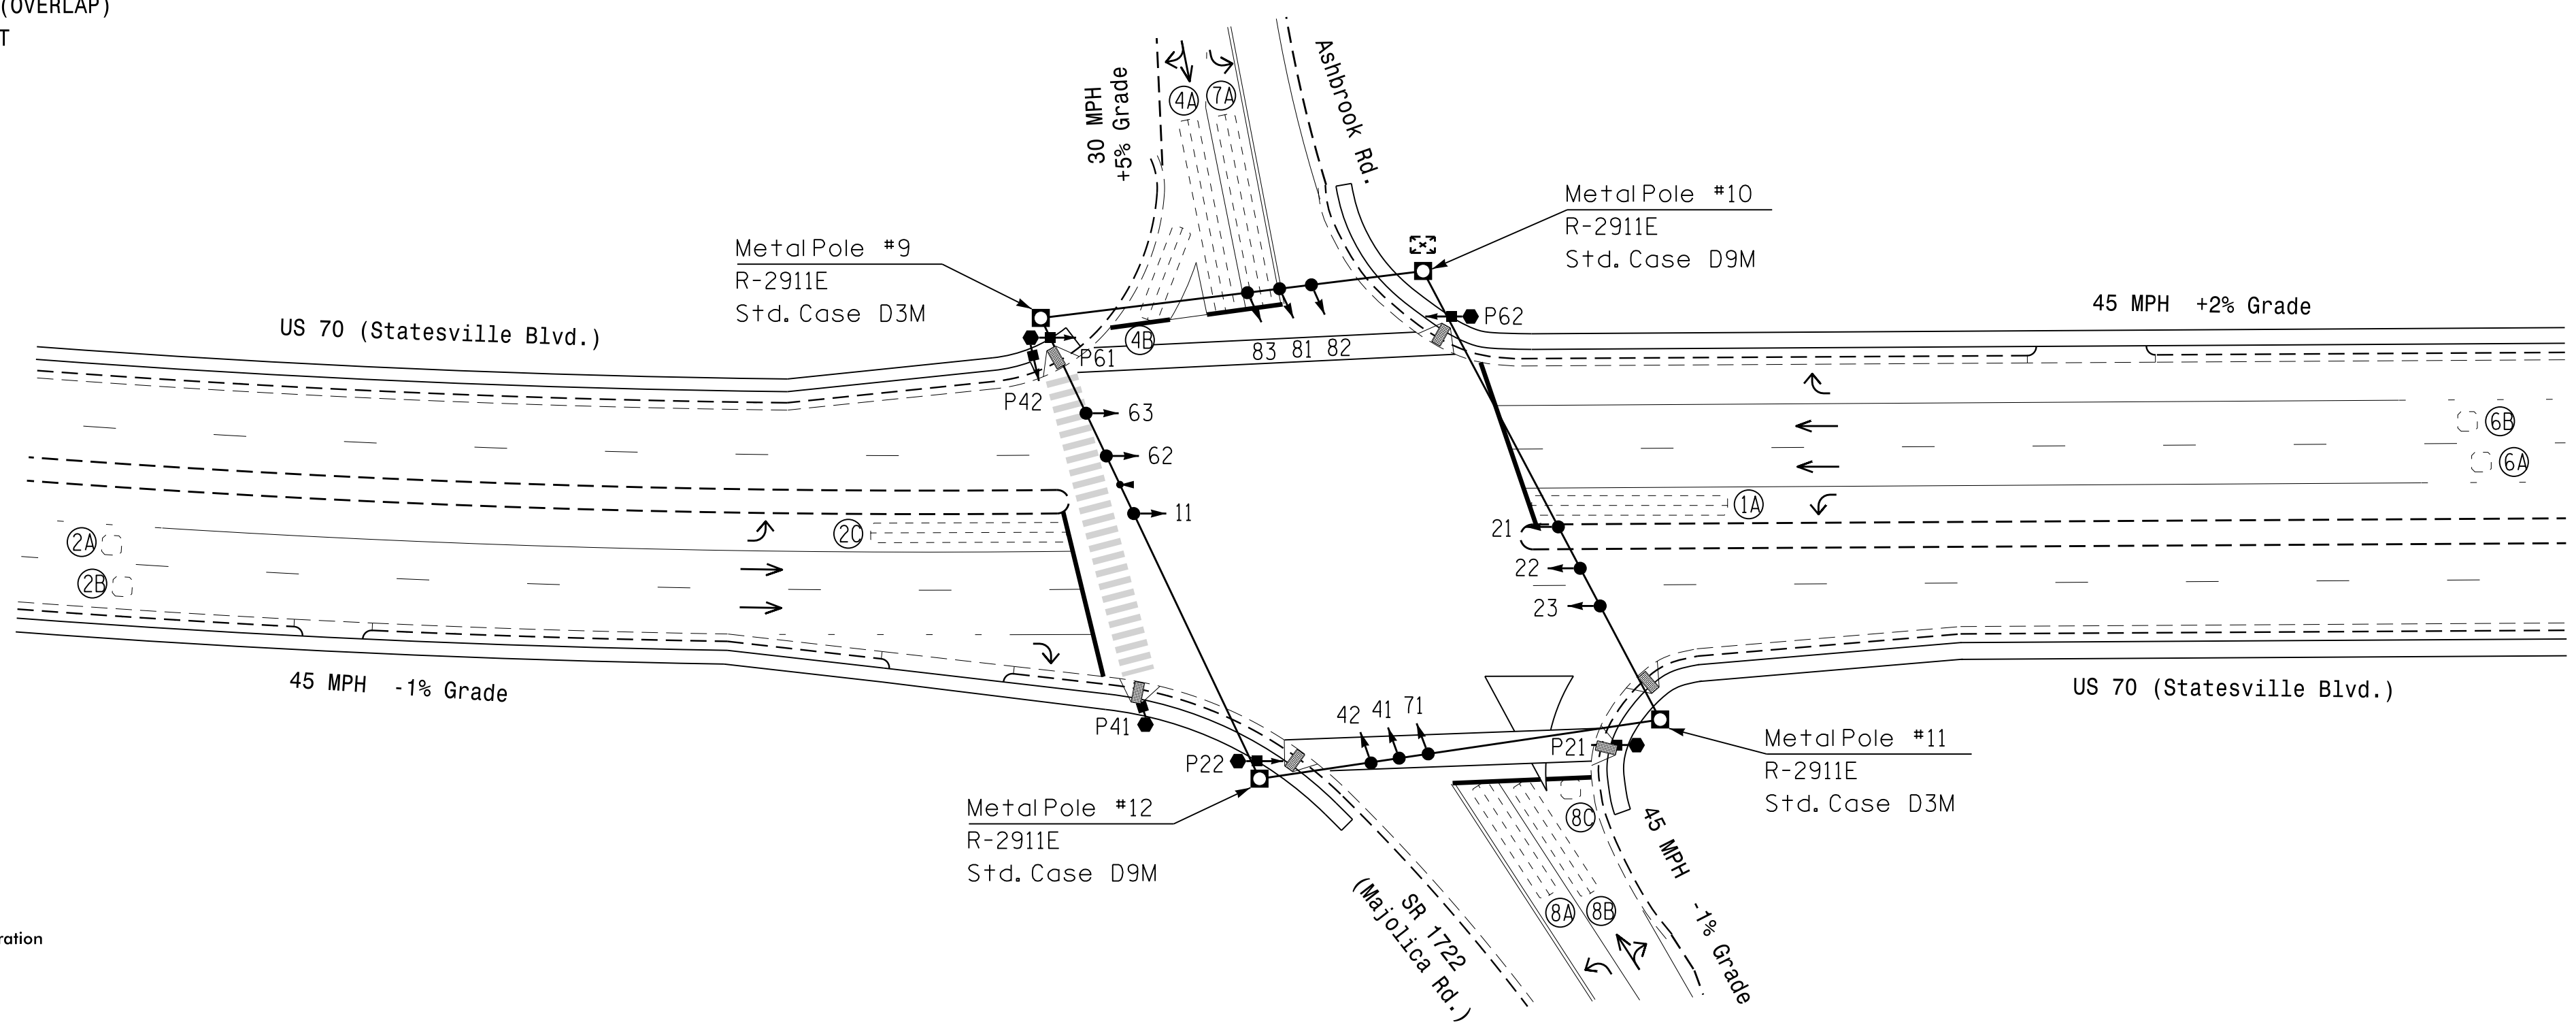

OASIS 2070 TIMING CHART

FEATURE	PHASE							
	1	2	4	6	7	8		
Min Green 1 *	7	12	7	12	7	7		
Extension 1 *	2.0	6.0	2.0	6.0	2.0	2.0		
Max Green 1 *	25	120	45	120	15	45		
Yellow Clearance	3.0	4.6	4.6	4.6	3.0	4.6		
Red Clearance	2.9	2.0	3.1	2.0	3.3	3.1		
Red Revert	2.0	2.0	2.0	2.0	2.0	2.0		
Walk 1 *	-	7	7	7	-	-		
Don't Walk 1	-	21	25	27	-	-		
Seconds Per Actuation *	-	1.5	-	1.5	-	-		
Max Variable Initial *	-	34	-	34	-	-		
Time Before Reduction *	-	20	-	20	-	-		
Time To Reduce *	-	45	-	45	-	-		
Minimum Gap	-	3.0	-	3.0	-	-		
Recall Mode	-	MIN RECALL	-	MIN RECALL	-	-		
Vehicle Call Memory	-	YELLOW	-	YELLOW	-	-		
Dual Entry	-	-	ON	-	-	ON		
Simultaneous Gap	ON	ON	ON	ON	ON	ON		


* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

OASIS 2070 LOOP & DETECTOR INSTALLATION CHART

LOOP	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING				SYSTEM LOOP	NEW CARD
					PHASE	CALLING	EXTENSION	STRETCH TIME		
1A	6X60	0	2-4-2	-	1	Y	Y	-	15*	-
2A	6X6	300	EXISTING	-	2	Y	Y	-	-	-
2B	6X6	300	EXISTING	-	2	Y	Y	-	-	-
2C	6X60	0	2-4-2	-	2	Y	Y	Y	3	-
4A	6X60	0	2-4-2	-	4	Y	Y	-	10	-
4B	6X30	+5	2-4-2	-	4	Y	Y	-	15	-
6A	6X6	300	EXISTING	-	6	Y	Y	-	-	-
6B	6X6	300	EXISTING	-	6	Y	Y	-	-	-
7A	6X60	0	2-4-2	-	7	Y	Y	-	15**	-
8A	6X40	0	2-4-2	-	8	Y	Y	-	3	-
8B	6X40	0	2-4-2	-	8	Y	Y	-	10	-
8C	6X6	0	2-4-2	-	8	Y	Y	-	15	-

* Disable delay during alternate phasing operation.
 ** Reduce delay to 3 seconds during alternate phasing operation.
 # Disable phase call for loop during alternate phasing operation.

SIGNAL FACE I.D.

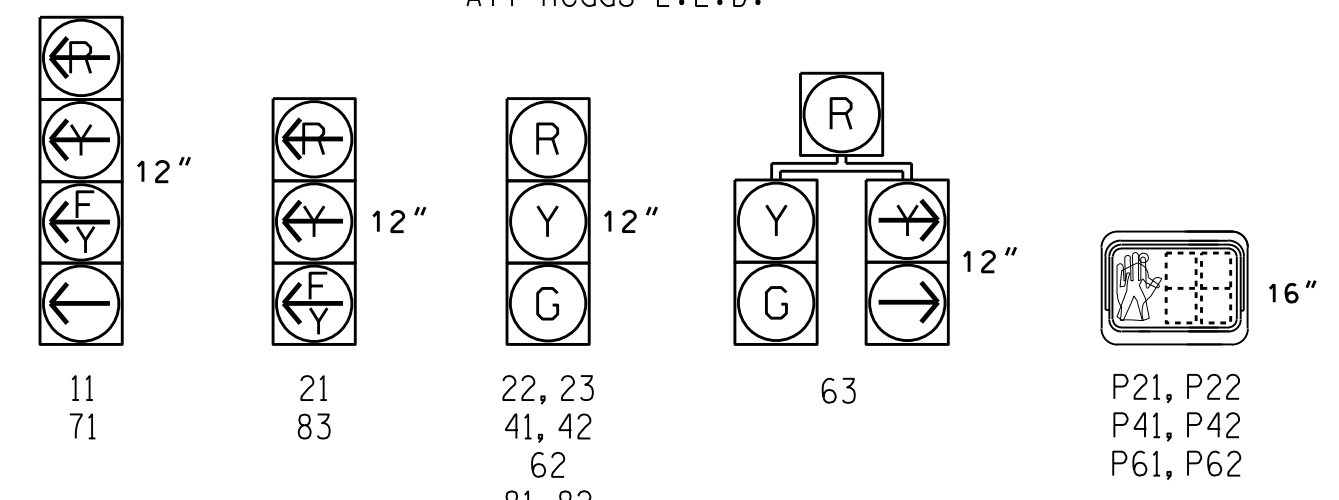

LEGEND

PROPOSED	EXISTING
○ Traffic Signal Head	● N/A
● Modified Signal Head	○ N/A
□ Sign	□ N/A
○ Pedestrian Signal Head	○ N/A
○ Signal Pole with Guy	○ N/A
○ Signal Pole with Sidewalk Guy	○ N/A
□ Inductive Loop Detector	□ N/A
□ Controller & Cabinet	□ N/A
□ Junction Box	□ N/A
- - - 2-in Underground Conduit	- - - N/A
- - - Right of Way	- - - N/A
→ Directional Arrow	→ N/A
→ Curb Ramp	→ N/A
○ Metal Strain Pole	○ N/A
○ Type II Signal Pedestal	○ N/A
○ Out of Pavement Detector	○ N/A

Signal Upgrade

Prepared in the Offices of:
 TRANSPORTATION MOBILITY AND SAFETY DIVISION
 NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
 Signal Design Section

US 70 (Statesville Boulevard) at SR 1722 (Majolica Road) and Ashbrook Road
 Rowan County, Salisbury

Division 9
 PLAN DATE: September 2021 REVIEWED BY: J.A. Lohr
 PREPARED BY: J.A. Lohr REVIEWED BY: [Signature]

REVISIONS: [Table with columns for REVISIONS, INIT., DATE]

SCALE: 1" = 40'

DATE: 9/30/2021

SIG. INVENTORY NO. 09-1068


09-1068-2021 1P-41
 S:\IT\2021\115\SIGNAL\09-1068.sia.dgn-2021mmad.dgn
 10/08/2021 10:41:15 AM

EDI MODEL 2018ECL-NC CONFLICT MONITOR

PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

REMOVE DIODE JUMPERS 1-6, 1-9, 1-11, 1-15, 2-6, 2-9, 2-11, 2-13, 2-15, 4-7, 4-8, 4-10, 4-12, 4-14, 6-9, 6-11, 6-13, 6-15, 7-10, 7-12, 7-14, 8-10, 8-12, 8-14, 9-11, 9-13, 9-15, 10-12, 10-14, 11-13, 11-15, 12-14 and 13-15.

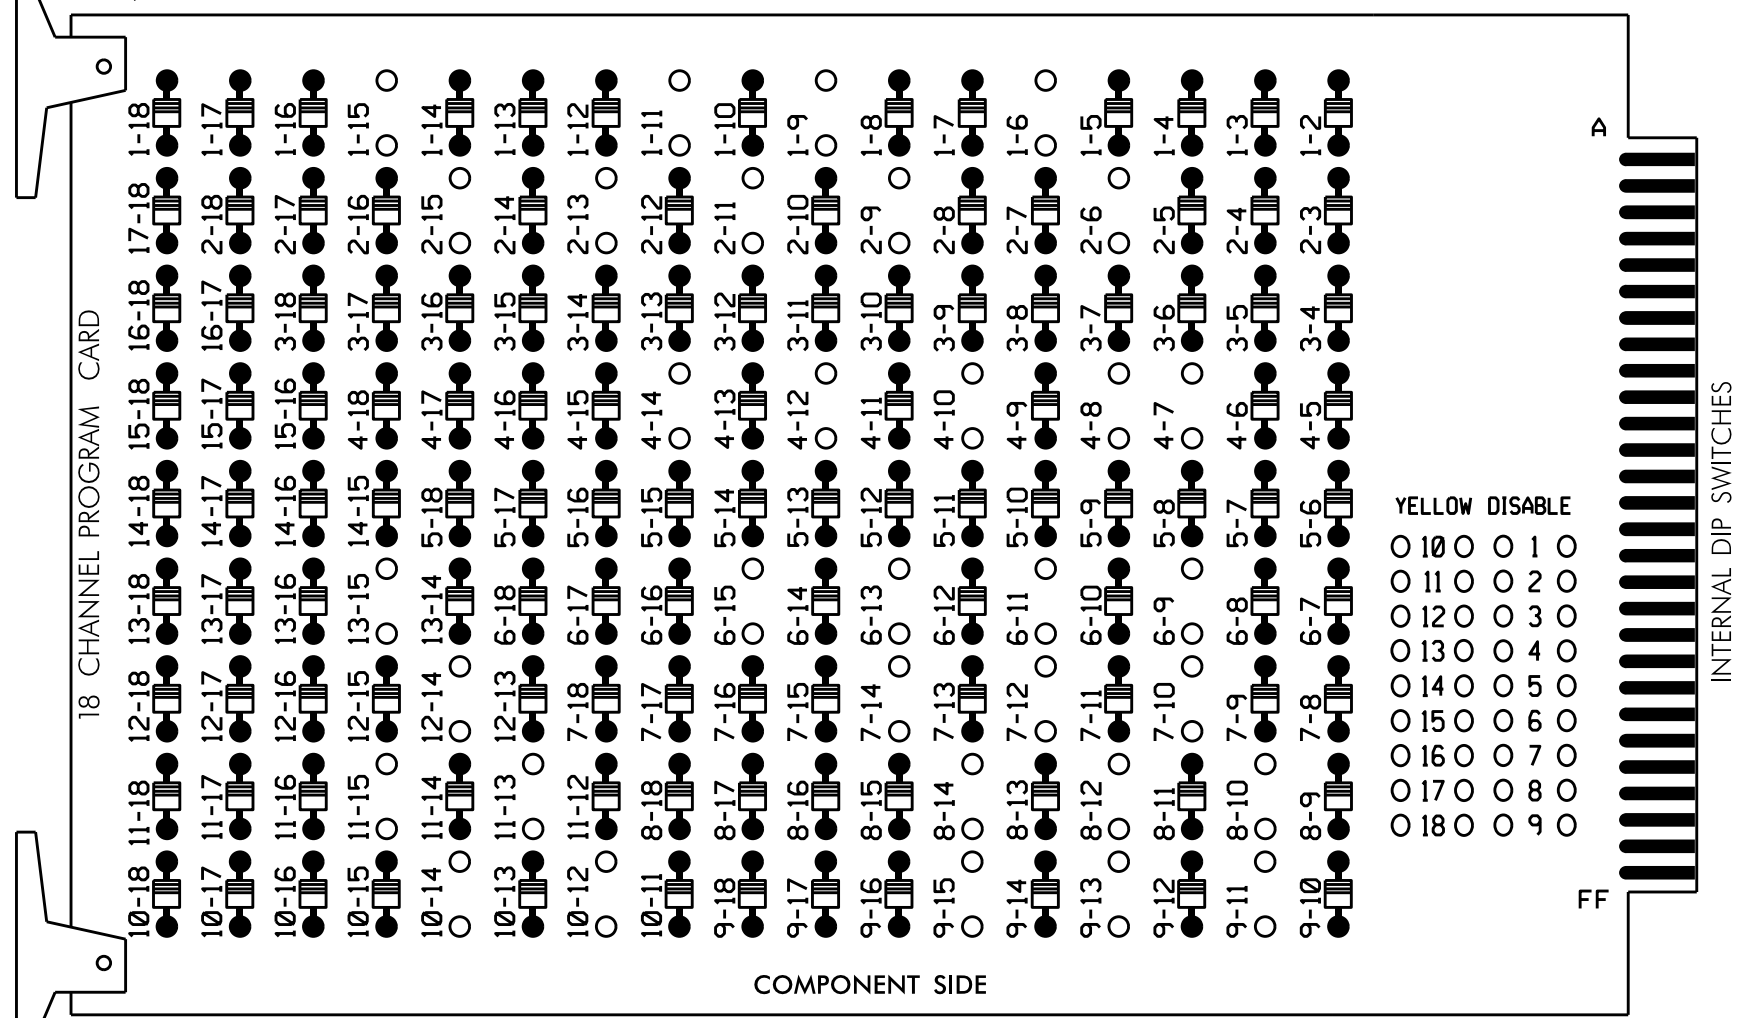

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

■ = DENOTES POSITION OF SWITCH

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Program phases 4 and 8 for Dual Entry.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Variable Initial and Gap Reduction.
5. Program phases 2 and 6 for Start Up In Green.
6. Program phases 2, 4 and 6 for 'STARTUP PED CALL'.
7. Program phases 2 and 6 for Yellow Flash, and overlaps 1 and 2 as Wag Overlaps.
8. The cabinet and controller are part of the Salisbury Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070
 CABINET.....332 W/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S1,S2,S3,S5,S6,S8,S9,S10,S11,
 AUX S1,AUX S2,AUX S4,AUX S5
 PHASES USED.....1,2,2 PED,4,4 PED,6,6 PED,7,8
 OVERLAP "A".....1+2
 OVERLAP "B".....4
 OVERLAP "C".....6
 OVERLAP "D".....7+8

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	22,23	P21, P22	NU	41,42	P41, P42	NU	62,63	P61, P62	63	71	81,82	NU	11	83	NU	21	71
RED		128			101			134	*		107							
YELLOW	*	129			102			135			108							
GREEN		130			103			136			109							
RED ARROW													A121	A124		A114	A101	
YELLOW ARROW										123			A122	A125		A115	A102	
FLASHING YELLOW ARROW													A123	A126		A116	A103	
GREEN ARROW	127									124	124							
Hand				113			104			119								
Walking Person				115			106			121								


NU = Not Used
 * Denotes install load resistor. See load resistor installation detail sheet 2.
 ★ See pictorial of head wiring in detail below.

COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

INPUT FILE POSITION LAYOUT

(front view)

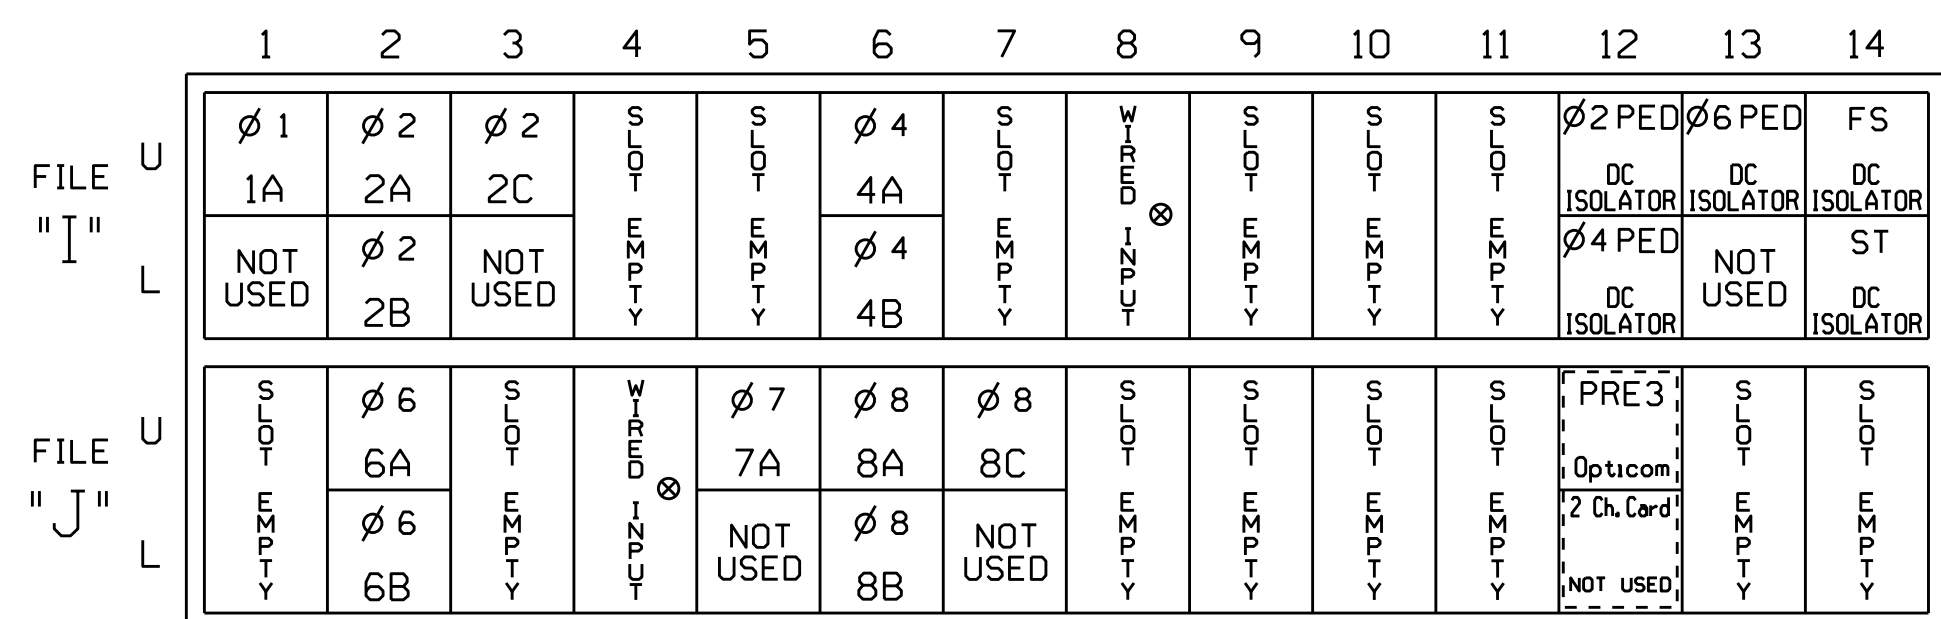


EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
 ST = STOP TIME
 PRE = PREEMPT

⊗ Wired Input - Do not populate slot with detector card

TYPICAL OPTICOM FIELD WIRE DETAIL

(input file, rear view)

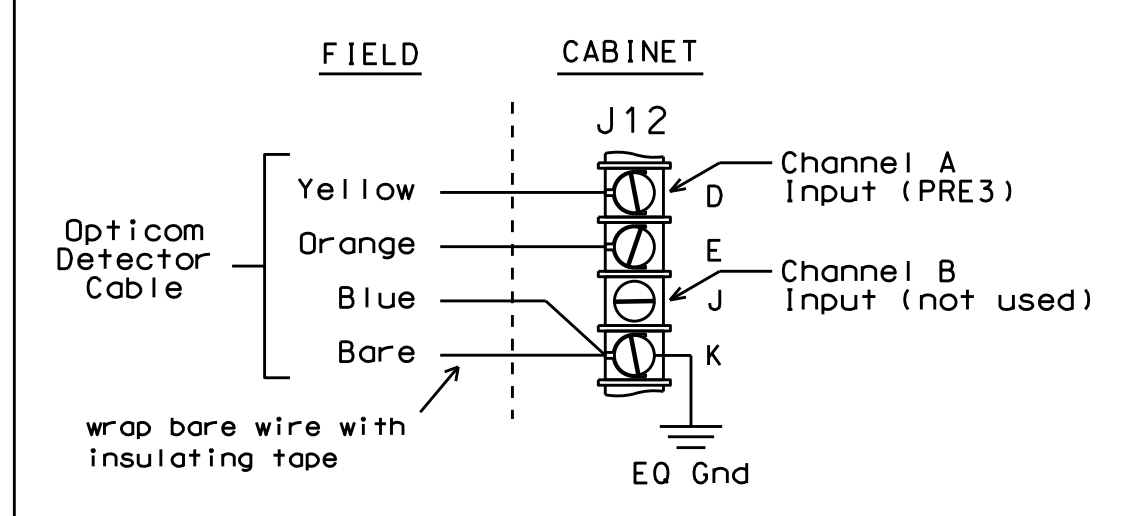


INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A ¹	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10★	26	6	Y	Y	Y		3
	-	I1U	56	18★	51	1	Y	Y			
2A	TB2-5,6	I2U	39	1	2	Y	Y				
2B	TB2-7,8	I2L	43	5	12	2	Y	Y			
2C	TB2-9,10	I3U	63	25	32	2	Y	Y	Y		3
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			10
4B	TB4-11,12	I6L	45	7	14	4	Y	Y			15
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			
7A ²	TB5-5,6	J5U	57	19	7	7	Y	Y			15
	-	I8U	49	11★	24	4	Y	Y	Y		3
	-	J5U	57	19★	57	7	Y	Y			3
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			3
8B	TB5-11,12	J6L	46	8	18	8	Y	Y			10
8C	TB7-1,2	J7U	66	28	38	8	Y	Y			15
PED PUSH BUTTONS											
P21,P22	TB8-4,6	I12U	67	29	PED 2	2 PED					
P41,P42	TB8-5,6	I12L	69	31	PED 4	4 PED					
P61,P62	TB8-7,9	I13U	68	30	PED 6	6 PED					

NOTE:
 INSTALL DC ISOLATORS IN INPUT FILE SLOTS 112 AND 113.

- 1 Add jumper from I1-W to J4-W, on rear of input file.
 - 2 Add jumper from J5-W to I8-W, on rear of input file.
- ★ See Input Page Assignment programming details on sheets 3 and 4.


INPUT FILE POSITION LEGEND: J2L

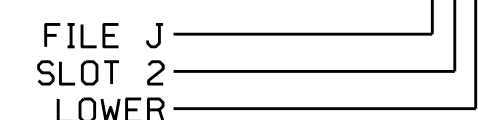

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-1068
 DESIGNED: September 2021
 SEALED: 9/30/2021
 REVISED:

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

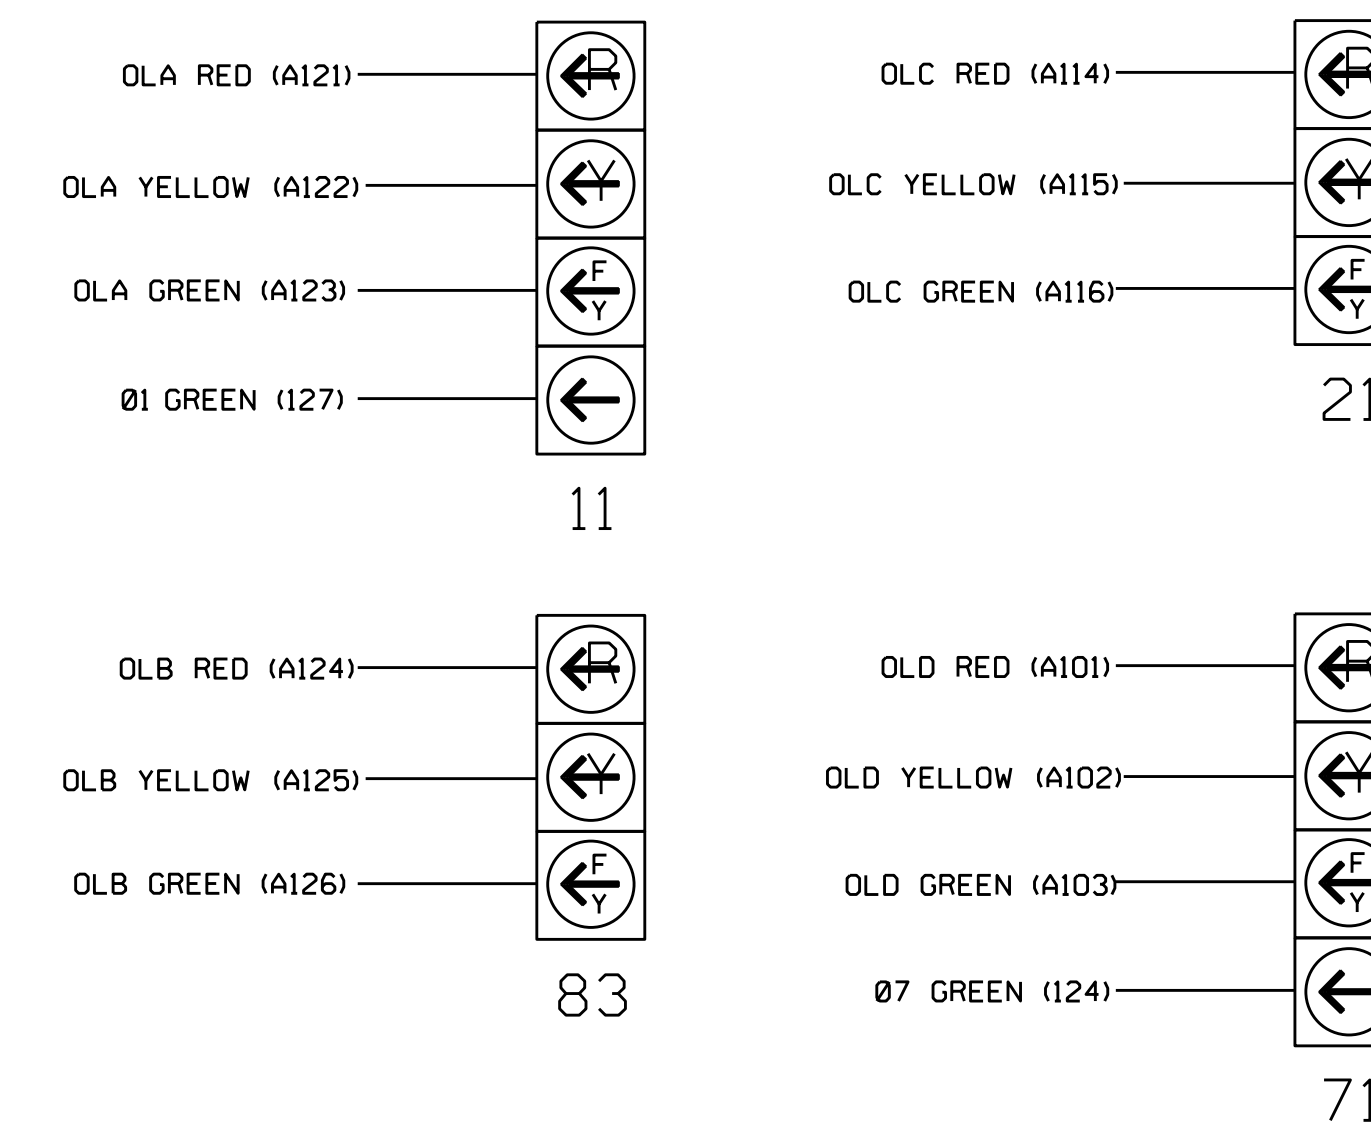

NOTE

1. The sequence display for signal heads 11 and 71 require special logic programming. See sheet 2 for programming instructions.

Electrical Detail - Sheet 1 of 5

Electrical and Programming Details for: US 70 (Statesville Blvd.) at SR 1722 (Majolica Road) and Ashbrook Road

Prepared In the Offices of: *Transitional Mobility and Safety Division*

Division 9 Rowan County Salisbury

PLAN DATE: September 2021 REVIEWED BY: T. Joyce

PREPARED BY: C. Strickland REVIEWED BY:

REVISIONS: _____ INIT. DATE _____

DocuSigned by: *D. Todd Joyce* 9/30/2021

SIG. INVENTORY NO. 09-1068

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL: *PROFESSIONAL ENGINEER D. TODD JOYCE*

LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5 AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)
IF ACTIVE PHASE #1 IS ON
AND RED CLEAR ON PHASE #1 IS ON

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #50 ON
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

LOGICAL I/O COMMAND #2 (+/-COMMAND#)
IF ACTIVE PHASE #1 IS ON

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

LOGICAL I/O COMMAND #3 (+/-COMMAND#)
IF YELLOW ON PHASE #1 IS ON

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

LOGICAL I/O COMMAND #4 (+/-COMMAND#)
IF ACTIVE PHASE #7 IS ON
AND RED CLEAR ON PHASE #7 IS ON

NOTE: LOGIC FOR PHASE 7 RED CLEAR WHEN TRANSITIONING FROM PHASE 7 TO PHASE 8 (HEAD 71).

SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #39 ON
SET OUTPUT ASSIGNMENT #40 OFF

PRESS '+'

LOGICAL I/O COMMAND #5 (+/-COMMAND#)
IF ACTIVE PHASE #7 IS ON

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 7 (HEAD 71).

SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #41 OFF

PRESS '+'

LOGICAL I/O COMMAND #6 (+/-COMMAND#)
IF YELLOW ON PHASE #7 IS ON

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 7 (HEAD 71).

SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #40 ON

PRESS '+'

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

EMERGENCY VEHICLE PREEMPTION PROGRAMMING DETAIL

(program controller as shown below)

From Main Menu press 'A' (Preemption), then '1' (Standard Preemptions). Press 'NEXT' as needed to advance to Preempt 3.

PREEMPTION #3 SETTINGS (NEXT:1-10)
INTERVAL/TIMING CLEAR/DWELL PHASES
GRN YEL RED 12345678910111213141516

1	255	0.0	0.0	X	X
2	0	0.0	0.0		
3	0	0.0	0.0		
4	0	0.0	0.0		
5	1	0.0	0.0	X	X

EXIT CALLS

OPTIONS


PRIORITY (Y/N TO SELECT)MED
DELAY TIMER (0-255 SEC)0
MIN GREEN BEFORE PRE (0= DEFAULT)....1
PED CLEAR BEFORE PRE (0= DEFAULT)....0
YELLOW CLEAR BEFORE PRE (0= DEFAULT)....0
RED CLEAR BEFORE PRE (0= DEFAULT)....0
DWELL MIN TIMER (0-255 SEC)7
DWELL MAX TIMER (0=OFF,1-255MIN)2
DWELL HOLD-OVER TIMER (0-255)0
LATCH CALL?N
LINK TO NEXT PREEMPT?N
ENABLE BACKUP PROTECTION?N
HOLD CLEAR 1 PHASES DURING DELAY? ...N
FAST GREEN FLASH DWELL PHASES?N
PED CLEARANCE THROUGH YELLOW?Y
INHIBIT OVERLAP GREEN EXTENSION? ...N
SERVICE DURING SOFTWARE FLASH? ...N
REST IN RED DURING DWELL INTERVAL? ..N
FLASH DWELL INTERVAL?N
ALLOW PEDS IN DWELL INTERVAL?N
RE-TIME DWELL INTERVAL?N
OVERLAPS:ABCDEFGHIJKLMNPO
DWELL INT FLASH YELLOW
OMIT OVERLAPS:

PROGRAMMING COMPLETE

Program extend time on optical detector unit for 2.0 seconds.

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

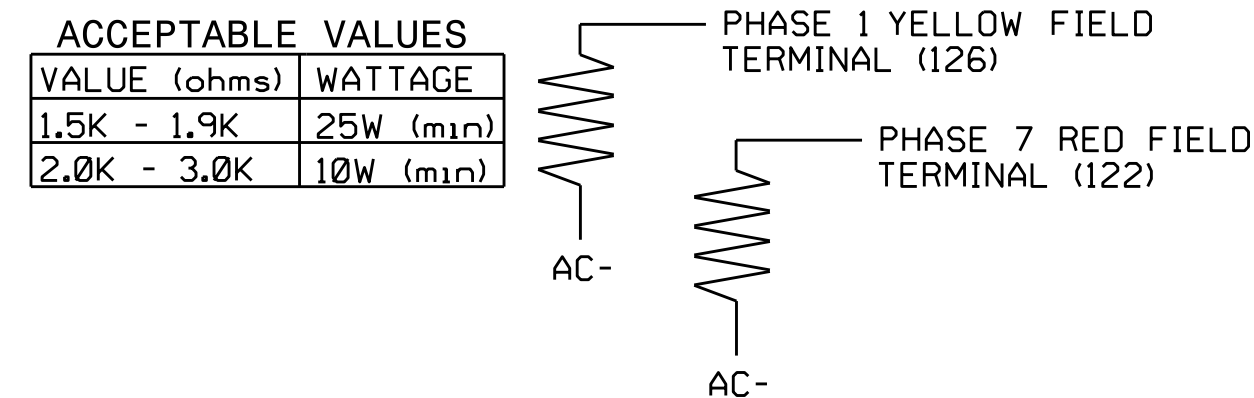

OUTPUT REFERENCE SCHEDULE

- OUTPUT 39 = Overlap D Red
- OUTPUT 40 = Overlap D Yellow
- OUTPUT 41 = Overlap D Green
- OUTPUT 50 = Overlap A Red
- OUTPUT 51 = Overlap A Yellow
- OUTPUT 52 = Overlap A Green

OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: XX
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

PAGE 1: VEHICLE OVERLAP 'B' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...N
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

PAGE 1: VEHICLE OVERLAP 'D' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: XX
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...N
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

OVERLAP PROGRAMMING COMPLETE

OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'A' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW - GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'B' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...N
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'C' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'D' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW - GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...N
GREEN EXTENSION (0-255 SEC).....0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

OVERLAP PROGRAMMING COMPLETE

Electrical Detail - Sheet 2 of 5

Prepared In the Offices of:

 750 N. Greenfield Pkwy, Garner, NC 27529

US 70 (Statesville Blvd.)
at
SR 1722 (Majolica Road)
and Ashbrook Road

Division 9 Rowan County Salisbury
 PLAN DATE: September 2021 REVIEWED BY: T. Joyce
 PREPARED BY: C. Strickland REVIEWED BY:
 REVISIONS INIT. DATE

DocuSigned by:
D. Todd Joyce 9/30/2021
DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL

 SEAL 031001
 ENGINEER
 TODD JOYCE

SIG. INVENTORY NO. 09-1068

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-1068
DESIGNED: September 2021
SEALED: 9/30/2021
REVISED:

30-SEB-2021 15:21
W:\1168\em\er\kxc.dgn
C:\sfr\1\k1.dgn

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

ENTER A 'Y' FOR NOT ENABLED
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64)..... PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - PHASE 1)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# ;12345678910111213141516 PHASES ASSIGNED ; SWITCH/DUPLICATE; LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# ;12345678910111213141516 PHASES ASSIGNED ;X SWITCH/DUPLICATE; LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-1068 DESIGNED: September 2021 SEALED: 9/30/2021 REVISED:

Electrical Detail - Sheet 3 of 5
US 70 (Statesville Blvd.) at SR 1722 (Majolica Road) and Ashbrook Road
Division 9 Rowan County Salisbury
PLAN DATE: September 2021 REVIEWED BY: T. Joyce
PREPARED BY: C. Strickland
REVISIONS INIT. DATE
9/30/2021
SIC. INVENTORY NO. 09-1068

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED
SEAL
PROFESSOR
SEAL 031001
ENGINEER
TODD JOYCE
9/30/2021
DATE


INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 7A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #11 (DETECTOR 24) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 4 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 57 TO INPUT #19 SO THAT THE DELAY ON LOOP 7A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 11 IS REACHED.

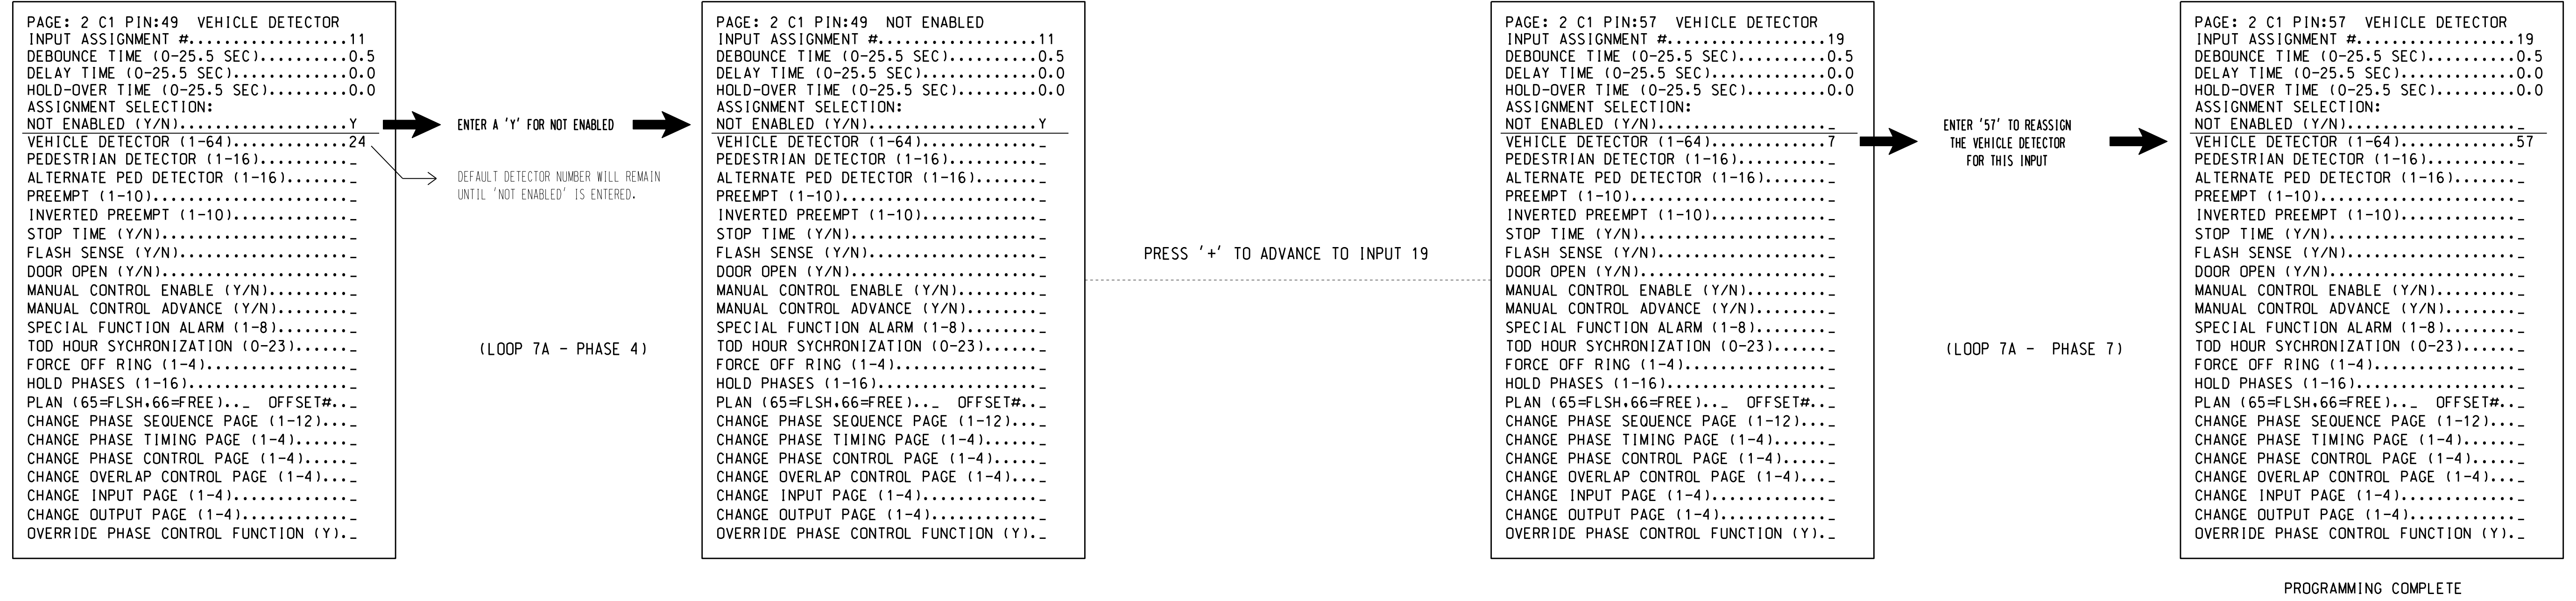


PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 7A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #57.

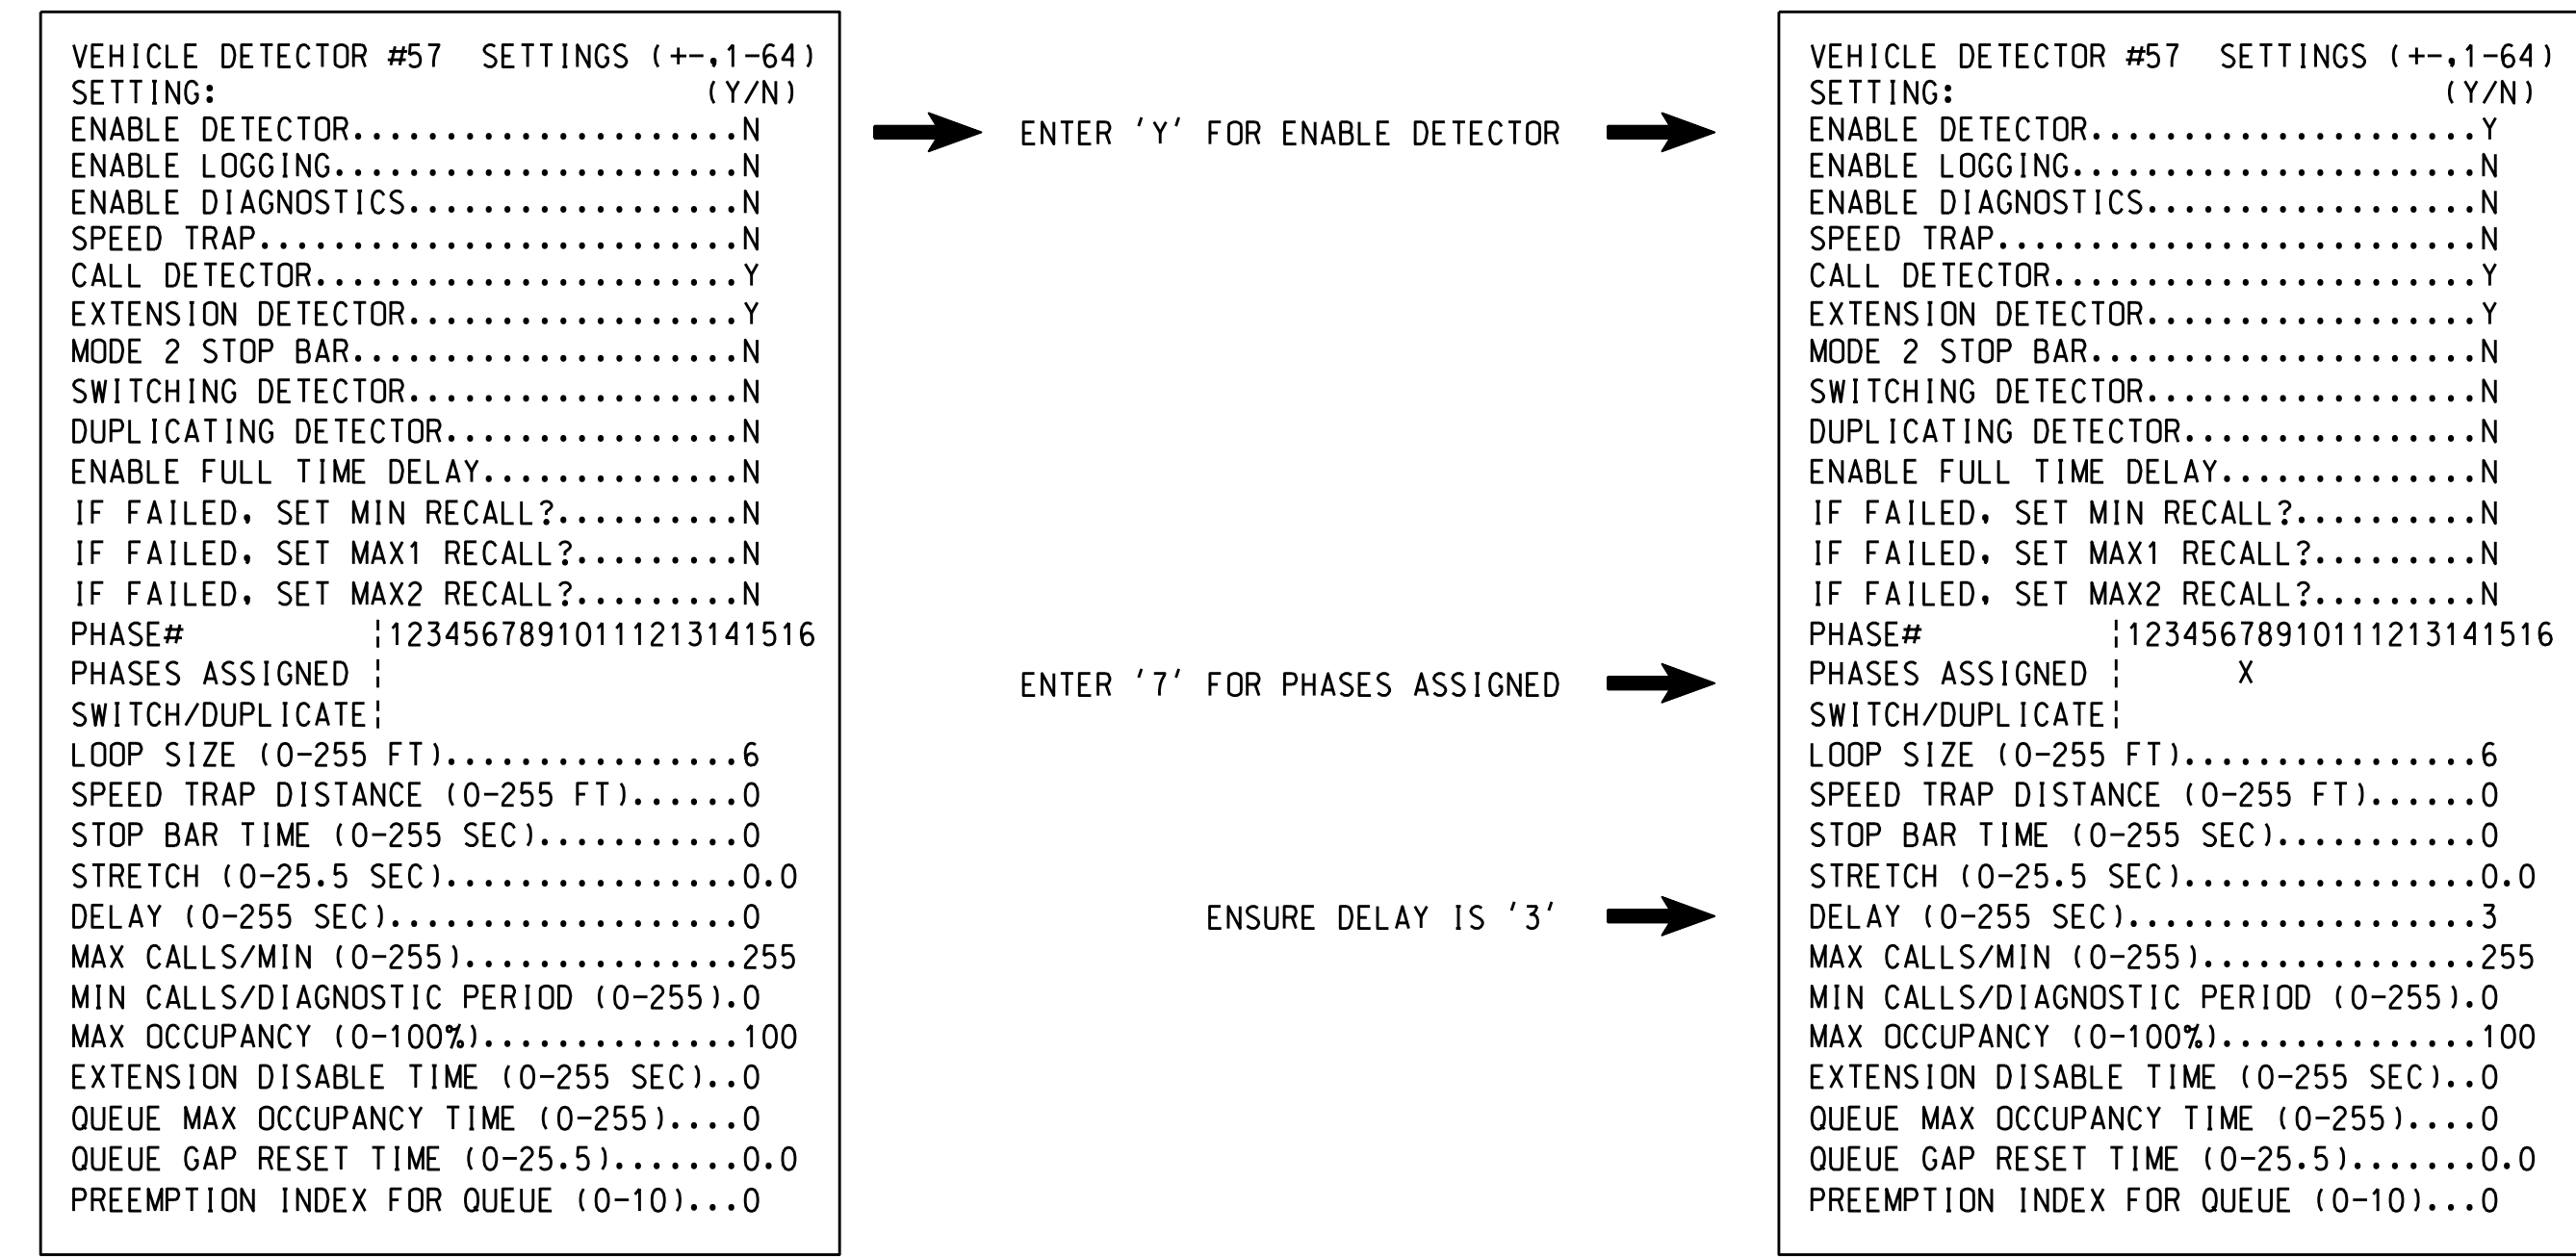

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

Electrical Detail - Sheet 4 of 5

US 70 (Statesville Blvd.) at SR 1722 (Majolica Road) and Ashbrook Road

Division 9 Rowan County Salisbury

PLAN DATE: September 2021 REVIEWED BY: T. Joyce

PREPARED BY: C. Strickland REVIEWED BY:

REVISIONS INIT. DATE

Designed by: D. Todd Joyce 9/30/2021

SIG. INVENTORY NO. 09-1068

750 N. Greenfield Pkwy, Garner, NC 27529

30-SEP-2021 15:23
W:\1668\em\1668\1668.dgn
C:\Users\TCK1\OneDrive\...

ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAPS PAGE 2: Modifies overlap parent phases for heads 11 and 71 to run protected turns only.

INPUTS PAGE 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.

Disables phase 4 call on loop 7A and reduces delay time for phase 7 call on loop 7A to 3 seconds.

FLASHER CIRCUIT MODIFICATION DETAIL


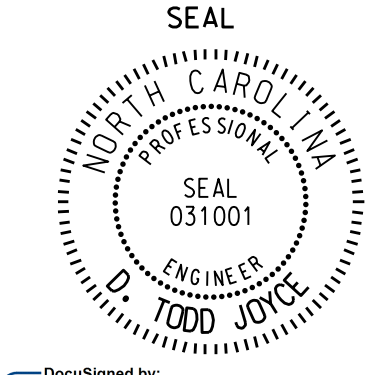
IN ORDER TO INSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

1. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
2. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-1068
DESIGNED: September 2021
SEALED: 9/30/2021
REVISED:

Electrical Detail - Sheet 5 of 5

<p>ELECTRICAL AND PROGRAMMING DETAILS FOR:</p> <p>Prepared In the Offices of:</p>  <p>750 N. Greenfield Pkwy, Garner, NC 27529</p>	<p>US 70 (Statesville Blvd.) at SR 1722 (Majolica Road) and Ashbrook Road</p> <p>Division 9 Rowan County Salisbury</p> <p>PLAN DATE: September 2021 REVIEWED BY: T. Joyce</p> <p>PREPARED BY: C. Strickland REVIEWED BY:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>REVISIONS</th> <th>INIT.</th> <th>DATE</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>	REVISIONS	INIT.	DATE							<p style="text-align: center;">DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED</p> <p style="text-align: center;">SEAL</p>  <p>DocuSigned by: <i>T. Todd Joyce</i> 9/30/2021</p> <p>SIG. INVENTORY NO. 09-1068</p>
REVISIONS	INIT.	DATE									