



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

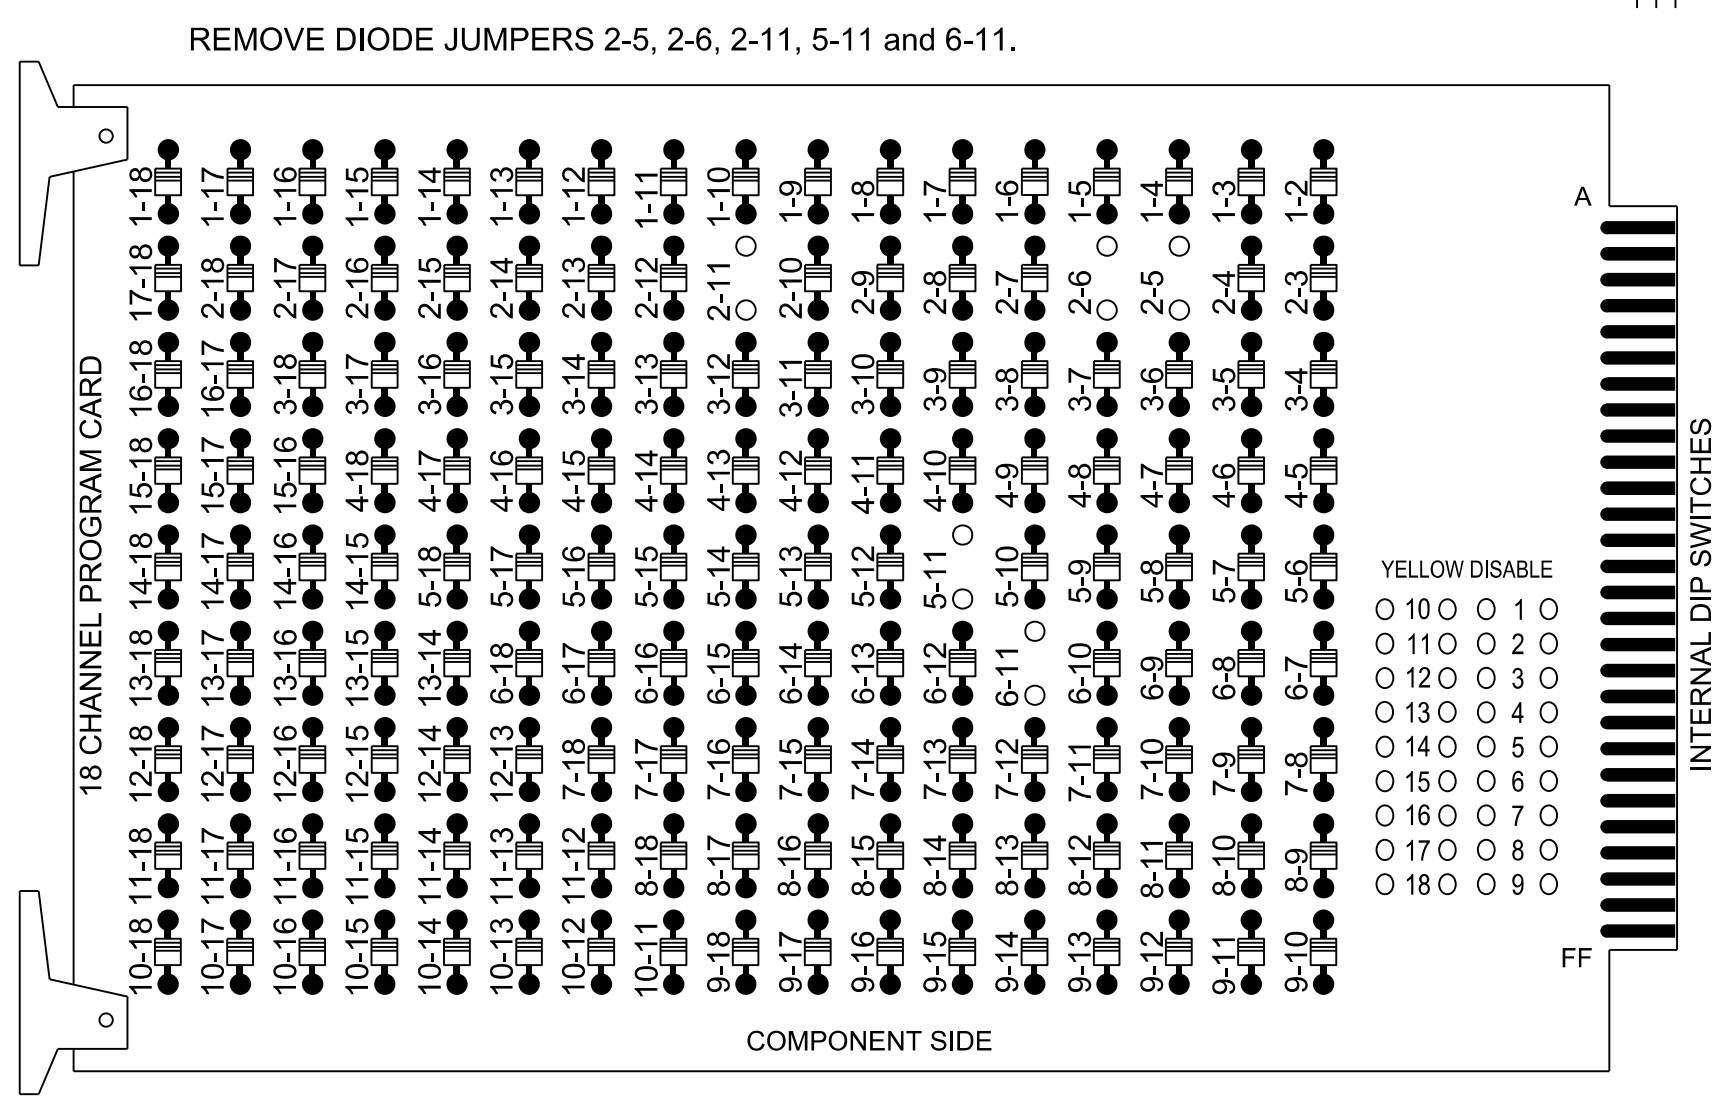

**NOTES:**

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that the Red Enable is active at all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

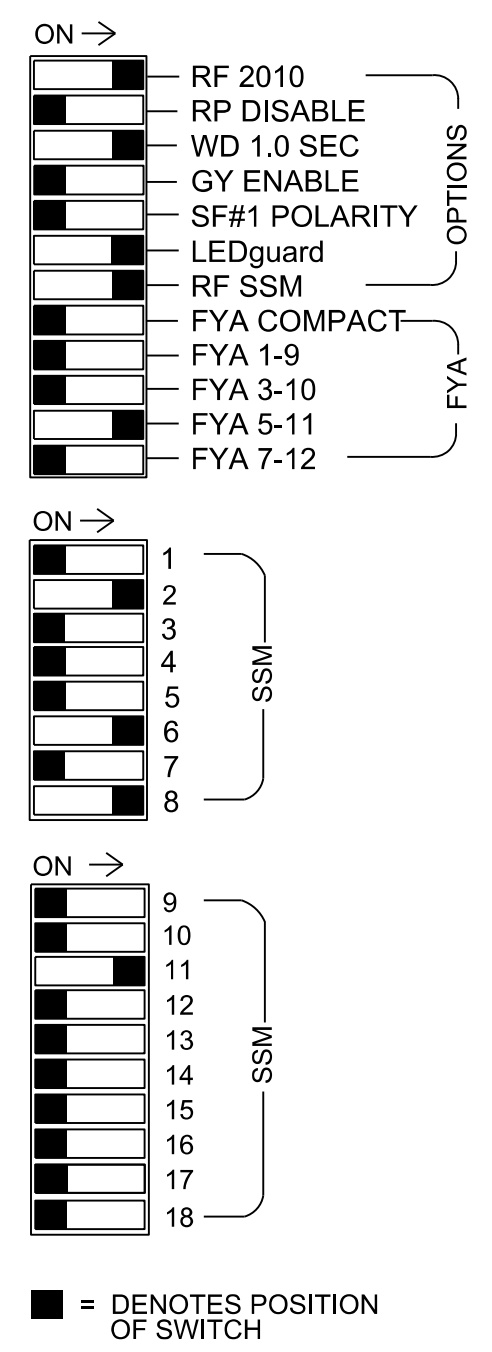

### NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
2. Program controller to start up in phase 2 Green No Walk and 6 Green No Walk.
3. If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.

### EQUIPMENT INFORMATION

Controller.....2070LX  
 Cabinet.....332 w/ Aux  
 Software.....Q-Free MAXTIME  
 Cabinet Mount.....BASE  
 Output File Positions.....18 With Aux. Output File  
 Load Switches Used.....S2, S7, S8, S11, AUX S4  
 Phases Used.....2, 5, 6, 8  
 Overlap "1".....NOT USED  
 Overlap "2".....NOT USED  
 Overlap "3".....\*  
 Overlap "4".....NOT USED

\*See overlap programming detail on this sheet

### SIGNAL HEAD HOOK-UP CHART


LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OL1	OL2	SPARE	OL3	OL4	SPARE
SIGNAL HEAD NO.	NU	21	22	NU	NU	NU	51	61	62	NU	NU	81,82	NU	NU	NU	51	NU	NU
RED		128	128					134	134			107						
YELLOW		129	129				*	135	135			108						
GREEN		130							136			109						
RED ARROW																		A114
YELLOW ARROW																		A115
FLASHING YELLOW ARROW																		A116
GREEN ARROW			130					133	136									

NU = Not Used

\* Denotes install load resistor. See load resistor installation detail this sheet.  
 \* See pictorial of head wiring in detail this sheet.

### FYA SIGNAL WIRING DETAIL


(wire signal head as shown)

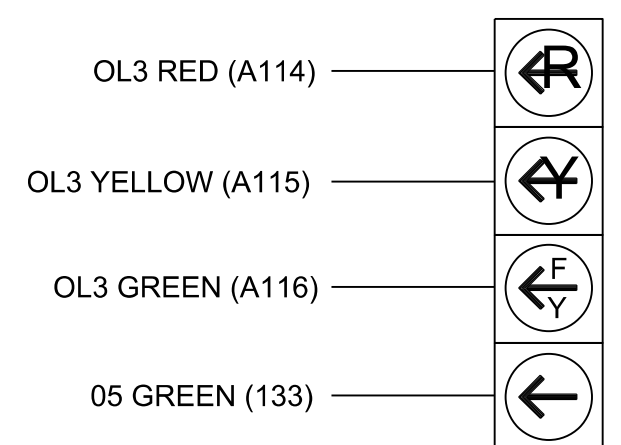

51

### INPUT FILE POSITION LAYOUT

(front view)

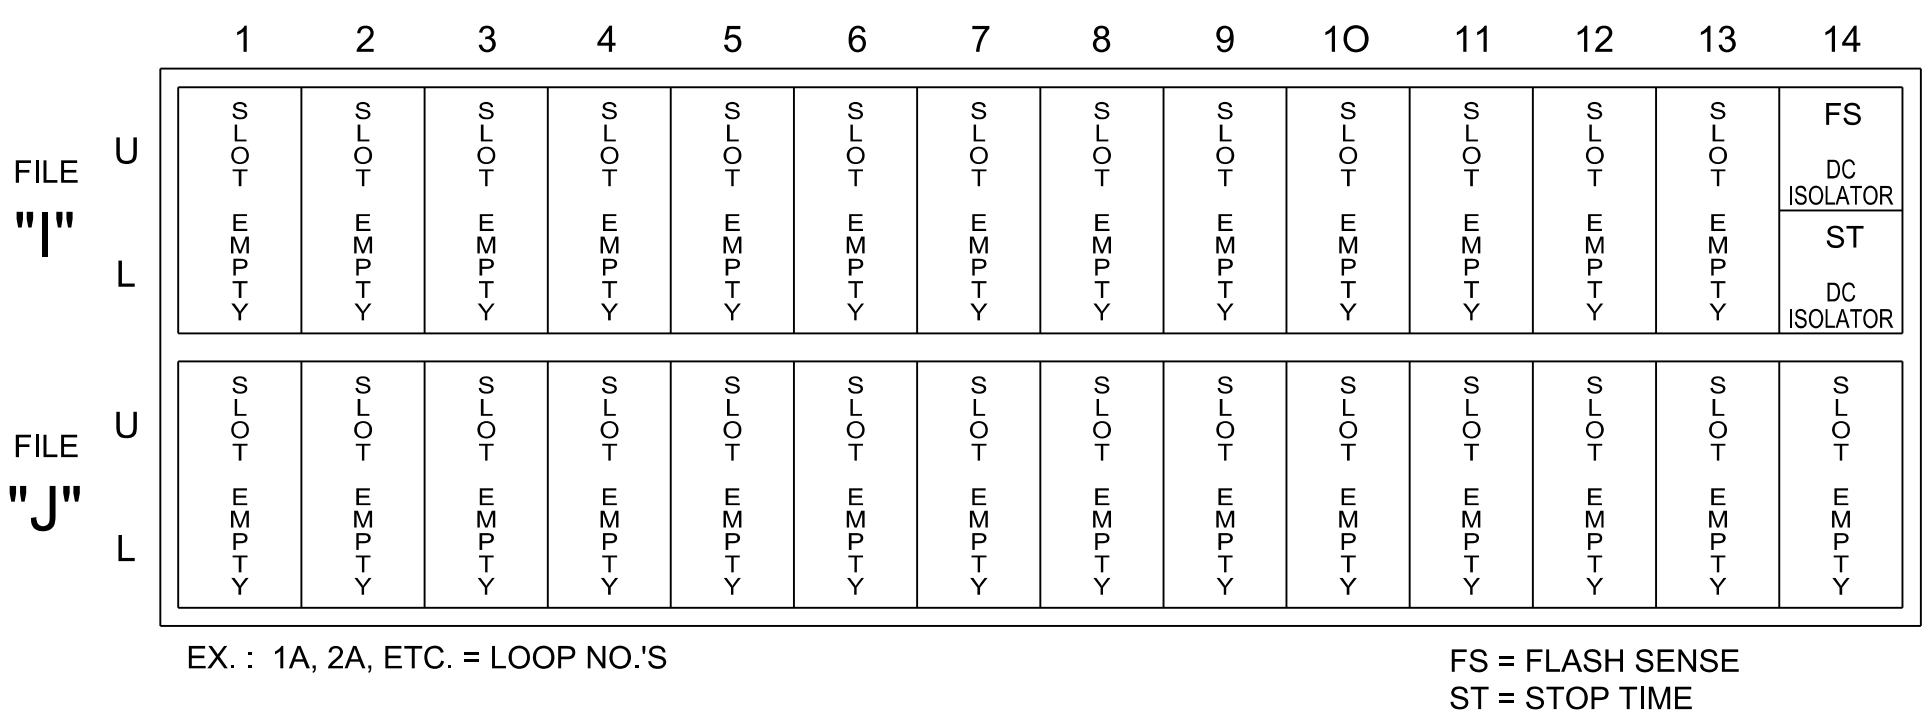


### SPECIAL DETECTOR NOTE

Install a video detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown)

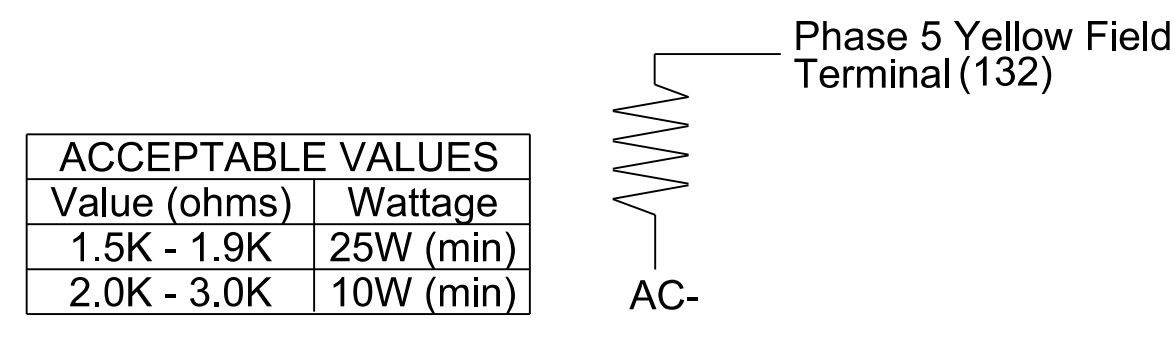

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 07-1948T3  
 DESIGNED: Jan 2023  
 SEALED: 3/10/2023  
 REVISED:



Temporary Design 3 (TMP Phase III)  
 Electrical Detail

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL

US 158/ NC 14 at US 29 Northbound Ramps

Division 7 Rockingham County Reidsville

PLAN DATE: January 2023 REVIEWED BY: H M Surti

PREPARED BY: A Ravigati REVIEWED BY:

REVISIONS INIT. DATE

DocuSigned by: Arunang M. Surti 3/10/2023

SIG. INVENTORY NO. 07-1948T3

3/10/2023 10:23:41 AM C:\Users\paw.bent\OneDrive\Documents\60581578-NCDDT-SMU\BR-0043\300-CAD\154910-CAD\70-NCDDT-TIP\Fig1\Signal\8051\gn\EL\ecfr\col Detail\_1\_2022\MAXTIME\_3-10-23\4071948T3\_sm.le\_2022XXXX.dgn