OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

Front Panel

Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface

Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	2	3	4
Туре	FYA 4 - Section	Off	FYA 4 - Section	Off
Included Phases	2		6	
Modifier Phases	1		5	
Modifier Overlaps	÷	<u>-</u>	4	4
Trail Green	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0

MAXTIME OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

Front Panel

Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface

Home >Controller >Overlap Configuration >Overlaps

In the table view of the web interface, right click on "Overlap" in the top left corner of the table. Copy the entire contents of Overlap Plan 1. Paste Overlap Plan 1 into Overlap Plan 2. Modify Overlap Plan 2 as shown below and save changes.

Overlap Plan 2

	1		1		1
Overlap	1	2	3	4	
Type	FYA 4 - Section	Off	FYA 4 - Section	Off	
Included Phases	-	<u>-</u>	-	÷	NOTICE INCLUDED PHASE
Modifier Phases	1		5		
Modifier Overlaps	-	-	-	-	
Trail Green	0	0	0	0	
Trail Yellow	0.0	0.0	0.0	0.0	
Trail Red	0.0	0.0	0.0	0.0	

Note: If Loops 1A and 5A are detected using the Vehicle Detectors shown in the charts below, use the steps shown below. If different Vehicle Detectors are used, substitute the appropriate Vehicle Detector numbers for the ones shown below.

VEHICLE DETECTOR PROGRAMMING DETAIL FOR ALTERNATE PHASING LOOPS 1A & 5A

Front Panel

Main Menu >Controller >Detector >Veh Det Plans

Web Interface

Home >Controller >Detector Configuration >Vehicle Detectors

In the table view of web interface right click on "Detector" in the top left corner of the table. Copy the entire contents of Detector Plan 1. Paste Detector Plan 1 into Detector Plan 2. Modify Detector Plan 2 as shown below and save changes.

PI:	an	2
-----	----	---

1A

Detector	Call Phase	Delay	
1	1	0.0	
29	0	0.0	

Detector	Call Phase	Delay
15	5	0.0
31	0	0.0

<u>Sig.7.2</u> U-5757

PROJECT REFERENCE NO. SHEET NO.

MAXTIME ALTERNATE PHASING PATTERN PROGRAMMING DETAIL

Front Panel

Main Menu >Controller >Coordination >Patterns

Web Interface

Home >Controller >Coordination >Patterns

Pattern Parameters

Pattern	Veh Det Plan	Overlap Plan	
*	2	2	

*The Pattern number(s) are to be determined by the Division and/or City Traffic Engineer.

MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Overlap Plan 2 and Detector Plan 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

PHASING	OVERLAP PLAN	VEH DET PLAN
ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING	1	1
ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING	2	2

ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN OVERLAP PLAN 2 AND VEHICLE DETECTOR PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAP PLAN 2: Modifies overlap included phases

for heads 11 and 51 to run protected

turns only.


VEH DET PLAN 2: Disables phase 6 call on loop 1A

and reduces delay time for phase 1 call on loop 1A to 0 seconds.

Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-0402T2 DESIGNED: May 2024 SEALED: 05-09-2024 REVISED: N/A

1 Glenwood Avenue Raleigh, NC 27603 Tel:919.789.9977 750 N. Greenfield Pkwy, Garner, NC 27529 Fax:919.789.9591 License: F-0453

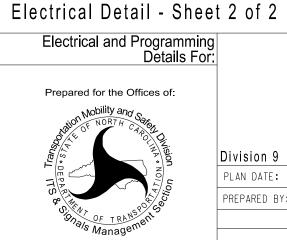

NC 8 (Winston Road) 9th Street

Davidson County May 2024 REVIEWED BY:

PREPARED BY: J.T. Rowe REVIEWED BY: G.G. Murr, Jr

REVISIONS

Lexington

SIG. INVENTORY NO. 09-0402T2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED