



18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

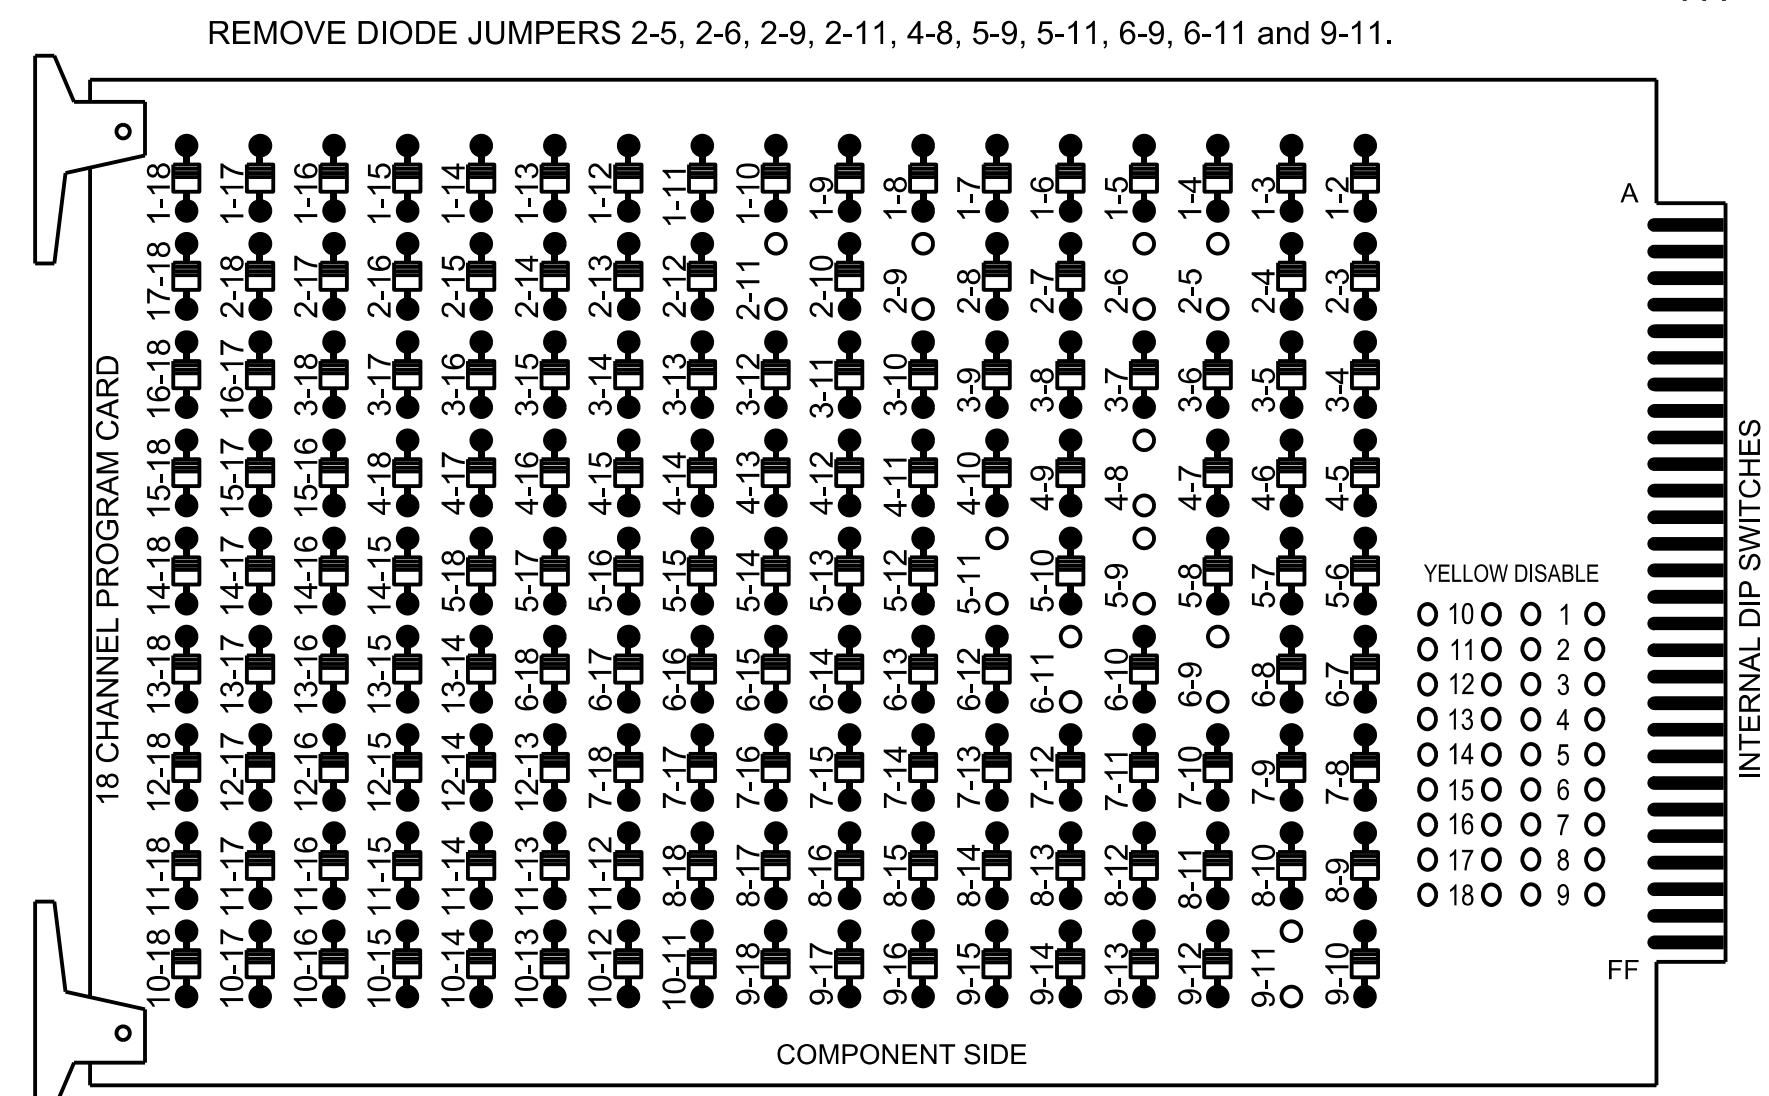

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that the Red Enable is active at all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

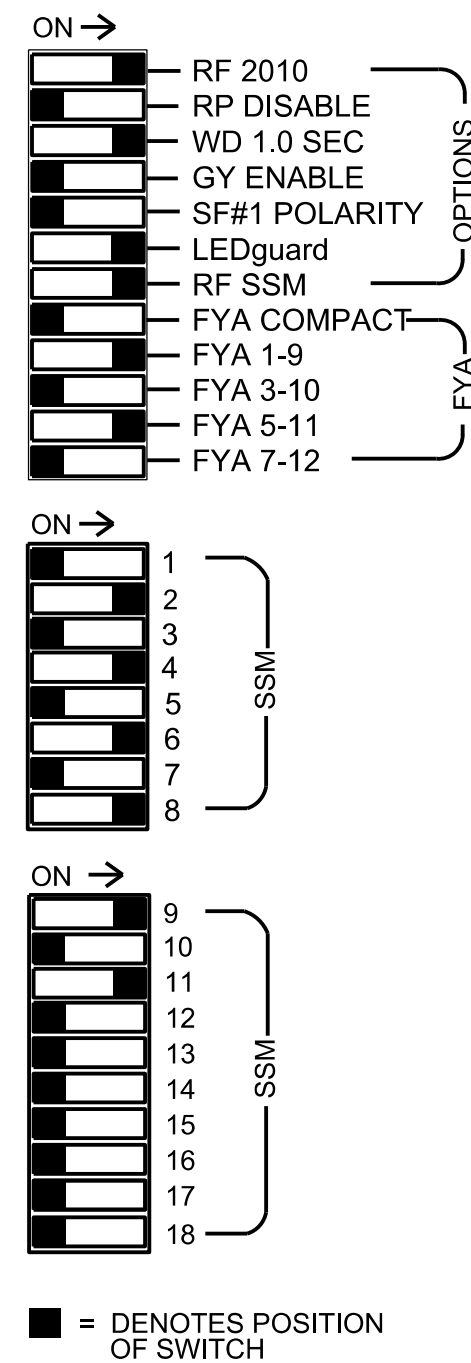

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
- Program phases 4 and 8 for Dual Entry.
- Program controller to start up in phase 2 Green No Walk and 6 Green No Walk.
- If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.

EQUIPMENT INFORMATION

Controller.....2070LX
 Cabinet.....332 w/ Aux
 Software.....Q-Free MAXTIME
 Cabinet Mount.....Base
 Output File Positions.....18 With Aux. Output File
 Load Switches Used.....S2, S5, S7, S8, S11, AUX S1, AUX S4
 Phases Used.....2, 4, 5, 6, 8
 Overlap "1".....*
 Overlap "2".....NOT USED
 Overlap "3".....*
 Overlap "4".....NOT USED

*See overlap programming detail on sheet 2


SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OL1	OL2	SPARE	OL3	OL4	SPARE
SIGNAL HEAD NO.	NU	21,22 23	NU	NU	41,42 43	NU	51	61,62	NU	NU	81,82	NU	64	NU	NU	51	NU	NU
RED		128			101			134			107							
YELLOW		129			102		*	135			108							
GREEN		130			103			136			109							
RED ARROW													A121					A114
YELLOW ARROW													A122					A115
FLASHING YELLOW ARROW													A123					A116
GREEN ARROW								133										

NU = Not Used
 * Denotes install load resistor. See load resistor installation detail this sheet.
 * See pictorial of head wiring in detail this sheet.


FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

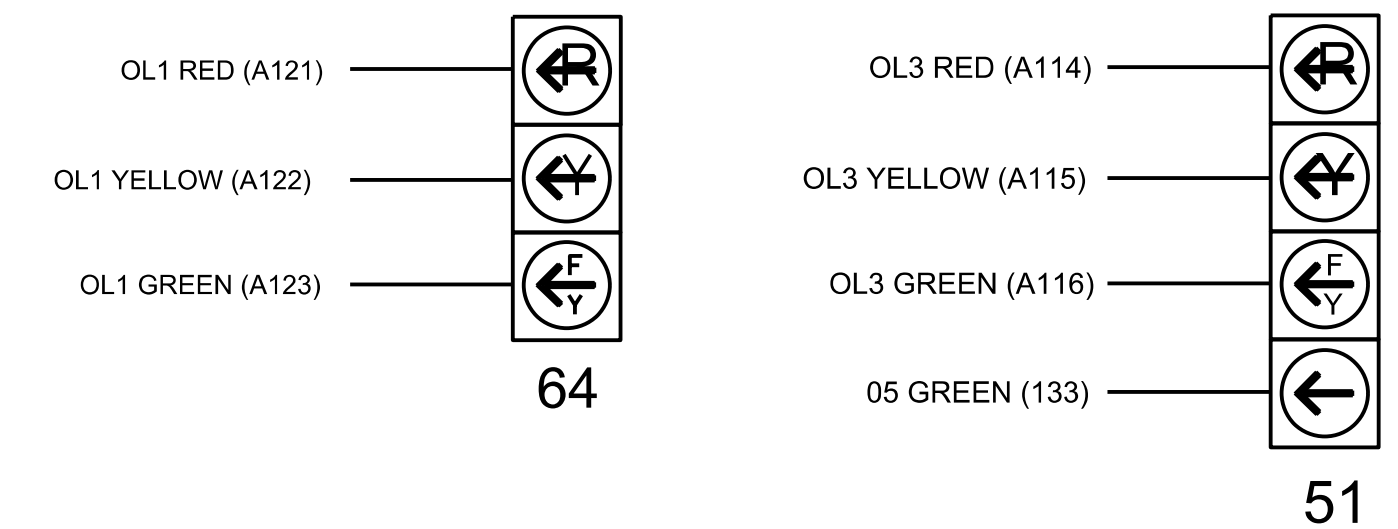

INPUT FILE POSITION LAYOUT

(front view)

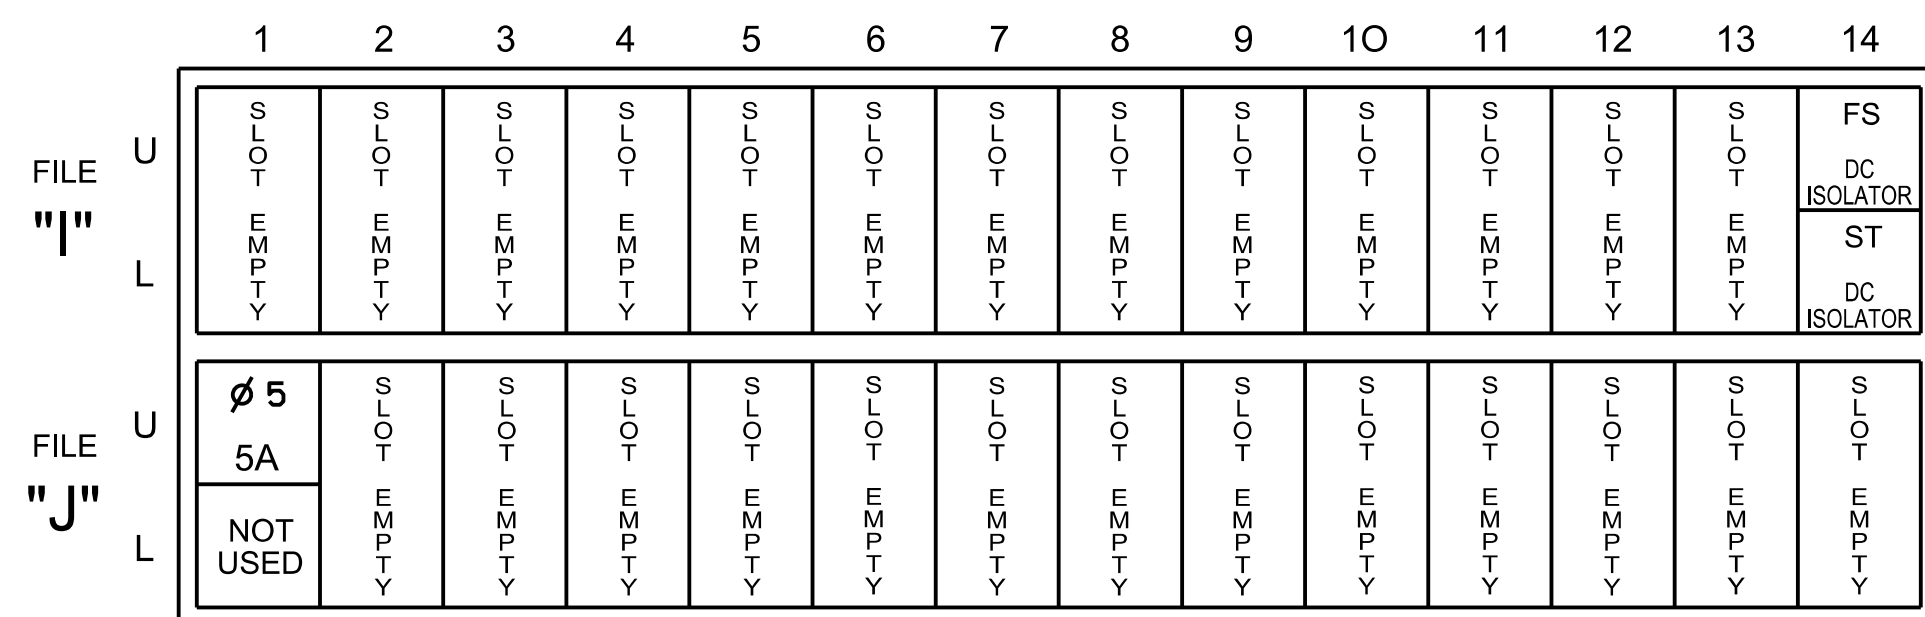


EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
 ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT POINT	DETECTOR NO.	CALL PHASE	DELAY TIME	EXTEND TIME	EXTEND	ADDED INITIAL	CALL	DELAY DURING GREEN
5A	TB3-1,2	J1U	55	17	15 *	5	15.0		X		X	
				-	31 *	2			X		X	

* For the detectors to work as shown on the signal design plan see the Vehicle Detector Setup Programming Detail for Alternate phasing on sheet 2 of 3

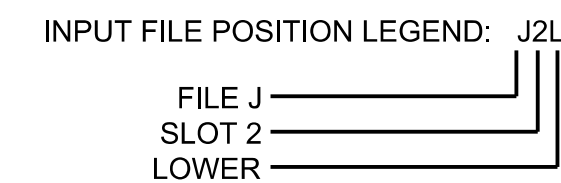


SPECIAL DETECTOR NOTES

- Install a video detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer -approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.
- For loop 5A, detector card placement is typical for a NCDOT installation. Detectors associated with these slots are compatible with the Vehicle Detector Programming Detail located on sheet 2 of this electrical detail.

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

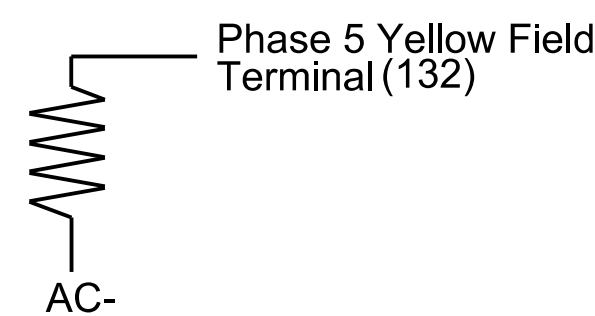

Electrical Detail - Sheet 1 of 3
 Temporary Design 2 (TMP Phase I)

M M
MOTT MACDONALD
 MOTT MACDONALD I & E, LLC
 930 Main Campus Drive
 Suite 200
 RALEIGH, NC 27606
 License No. F-0669

Prepared for:

 750 N. Greenfield Pkwy, Garner, NC 27529

NC 73-211/NC 211
 at
 NC 73/SR 1133 (Mode Rd)
 Division 8 Moore County West End
 PLAN DATE: June 2024 REVIEWED BY: R. Mullinax
 PREPARED BY: LD Stouchko REVIEWED BY:
 REVISIONS: INIT. DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL

 LEVI D. STOUCHKO
 PROFESSIONAL ENGINEER
 STATE OF NORTH CAROLINA
 License No. 034437