


18 CHANNEL IP CONFLICT MONITOR

PROGRAMMING DETAIL

(remove jumpers and set switches as shown)





REMOVE DIODE JUMPERS 1-5, 1-6, 1-9, 1-11, 1-15, 1-17, 2-5, 2-6, 2-13, 2-15, 2-17, 2-18, 3-7, 3-8, 3-9, 3-10, 3-12, 3-16, 4-7, 4-8, 4-9, 4-10, 4-12, 4-14, 4-16, 5-9, 5-11, 5-13, 5-18, 6-9, 6-11, 6-13, 6-15, 6-17, 6-18, 7-10, 7-12, 7-14, 8-9, 8-10, 8-12, 8-14, 8-16, 9-10, 9-11, 9-12, 9-14, 9-15, 9-16, 9-17, 10-12, 10-14, 10-16, 11-15, 11-17, 12-14, 12-16, 13-15, 13-17, 13-18, 14-16, 15-17, 15-18 and 17-18.

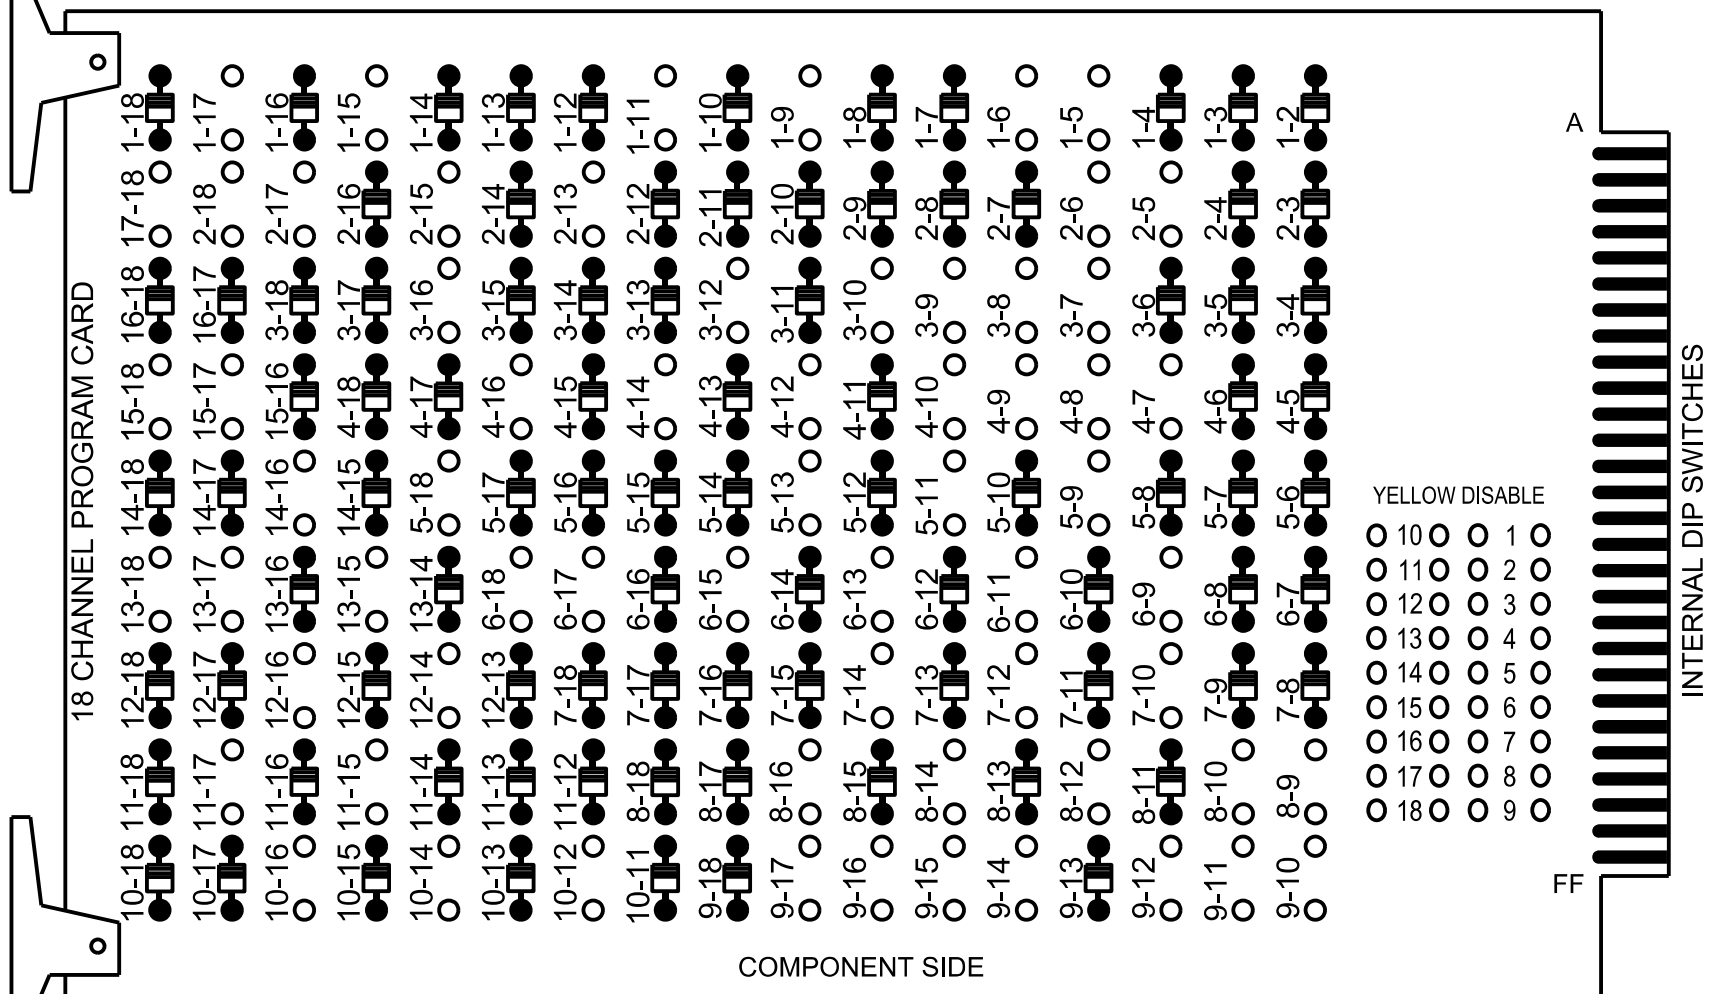

REMOVE JUMPERS AS SHOWN

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that the Red Enable is active at all times during normal operation.
- Integrate monitor with Ethernet network in cabinet.

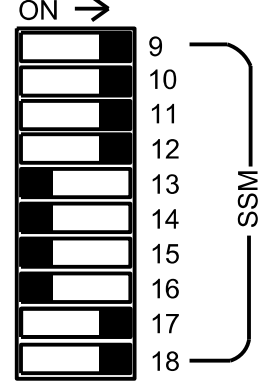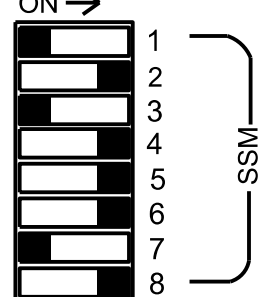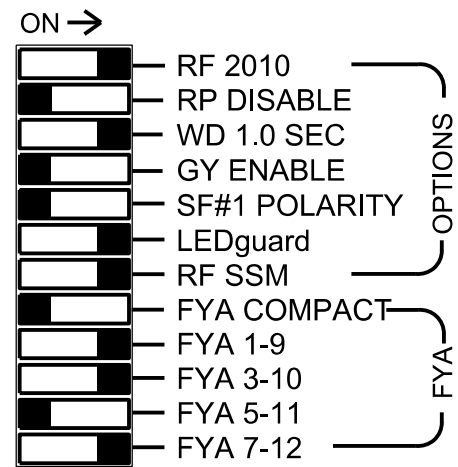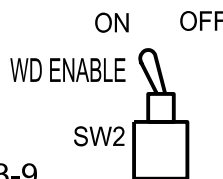

■ = DENOTES POSITION OF SWITCH

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
- Program phases 4 and 8 for Dual Entry.
- Program controller to start up in phase 2 Green No Walk and 6 Green No Walk.
- If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.
- The cabinet and controller are part of the Fayetteville Signal System.

EQUIPMENT INFORMATION

Controller.....2070LX
Cabinet.....332 w/ Aux
Software.....Q-Free MAXTIME
Cabinet Mount.....Base
Output File Positions.....18 With Aux. Output File
Load Switches Used.....S1,S2,S3,S4,S5,S6,S7,S8,S9,
S10,S11,S12,AUX S1,AUX S2,
AUX S3,AUX S4,AUX S5,AUX S6
Phases Used.....1, 2, 2PED, 3, 4, 4PED, 5, 6, 6PED,
7, 8, 8PED
Overlap "1".....*
Overlap "2".....*
Overlap "3".....*
Overlap "4".....*
Overlap "5".....*
Overlap "6".....*

*See overlap programming detail on sheet 2

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OL1	OL2	OL5	OL3	OL4	OL6
SIGNAL HEAD NO.	83,84	21, 22,24	P21, P22	31	41, 42,43	P41, P42	51	61, 62,64	P61, P62	71	81, 82,85	P81, P82	83,84	31	63	11;12	71	23
RED		128			101			134			107		A121		A111			A104
YELLOW	*	129		*	102			135		*	108							
GREEN		130			103			136			109							
RED ARROW							131						A124		A114	A101		
YELLOW ARROW							132						A122	A125	A112	A115	A102	A105
FLASHING YELLOW ARROW													A123	A126	A113		A103	A106
GREEN ARROW	127			118			133			124						A116		
Hand icon			113			104			119			110						
Walking person icon			115			106			121			112						

NU = Not Used

* Denotes install load resistor. See load resistor installation detail this sheet.

*See pictorial of head wiring in detail on sheet 2.

FLASHER CIRCUIT MODIFICATION DETAIL


In order to ensure that signals flash concurrently on the same approach, make the following flasher circuit changes:

- On rear of PDA - remove wire from Term. T2-4 and terminate on T2-2.
- On rear of PDA - remove wire from Term. T2-5 and terminate on T2-3.
- Remove flasher unit 2.

The changes listed above ties all phases and overlaps to flasher unit 1.

INPUT FILE POSITION LAYOUT

(front view)

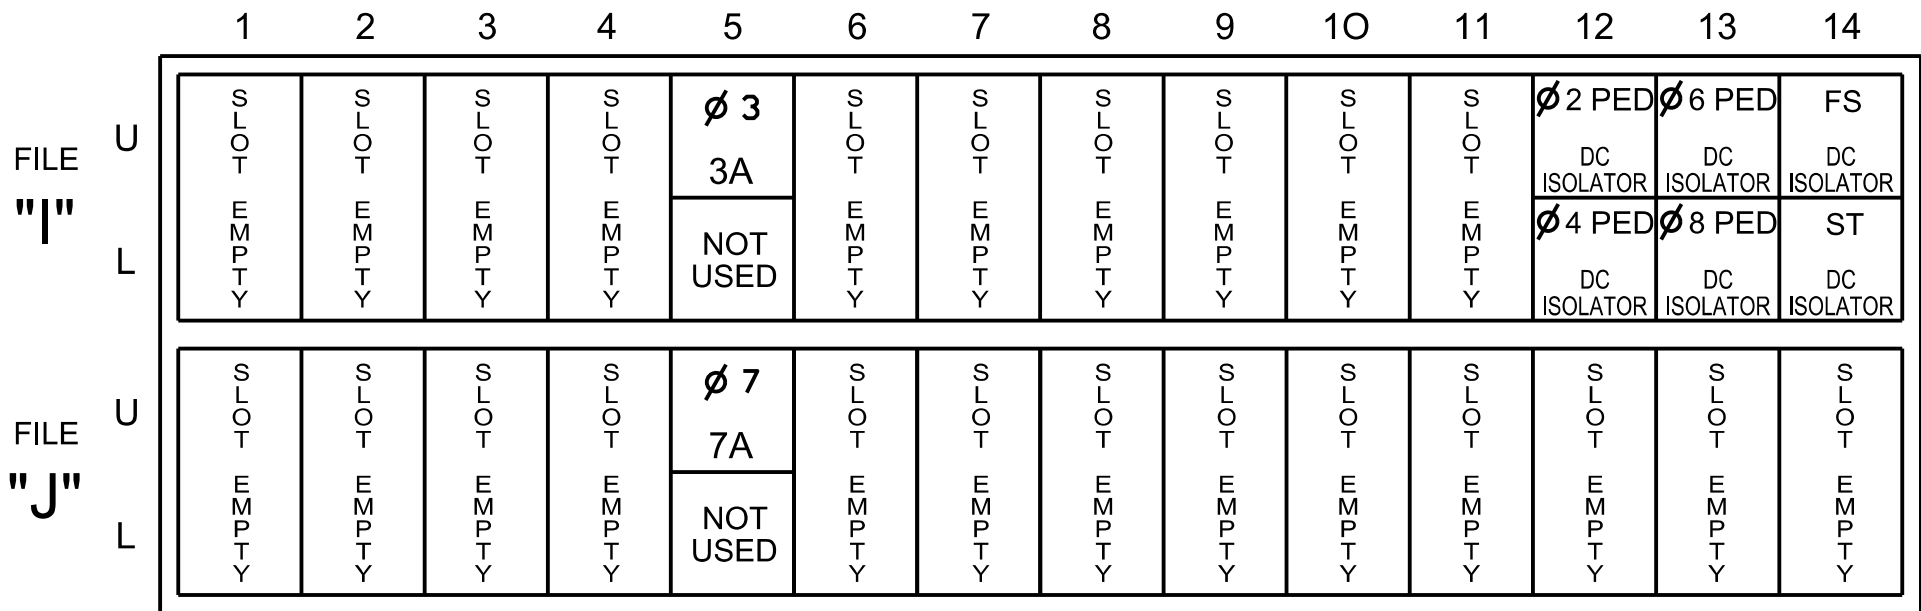

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT POINT	DETECTOR NO.	CALL PHASE	DELAY TIME	EXTEND TIME	EXTEND	ADDED INITIAL	CALL	DELAY DURING GREEN
3A	TB4-5,6	I5U	58	20	7★	3	15,0	---	X	-	X	-
				-	30★	8	3,0	---	X	-	X	-
7A	TB5-5,6	J5U	57	19	21★	7	15,0	---	X	-	X	-
				-	32★	4	3,0	---	X	-	X	-
PED PUSH BUTTONS												
P21;P22	TB8-4,6	I12U	67	33	2	PED 2	NOTE: INSTALL DC ISOLATORS IN INPUT FILE SLOTS I12 AND I13.					
P41;P42	TB8-5,6	I12L	69	35	4	PED 4						
P61;P62	TB8-7,9	I13U	68	34	6	PED 6						
P81;P82	TB8-8,9	I13L	70	36	8	PED 8						


★ See detector programming detail for alternate phasing on sheet 3.

INPUT FILE POSITION LEGEND: J2L



LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

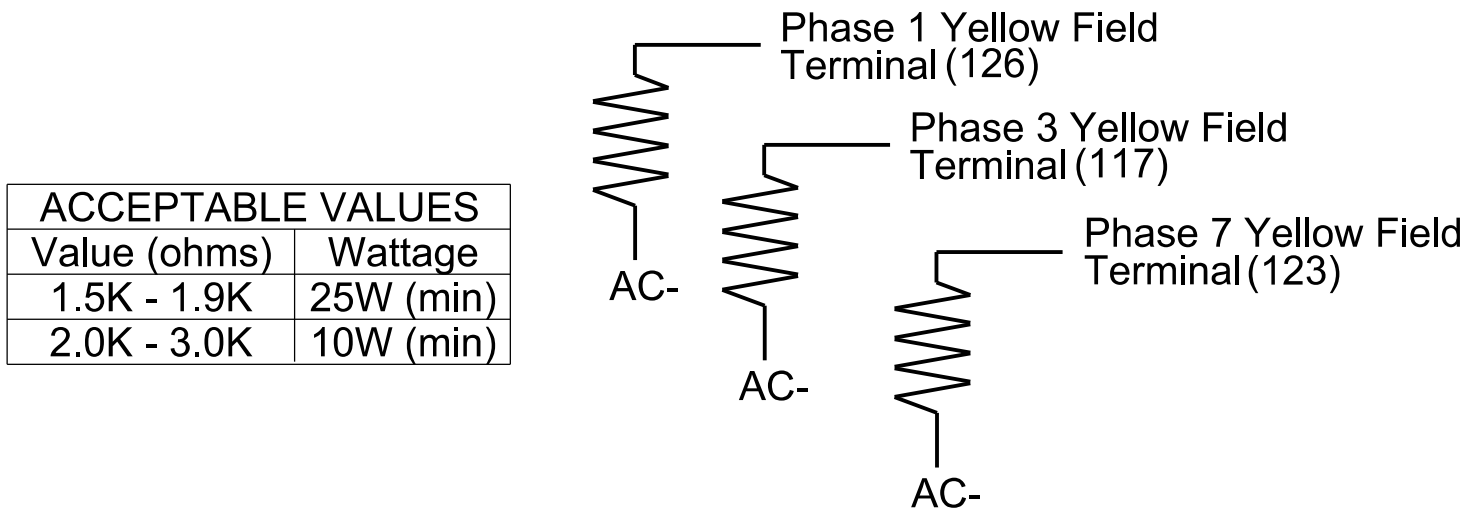

ACCEPTABLE VALUES	
Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

SPECIAL DETECTOR NOTE



Install a multi-zone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer -approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

For Detection Zone 3A and 7A, the equipment placement is typical for a NCDOT installation.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 06-1131
DESIGNED: June 2025
SEALED: 6/12/2025
REVISED: _____

RS&H
NC FIRM LICENSE No. F-0493
8521 SIX FORKS ROAD, SUITE 400
RALEIGH, NC 27615
(919) 926-4100

Signal Upgrade - Final
Electrical Detail - Sheet 1 of 3

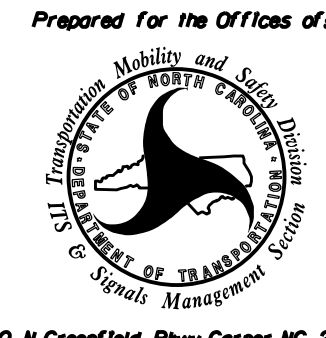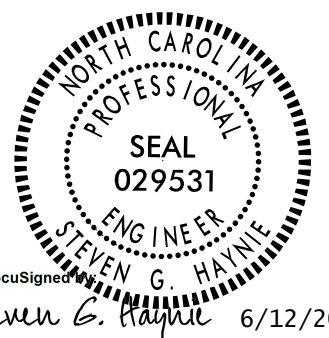ELECTRICAL AND PROGRAMMING DETAILS FOR:		SR 1102 (Gillis Hill Road) at SR 1112 (Stoney Point Road)		DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED	
Prepared for the Offices of:  750 N. Greenfield Pkwy, Garner, NC 27529		Division 6 Cumberland County Fayetteville PLAN DATE: June 2025 REVIEWED BY: O. Drobný PREPARED BY: S.G. Haynie REVIEWED BY: _____		 Steven G. Haynie 6/12/2025	
REVISIONS		INIT.		DATE	
SIGNATURE		DATE		SIG. INVENTORY NO.	
				06-1131	